

## Technical Support

### How to initialize AC2100 / AC2500 V3.0

- Open the case
- Put Jumper (2mm) to jumper pin.



- Connect the power to make short circuit
- After all, press the [F3] to enter the menu, then you can change admin setting.