

# EMAIL OUT (HQ-SERIES)

## STEP 1

- Enter the EMAIL ADDRESS for **RECEIVER** in “**USER1, USER2, & USER3**”
- Enter the EMAIL ADDRESS for **SENDER (DVR)** in “**SENDER ADDRESS**”
- Press “**SEND TEST MAIL**” to test if all emails are working properly.

The screenshot shows the 'E-mail Registration' screen in the EVENT menu. The screen has a blue background and a red alarm bell icon at the top. The title 'EVENT' is in the top left corner. The screen is titled 'E-mail Registration' and contains a table with the following data:

USER1	USER1@UNIXCCTV.COM
USER2	USER2@UNIXCCTV.COM
USER3	USER3@UNIXCCTV.COM
Sender Address	DVR@UNIXCCTV.COM
Report Period	Immediately

Below the table is a button labeled 'Send Test Mail' which is circled in red.

## STEP 2

- Turn ON the **EVENTS** that you want to receive by **EMAIL**.

**MENU → EVENT → E-MAIL OUT**

The screenshot shows the 'E-mail Out' screen in the EVENT menu. The screen has a blue background and a red alarm bell icon at the top. The title 'EVENT' is in the top left corner. The screen is titled 'E-mail Out' and contains a table with the following data:

Video Loss	ON
Alarm	ON
Motion	OFF
Power Loss	ON
Smart	OFF