


WHAT YOU NEED KNOW BEFORE SETTING UP THE PTZ

- PROTOCOL or MODEL NAME (UNIX PTZ DEFAULT = PELCO-D)
- ADDRESS (UNIX PTZ DEFAULT = 1)
- BAUDRATE (UNIX PTZ DEFAULT = 2400)

FIND YOUR PTZ INFORMATION

When you POWER ON the PTZ you will see the following information on the screen for about 10 sec.

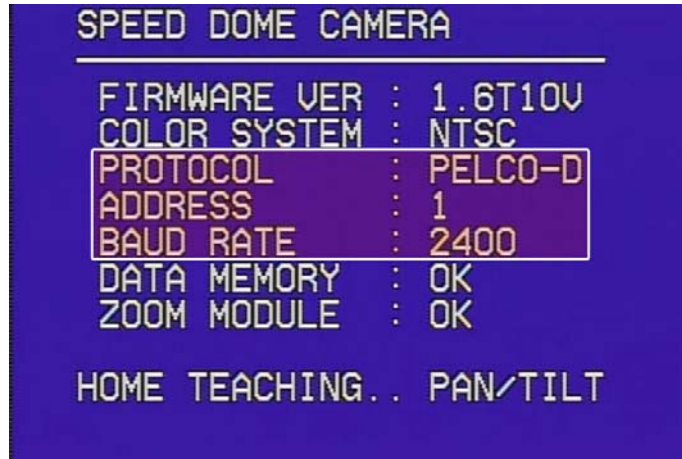

CHANGE PTZ PROTOCOL, BAUDRATE, AND ID#



$$N1 + N2 + N3 + N4 + N5 + N6 + N7 + N8 = ID\#$$

CHANGE ID# "ADDRESS (ID)"

ID4 = 0+0+4+0+0+0+0+0=4 → PIN = Down + Down + **Up** + Down + Down + Down + Down + Down

ID10 = 0+2+0+8+0+0+0+0=10 → PIN = Down + **Up** + Down + **Up** + Down + Down + Down + Down

CHANGE PROTOCOL (Only use PIN 1 & 2)

PELCO-D, 9600 = UP (PIN1) + DOWN (PIN2)

PELCO-D, 2400 = DOWN (PIN1) + DOWN (PIN2)