


IM-V22 IP IR Dome Camera

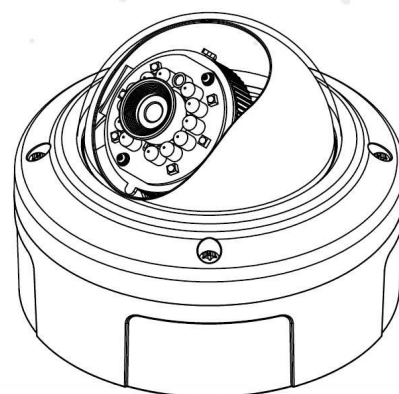

user manual

TABLE OF CONTENT

INTRODUCTION	5
FEATURES	5
PACKAGE CONTENTS	6
SYSTEM REQUIREMENTS	7
VIEW OF IM-V22 IP IR DOME CAMERA	8
Outer View	8
Inner View	8
MAKING CONNECTIONS	9
POWER	10
LAN	11
EXTERNAL I/O	12
HARDWARE INSTALLATION	13
MOUNTING	13
FACTORY RESET	16
GETTING STARTED	17
SOFTWARE INSTALLATION	18
READY TO USE	20
ACCESS TO THE IP CAMERA	20
VIEW OF CAMERA MAIN PAGE	22
LIVE VIEW	22
PRIME Logo	22
Product Name	23
Mode	23
Language	24
Video Format	25
View Size	26
Streaming	27
Color	28
Brightness	29
Contrast	29
Saturation	29
Set to default	29
Alert	30
Alert Message	31
Alert Message Text	31
Disable	32
Alert Snapshot	32
Clear	32
PTZ Control Panel	33
Camera Direction	34
PTZ Device	34
Camera Speed	35
Zoom	35
Focus	35
Aux	35
Preset	35
Tour	37
Shortcuts	38
+ZOOM IN	39
-ZOOM OUT	40
Original Size	40

Full Screen.....	41
Jitter Time.....	42
Record.....	43
Snapshot.....	44
Version.....	44
Shortcut Bar	45
Microphone	45
Buzzer	45
Path	46
Snapshot.....	48
Record.....	48
Shortcut Bar Message.....	49
SETTING USER PREFERENCES.....	50
Basic Setting.....	51
System	51
System Setting.....	51
System Log	52
Video/Image.....	53
Video.....	53
PreProc/Overlay	54
Sensor	56
Audio	58
User	59
PTZ.....	60
Network.....	63
Network Setting	63
Services	64
Stream Setting.....	65
PPPoE Setting (Dial-up Networking Setting).....	66
DDNS (Dynamic Domain Name Server).....	68
UPnP (Universal Plug and Play)	69
SMTP (Mail Server Setting).....	72
Samba	73
Notification	74
Multicast	75
Date/Time	76
IP Filter	77
Application Setting.....	78
Event.....	78
Event	79
Trigger	82
Event Servers (Upload Server).....	84
Recording List	86
Motion Detection.....	87
Blind Detection	88
Privacy Mask.....	89
Firmware upgrade	91
Factory Default	94
Reboot	97
APPENDIX	98
CHANGE THE INTERNET EXPLORER SETTINGS	98
SET UP THE ROUTER SETTING WITH IP CAMERA	99
DDNS APPLICATION.....	100
How to apply and setup the DDNS service?	100
How to check if the DDNS service is successful?.....	105
MOBILE APPLICATION.....	106
Symbain System	109
iPhone System	112
SUPPORT THE CELLULAR / MOBILE PHONE LIST	117
MULTICAST APPLICATION.....	118
H264 (Main)	120

<i>H264 (Sub)</i>	121
<i>Motion JPEG</i>	122
TROUBLESHOOTING AND FAQs.....	125

Introduction

IM-V22 is a H.264 IP IR Dome Camera. Unlike traditional CCTV, IM-V22 is built in the Web Server and Camera to provide users with a mechanism for the security or remote monitoring applications, and it can deliver dual video streams simultaneously (Motion JPEG and H.264), allowing for optimization in image quality and bandwidth.

It offers the many application functions such as two-way audio, DDNS, samba, FTP, Mail, Multicast, motion detection, privacy mask, event management and multi-level passwords for meeting user variety level of security needs.

It is easy to install, convenient to operate, and provide the infrared LED application for Night environment.

Features


IM-V22 can operate smoothly without the need to install additional software or hardware. All you need is a PC that is equipped with IE browser (6.0 or above) and connect the Internet Camera to the network to monitor the pre-set places remotely. IM-V22 can provide you with protection of your personal, home, and property security.

- 1/3" High Resolution CMOS sensor.
- Resolution: **H.264** 1600x1200, 640x480/320x240/160x128
1280x720, 640x352/320x176/192x112
MJPEG 1600x1200, 640x480/320x240
1280x720, 640x352/320x176
- Dual Video Stream Simultaneously.
- Dual Coding of the MJPEG Dual Video Compression Mode.
- Mobile Phone View Support (WM6 / Symbian / Android / iPhone).
- 2 Way Audio (external MIC IN x 1, LINE OUT x 1).
- Built-in smart detection (Motion) to monitor abnormal situations automatically and transmit real-time trigger command actively as preset.
- Built-in intelligent dynamic video detection for automatic monitoring of abnormal situations and sending a real-time trigger signal according to the active settings.
- Dynamic IP domain name support for use of the product at locations where fixed IP is not available.
- Access setting by level to ensure security and protection of life and properties.
- Elegant style suitable for outdoor environment.


Package Contents

After unpacking, check that if all the following items have been included:


■ IM-V22 IP IR Dome Camera

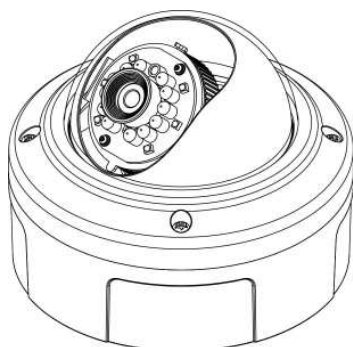


■ Installation CD (Manual & Software)

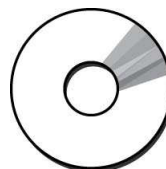

■ Quick Guide

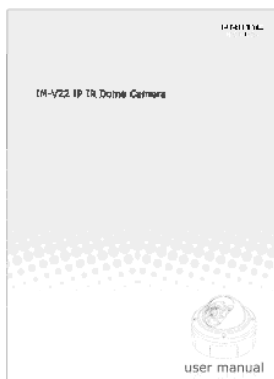


■ Installation Guide

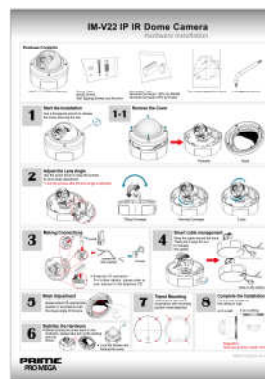


■ A hexagonal wrench




■ Screw Pack

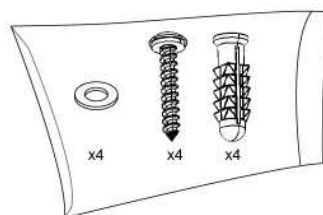

■ Connector Pack

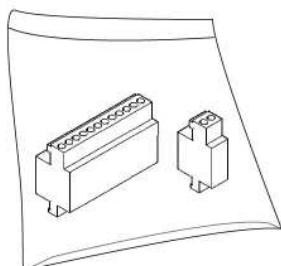

■ The mounting position sheet

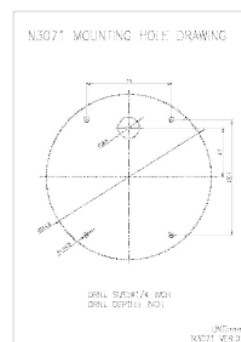

Contact your dealer immediately if any items are missing, appear damaged, or if the unit does not work.

System Requirements

Before installing IM-V22 IP IR Dome Camera, please make sure your system has the following recommended minimum hardware requirements.

Internet Environment


Ethernet 10/100M Ethernet

Monitor System Requirements


OS support	Microsoft Windows 2000, XP , Vista, Windows 7
Browser support	Internet Explorer 6.x or later, Chrome, Firefox, Safari
Hardware	CPU: Pentium 4 2.4 GHz or later
	Memory: 256 MB (512 MB recommended)
	VGA card resolution: 800 x 600 or higher

View of IM-V22 IP IR Dome Camera

Outer View

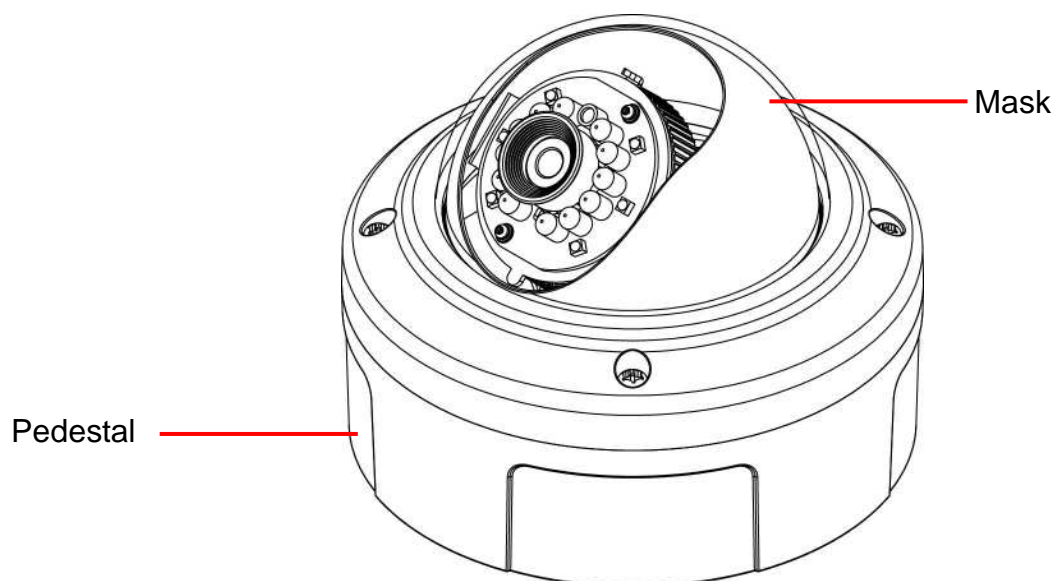


Inner View

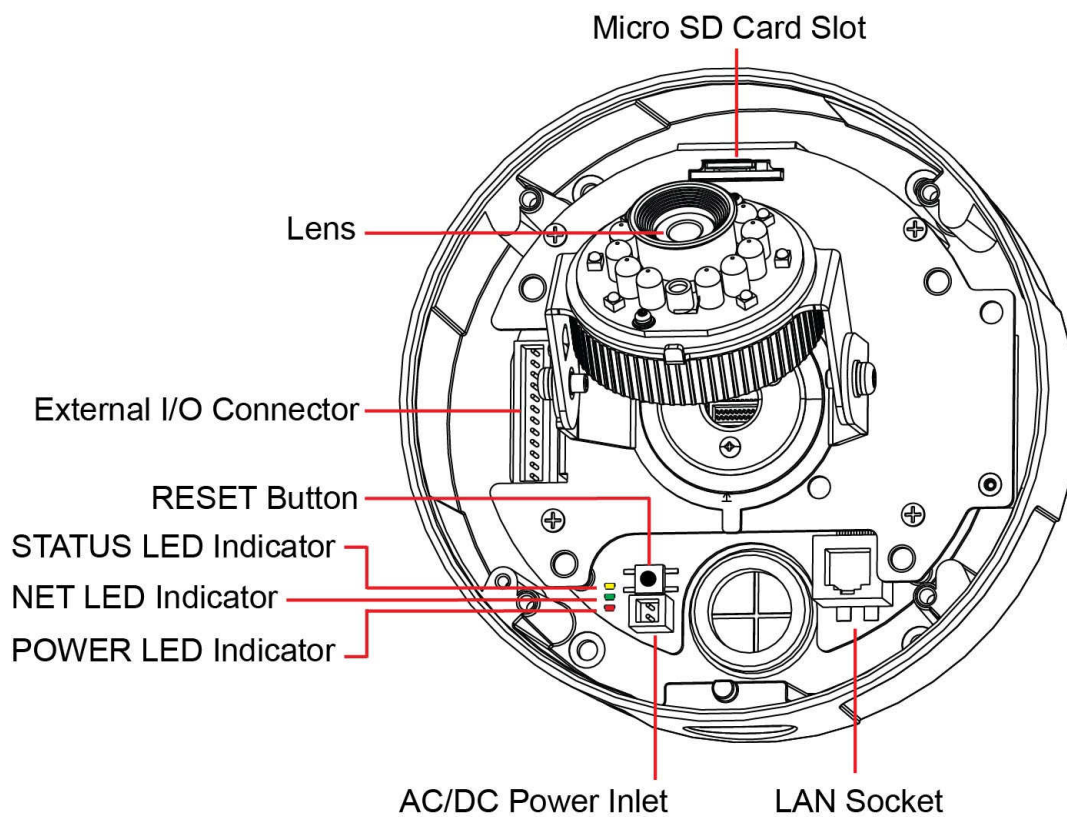

Making Connections

Before you connect your IM-V22, please make sure your PC has the LAN port available for connect to the network.


Follow these instructions to connect the IM-V22 into your PC and LAN Port.

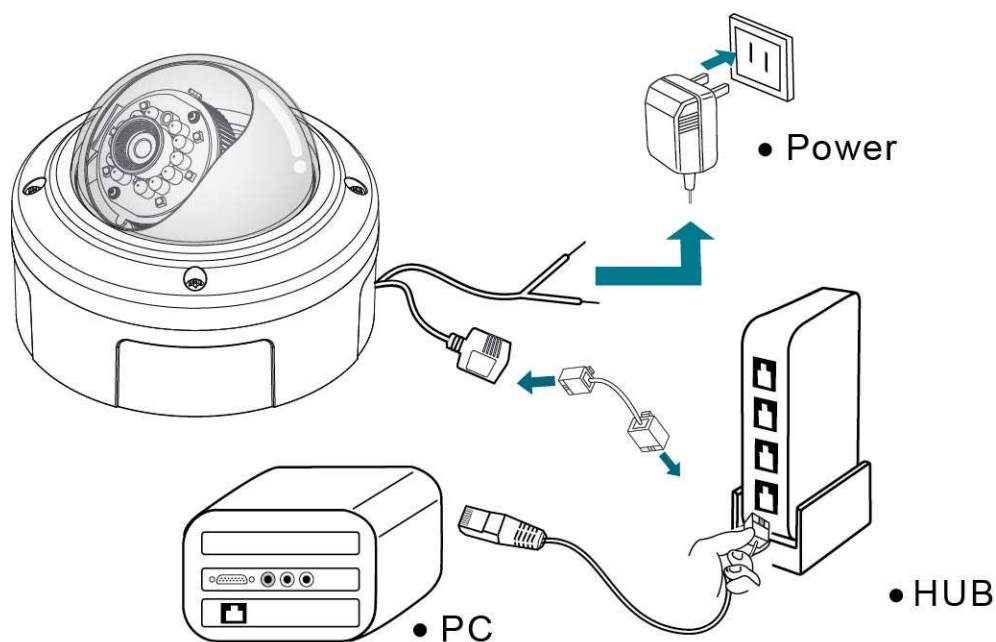

Power Connect to DC12V power.
LAN Connect to 10/100 RJ45 network.

Power

Please connect IM-V22 IR IP Dome Camera with your power adaptor directly using the Twisted-Pair (not supplied) after plug the supplied 2pin connector as shown.

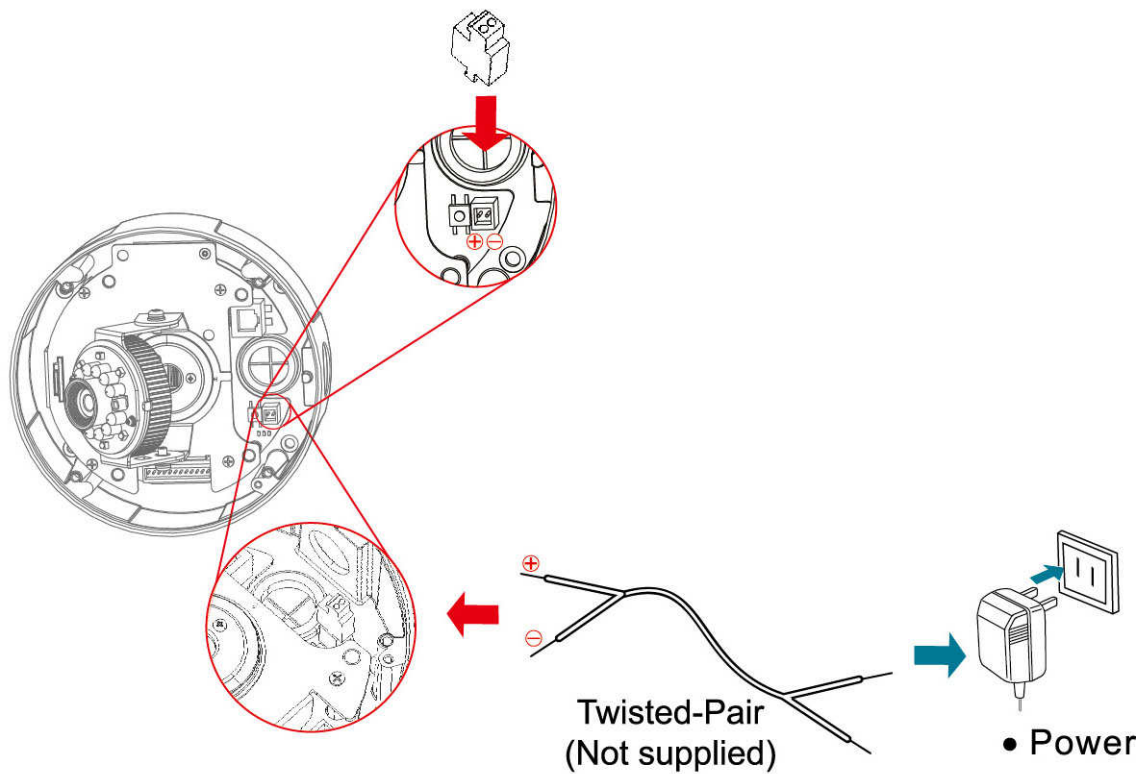


Attention: Please be aware of connection of positive and negative electrode. Any wrong connection will damage the camera.

Lan

Connect to the Switch HUB.


An RJ-45 connector is provided for connection to the 10Base-T Ethernet cable or 100 Base-T High Speed Ethernet cable.

Use a network cable and plug it into the LAN port of the IM-V22. Plug the other end of the cable in the LAN port of the HUB.

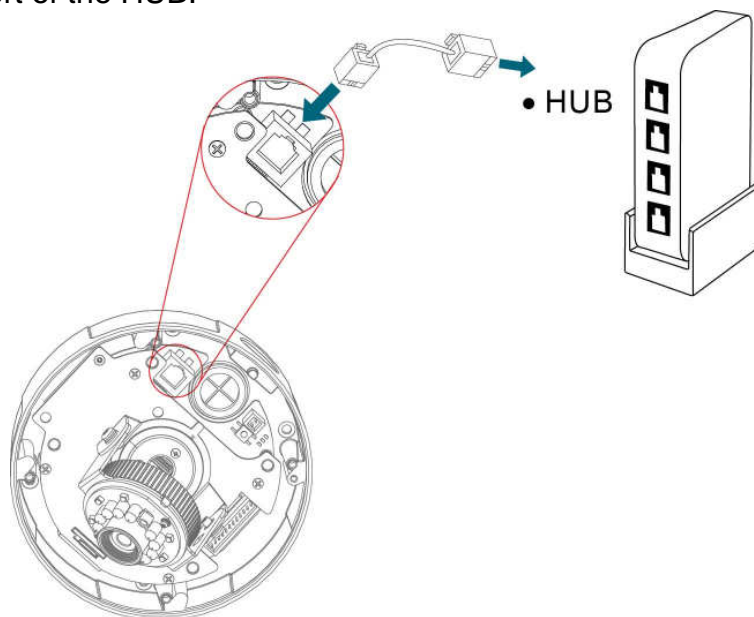

Connect to the Switch HUB to PC.

Make sure your PC has a LAN port available for connect to the network.

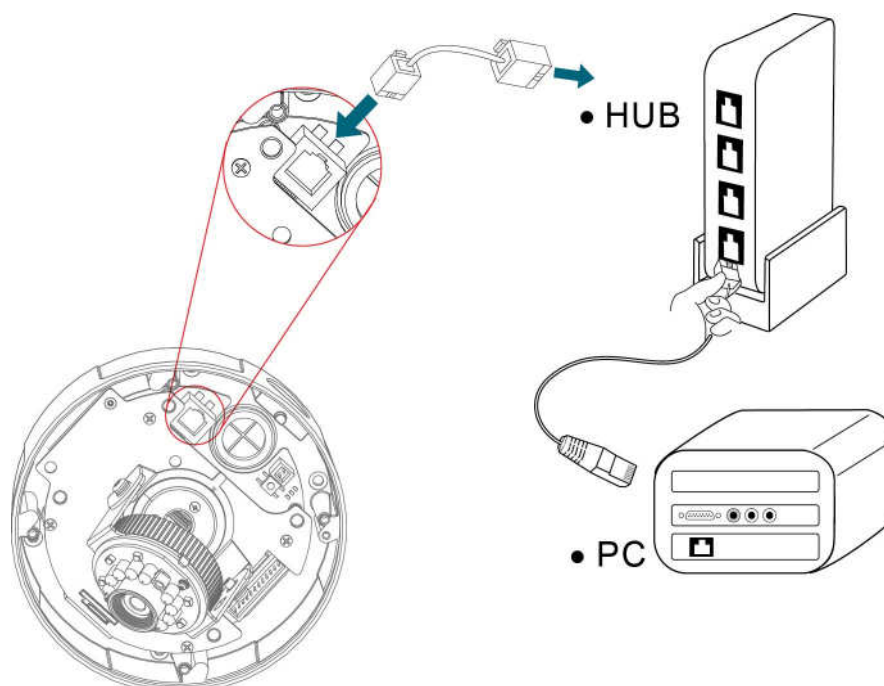


External I/O

In addition to the motion detection executed by the internal software application, IM-V22 IP IR Dome Camera provides an extension I/O terminal block which is used to connect external infrared detectors, beepers and smoke detectors.

For more information about these external devices, please contact to your local retailer, dealer or installation service provider.

Plug the external I/O connector

Plug the supplied external I/O connector as shown.

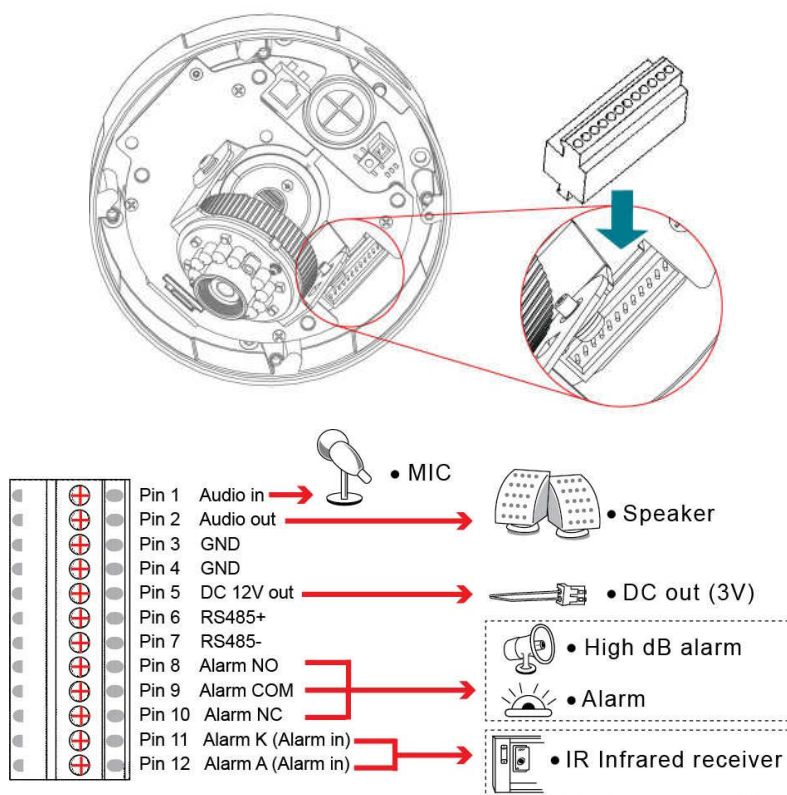

Pin	Function
1.	Audio in
2.	Audio out
3.	GND
4.	GND
5.	DC 12V out
6.	RS485+
7.	RS485-
8.	Alarm NO
9.	Alarm COM
10.	Alarm NC
11.	Alarm K (alarm in)
12.	Alarm A (alarm in)

Hardware Installation


Before getting to start IM-V22 IP IR Dome Camera, please adjust IM-V22 in accordance with the following steps first.

Make sure that no steel bars or power cables exist behind the position where the product is to be fixed. Some walls or ceilings may not be strong enough to support it. Pay attention during installation to avoid injury that might be brought about due to falling of the product.

Mounting


1. Remove the cover

Use a hexagonal wrench to release the screw securing the cap.

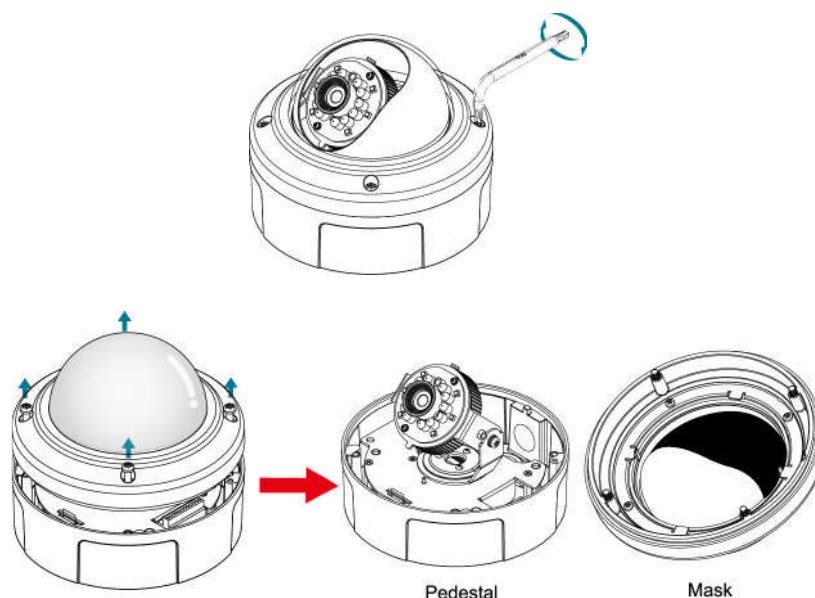

2. Adjust the lens angle


Use the screw driver to relax the screws for lens angle adjustment and lock them after the lens angle is adjusted.

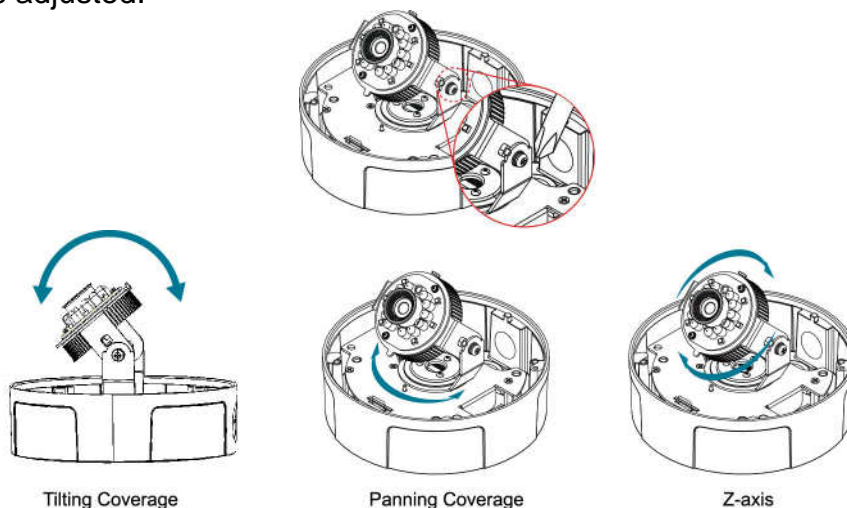

3. Smart cable management

Wrap the cable around the hook.

There are 2 ways for you to manage the cables.

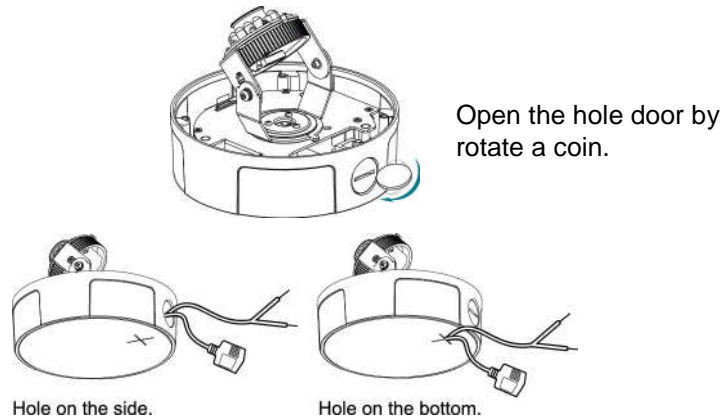


4. Mask adjustment

Before mounting the camera, please adjust the appropriate position in accordance with the visual angle of the lens.




5. Stabilize the hardware

Before putting the cover back on the hardware, please take aim at the starting point as shown.

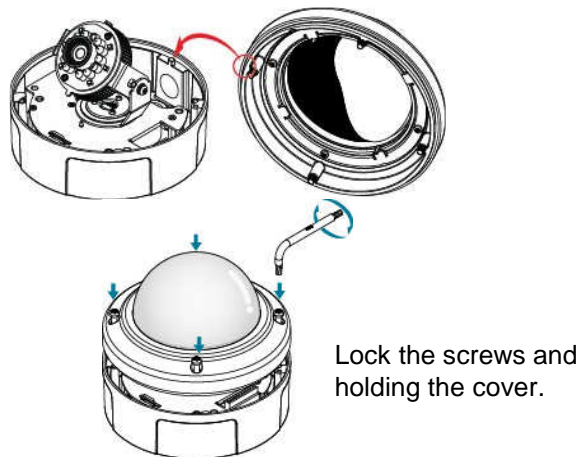

6. Tripod mounting

Mounting the camera in accordance with mounting position sheet attached.

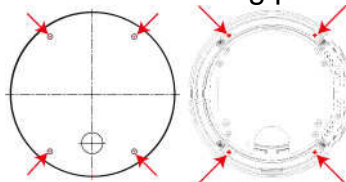

7. Complete the installation

Put the hole bitmap on the ceiling or wall.

● on a wall



● on a ceiling



NOTE:

You can install IM-V22 IP IR Dome Camera on the holder and hang it on the wall or ceiling. Please do not install it in locations of poor ventilation. This will result in poor operation.




Attention: The horizontal angle is important when you hang the product from the ceiling. Excessive inclination may bring about abnormal rotation of the camera lens.

Factory Reset

IM-V22 provides a function for you to reset the IM-V22 to the factory default settings.

If there is still system problems remain after rebooting, factory reset can return the camera to normal operation after resetting.


The following diagram illustrates will show you how to reset the IM-V22 IR IP Dome Camera.

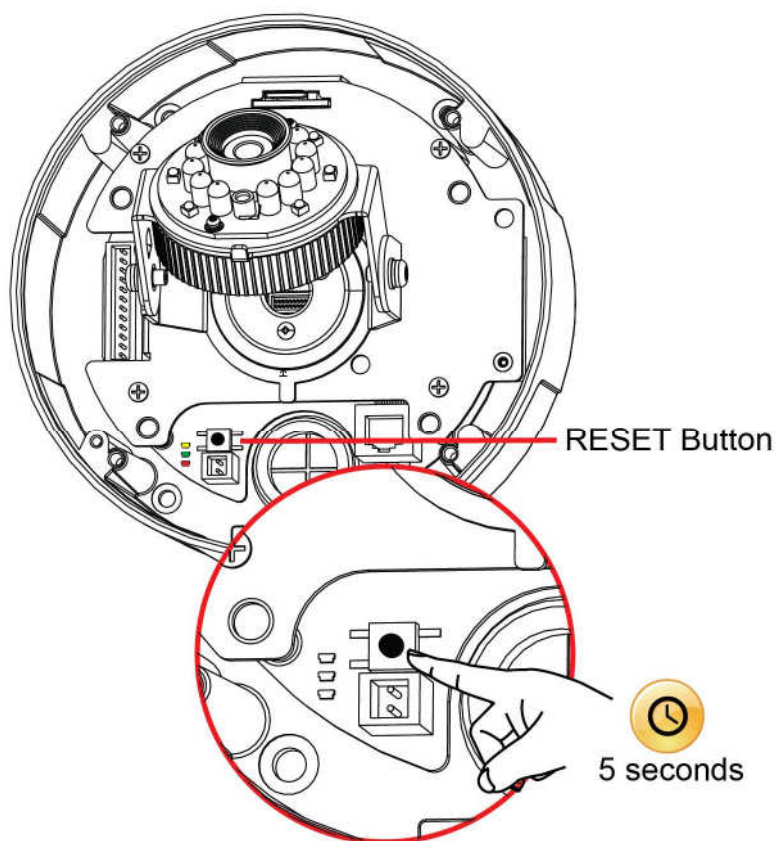

Press and release the reset button for 5 seconds, wait for the Network Camera to reboot.

Getting Started

After you have finished install the IM-V22 IP IR Dome Camera. Please check if it is ready to use by the Led indicator as below:

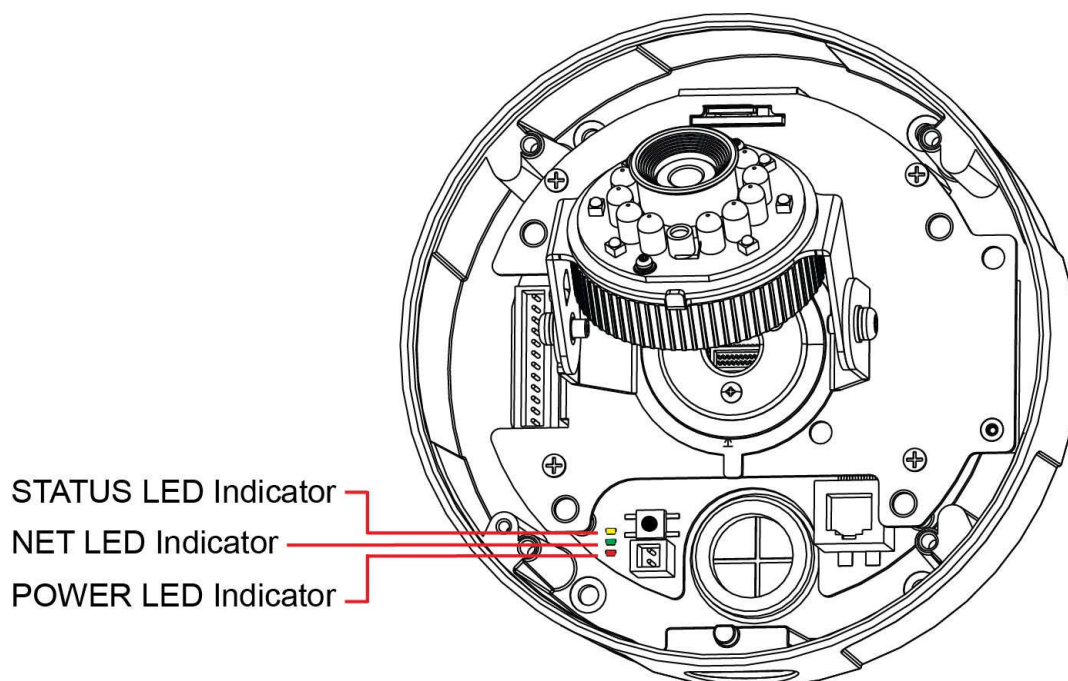

STATUS
NET
POWER

The LED Indicator will light in yellow when any event triggered.
The LED Indicator will light in green when the network is connected.
The LED Indicator will light in red when the power is on.

Software Installation

After the hardware has been installed, insert the installation CD into the CD-ROM driver and run the "Cam Finder.exe" following the steps below to search and change the IP address of IM-V22 IP IR Dome Camera.

NOTE :


If the network environment has the router, please make reference to the chapter of **Appendix: Set up the Router Setting with IP Camera** for different environment description.

1. Start the Camera Setting.

Run the **Cam Finder.exe** from the installation CD.




2. Set the IP address of the Network Camera.

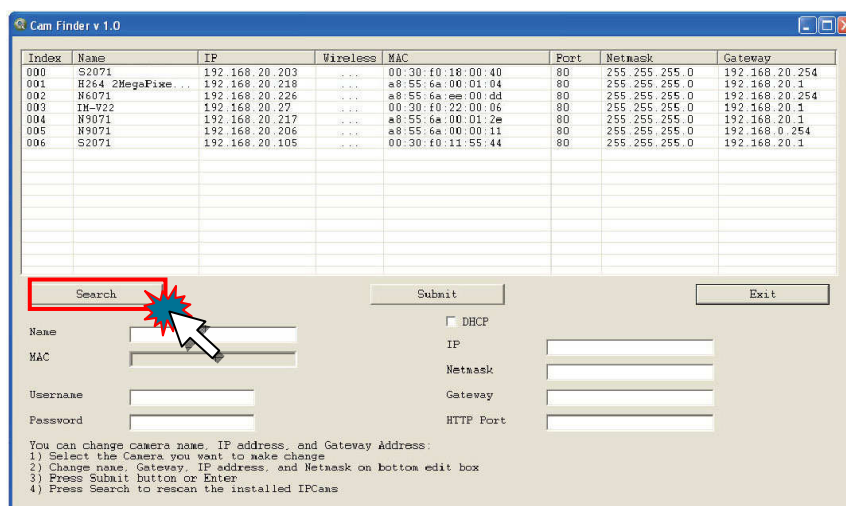

Click **Search** to find the IP Camera on the LAN, the factory IP setting 192.168.0.20 appears on the screen.

3. Change the IP address and related settings for the network environment

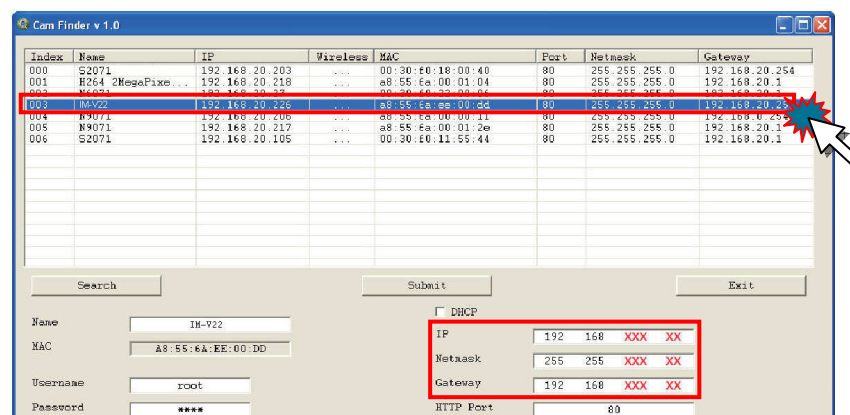


When you find the camera, click it and the settings will appear on the right side. You can change the settings for the new network environment as you need.

NOTE :

Enter new settings in the field of the **IP**, **Netmask** and **Gateway** fields and keep the settings in other fields unchanged.

4. Submit data

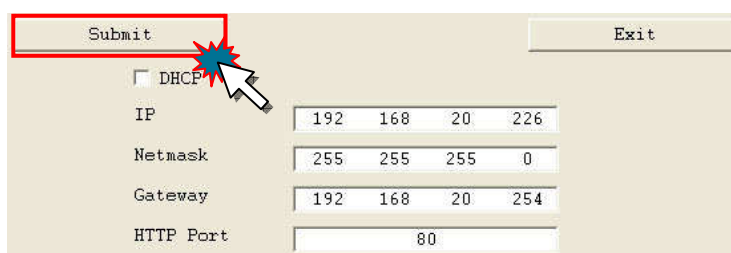

Submit Exit

☐ DHCP

IP 192 168 20 226


Netmask 255 255 255 0

Gateway 192 168 20 254

HTTP Port 80

Click **Submit** to apply the new settings.

5. Confirmation

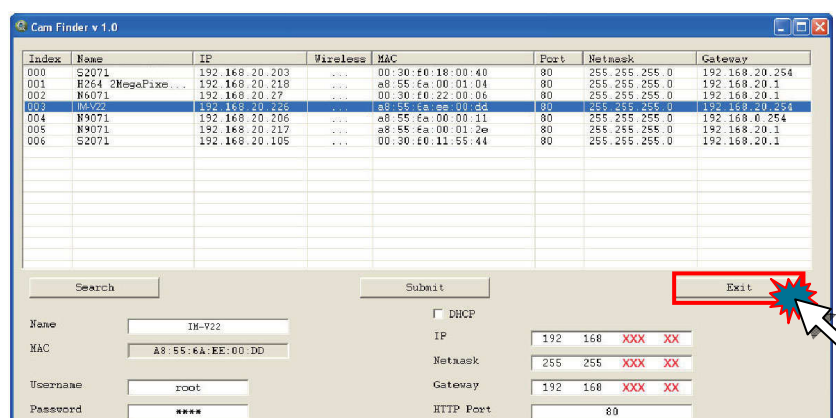

Index	Name	IP	Wireless	MAC	Port	Netmask	Gateway
000	S207L	192.168.20.203	...	00:30:f0:18:00:40	80	255.255.255.0	192.168.20.254
001	E254 2MegaPixe...	192.168.20.218	...	a8:55:fa:00:01:04	80	255.255.255.0	192.168.20.1
002	N607L	192.168.20.27	...	00:30:f0:22:00:06	80	255.255.255.0	192.168.20.1
003	IM-V22	192.168.20.226	...	a8:55:fa:00:01:2e	80	255.255.255.0	192.168.20.254
004	N907L	192.168.20.206	...	a8:55:fa:00:00:11	80	255.255.255.0	192.168.20.254
005	N907L	192.168.20.217	...	a8:55:fa:00:01:2e	80	255.255.255.0	192.168.20.1
006	S207L	192.168.20.105	...	00:30:f0:11:55:44	80	255.255.255.0	192.168.20.1

Search Submit Exit

Name IM-V22 ☐ DHCP

MAC A8:55:FA:EE:00:DD IP 192 168 XXX XX

Username root Netmask 255 255 XXX XX

Password **** Gateway 192 168 XXX XX

HTTP Port 80

Click **Exit** to quit, after all changes have been confirmed.

NOTE :

The **Cam Finder** can only find the IP addresses of the cameras that share the same hub on the LAN. For more information about finding IP addresses on the Internet, refer to the “**DDNS Setting**”, or “**UpnP Setting**”.

All 3Svision camera/network server products can be found and changed using the **Cam Finder** software.

When the **Cam Finder** software cannot be executed, check your antivirus software or firewall to remove the block.

Field description: You can give a name to your camera (such as “IR_IP” or “IR-IP”). No spaces allowed (such as “PI IP”).

You can change the settings for IP, Gateway Address and Network Mask to meet the requirements of your network environment. IM-V22 IP IR Dome Camera uses HTTP Port1 and does not support Port2 settings.

MAC: Factory default network identity of IM-V22 IP IR Dome Camera.


Ready To Use

Access to the IP Camera

You can access the IP Camera through web browsers, follow the instructions to install the required plug-in on your computer.

1. Using Web Browsers

Launch your web browser. (eg. Microsoft Internet Explorer, Mozilla Firefox or Netscape...) and enter the IP address of the IP Camera in the address field.

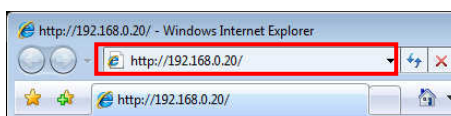

After fill in "root" in the User Name and Password fields, Click **OK**.




User Name: **root**
Password: **root**

NOTE :


1. If the web browser cannot be display the Camera Main Page, please make reference to the chapter of **Appendix: Change the Inter Explorer Setting** for further detailed description.
2. You can access the camera as an administrator by default and set up for other users or privileges from the "**Basic Settings**" → "**User**".

2. Installation of Internet Explorer ActiveX Controller


After the Username and Password are confirmed, a control setup screen pops up under the IE address bar. Click "**Install ActiveX Control**" to continue.

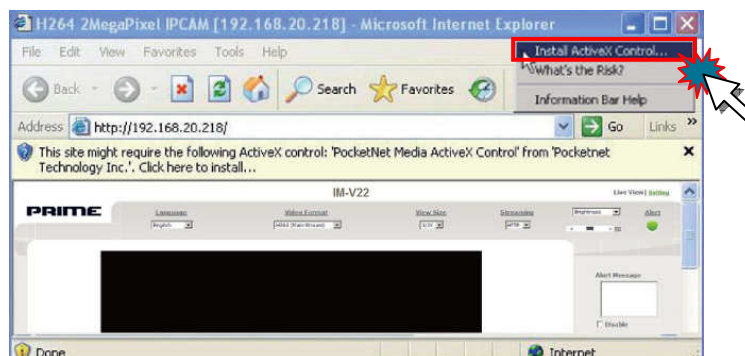

The security warning screen appears. Click "**Install**". The ActiveX Control is named "**ActiveX Control**". This software is owned by PocketNet and well certified. You can use it without any doubts about its validity.

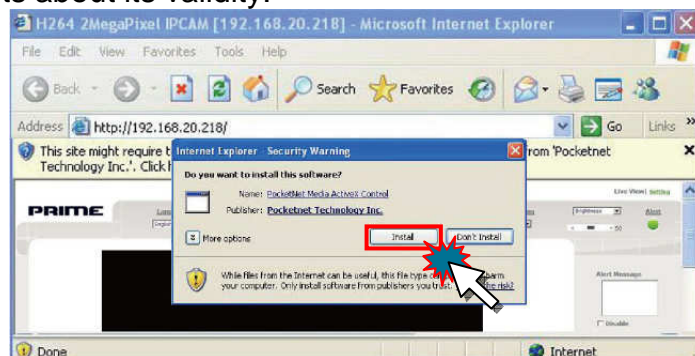


When ActiveX Control is installed successfully, you can see the camera image and interface on your screen.

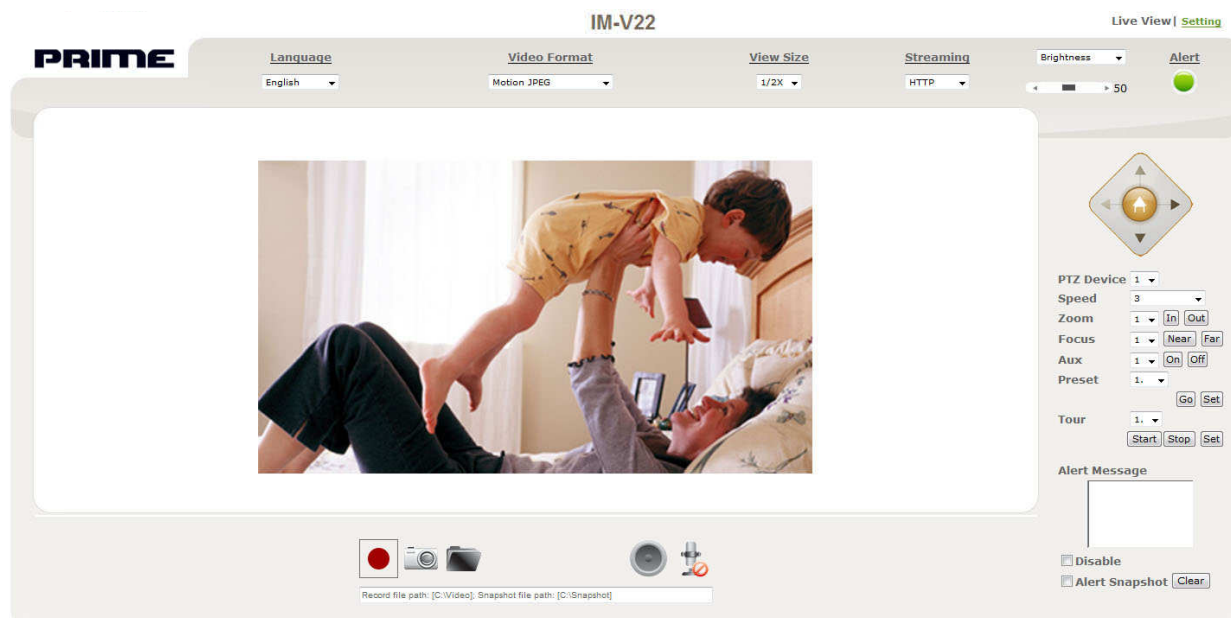

View of Camera Main Page



Once you have installed the software from the IE and you are ready to start the setup menu. The Camera utility enables you to change language, video settings. And you can also change the other setting by "**Setting**".

Live View

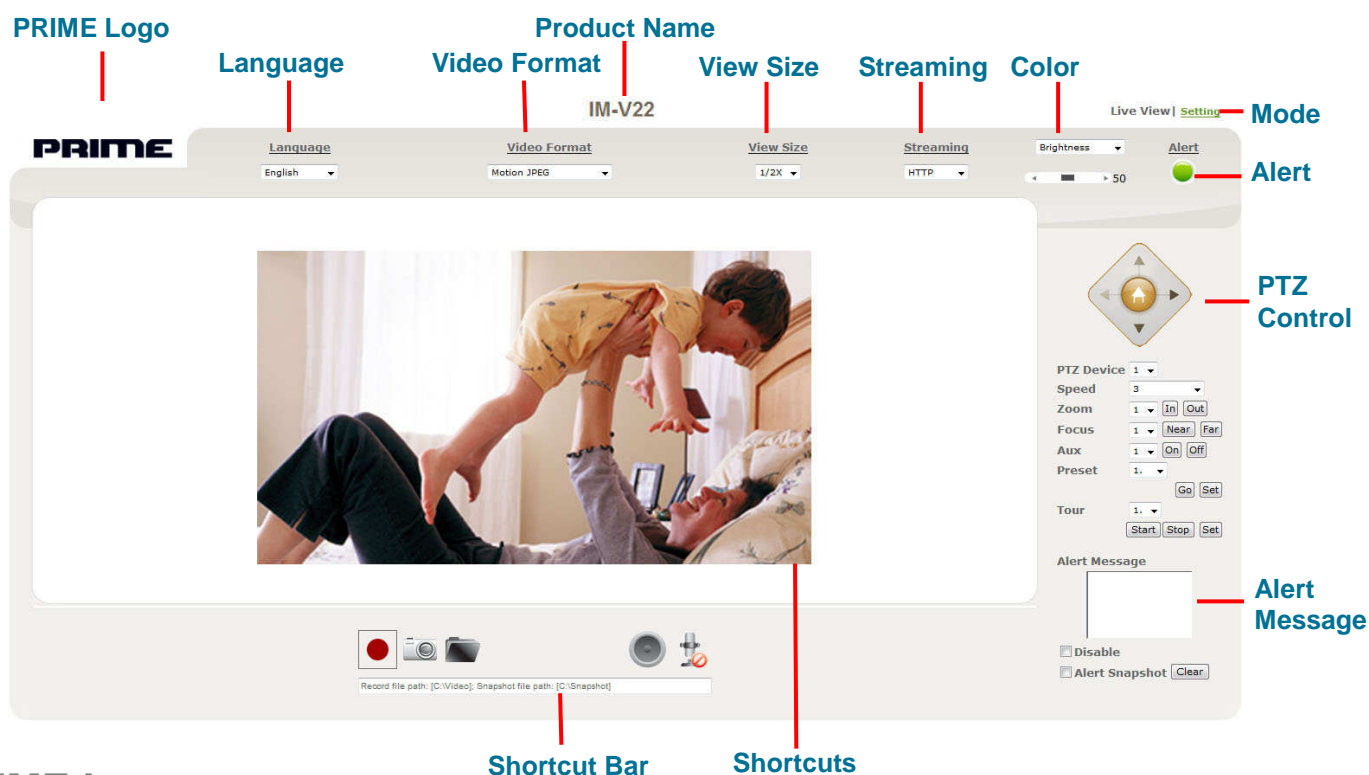

PRIME Logo

Click here to visit the website of **Unixcctv.com**.

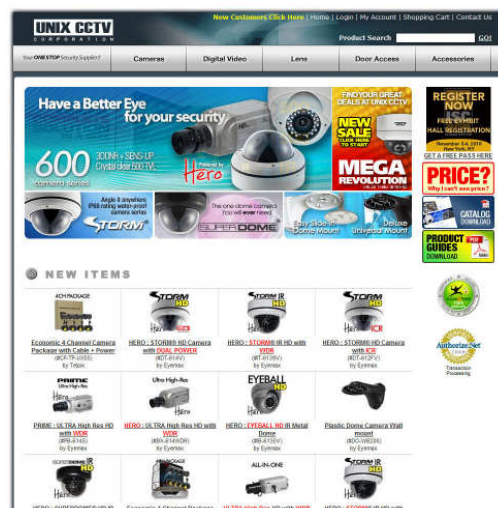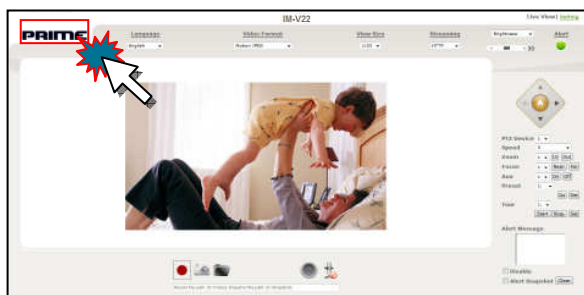


Product Name

Display the product name.

The default name follows the product, and it not releases the permission of modification to customer.

Product Name

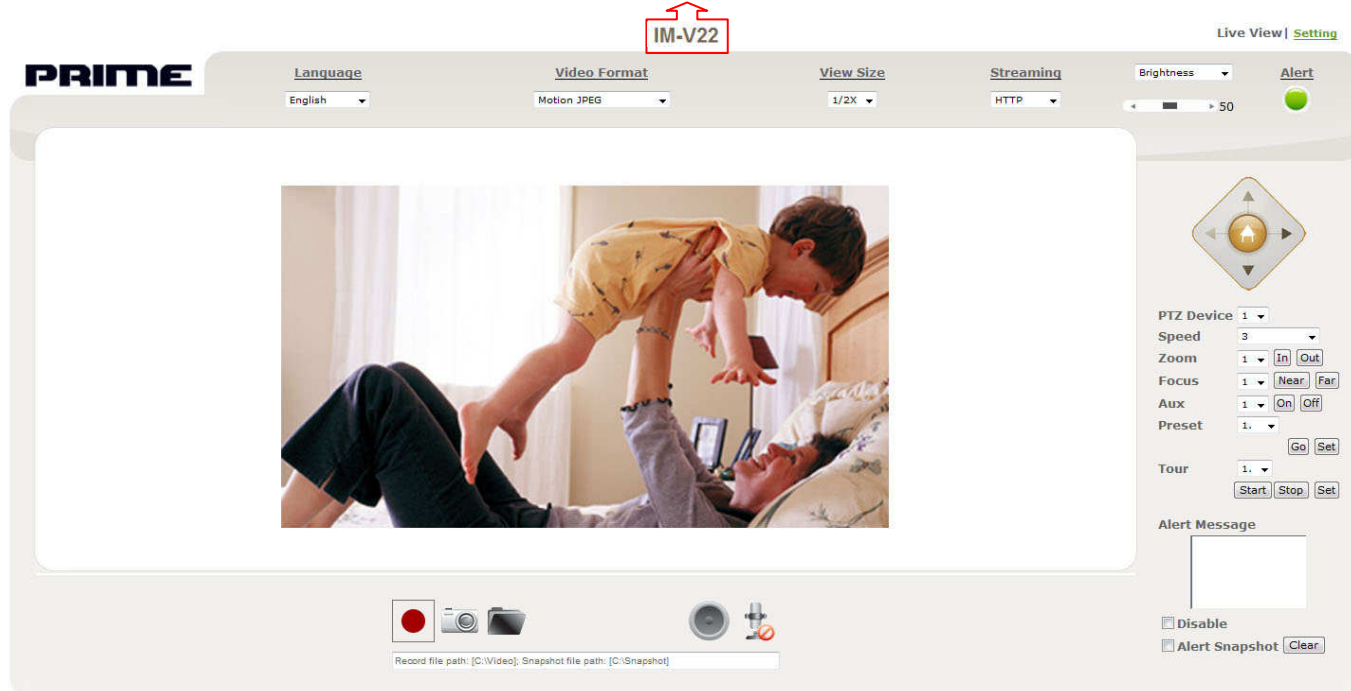

Mode


Select the display mode between Live View and Setting.



Language

It supports 7 kinds of different languages in web browser and the default setting is English.

Click the pull-down menu to select the language for web browser from **English**, **简体中文 (Simplified Chinese)**, **繁體中文 (Traditional Chinese)**, **Español (Spanish)**, **Deutsch (German)**, **Français (French)** and **Nederlands (Dutch)**.

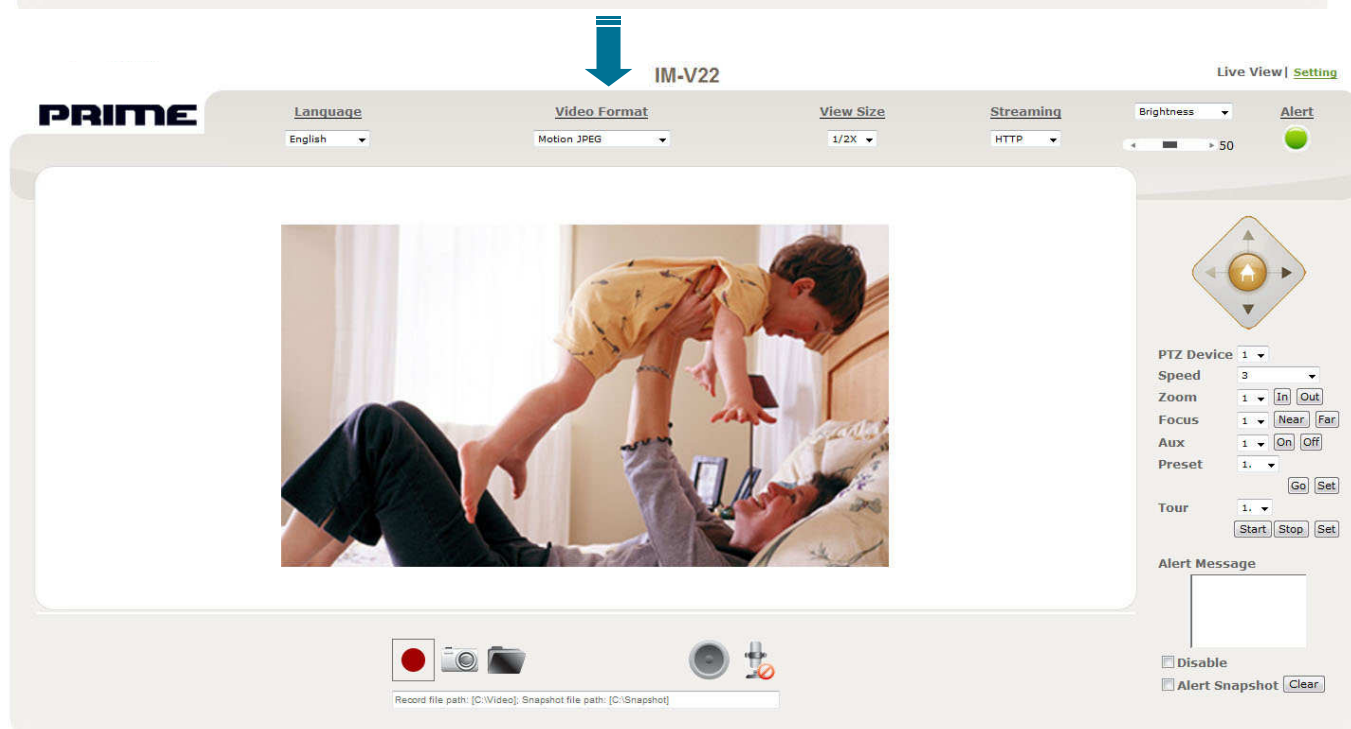

NOTE :


The language selection is not suitable for Shortcuts, because the Shortcut follows the OS language.

Video Format

It provides the triplex streaming, but it can use one streaming on the live view. The default setting is the MPEG H.264 (Main).

Click the pull-down menu to select the video format from **H264(Main Stream)**, **H264 (Sub Stream)** and **Motion JPEG**.

Video Format
H.264 (Main)
H.264 (Sub)
Motion JPEG

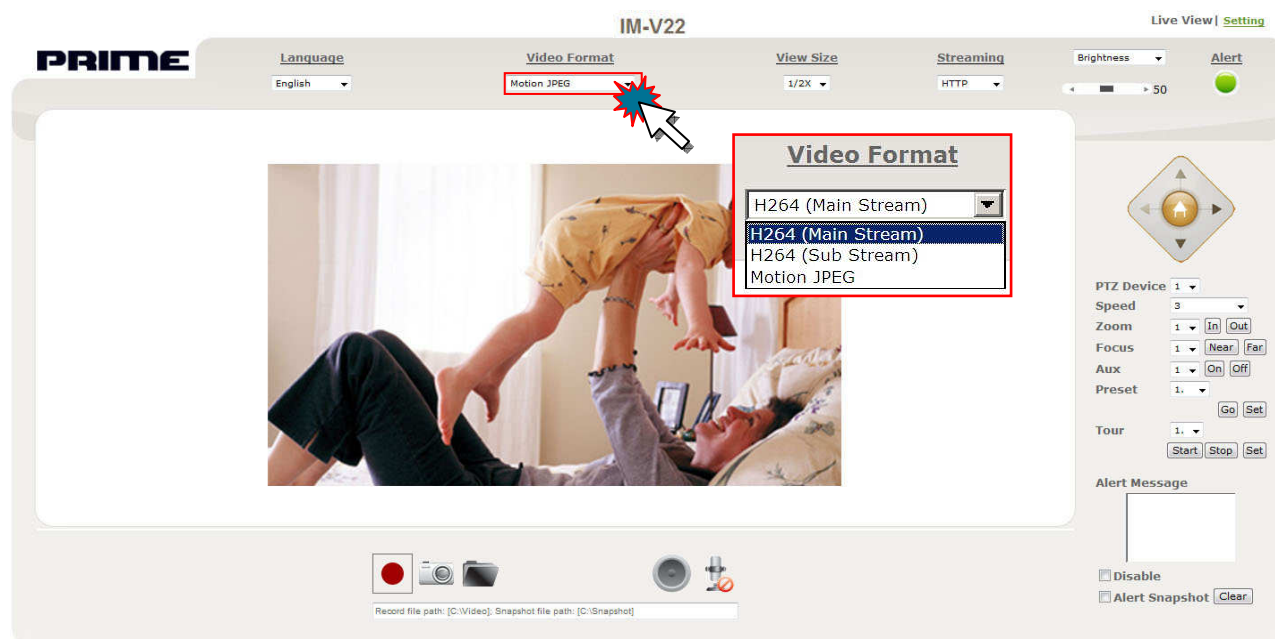

View Size

It can fix well the resolution when enlarge or reduce the live view image.

Click the pull-down menu to select the video format from **1/2X**, **1X**, **2X** and **4X**.



1/2X



1X



2X



4X

NOTE :

The quality of the image will become to poor, when you enlarge the view image size.

Streaming

It provides 3 kinds of different streaming protocols.

Click the pull-down menu to select the video format from **UDP**, **TCP**, and **HTTP** to apply or integrate on different requirement and environment.

The following tables show the difference between UDP, TCP and HTTP.

Differences Protocol	Tunneling	Pocket Loss	Speed
HTTP	Easy	Fair	Fair
TCP	Fair	Lower	Fast
UDP	Hard	Lowest	Fastest



1. UDP

Provide the fastest but most unreliable transmission service. Video streams are transmitted through RTP 50000~60000 Port to ensure the fastest image transmission.



IP Camera



PC

NOTE :

However, video fragment or mosaics may occur due to poor transmission quality.


2. TCP

Provide reliable data transmission, because the transmission will check the receiver first. Video streams are transmitted through RTSP 554 Port to avoid video fragment or mosaics, but this protocol will affect the FPS to reduce.



3. HTTP

Video streams are transmitted through HTTP 80 Port to ensure passing through firewalls.

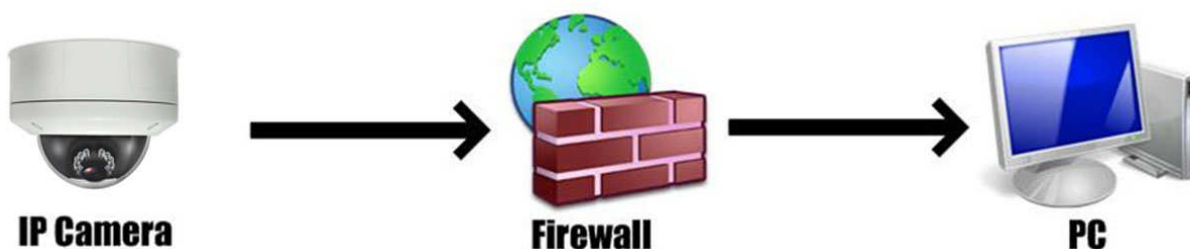

NOTE :

HTTP is recommended if your network is protected with firewalls.



Color

Adjust the value of the color settings for the live view image such as **Brightness**, **Hue**, **Contrast** and **Saturation** by click the ◀ / ▶ button.



You can also adjust the value by drag the slide bar to left or right.



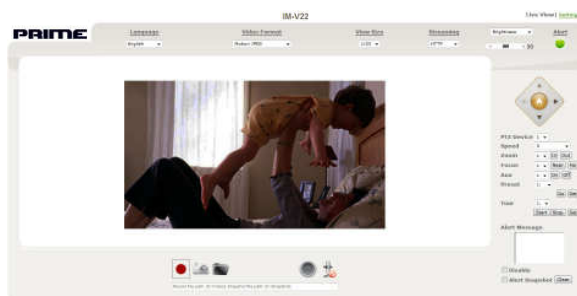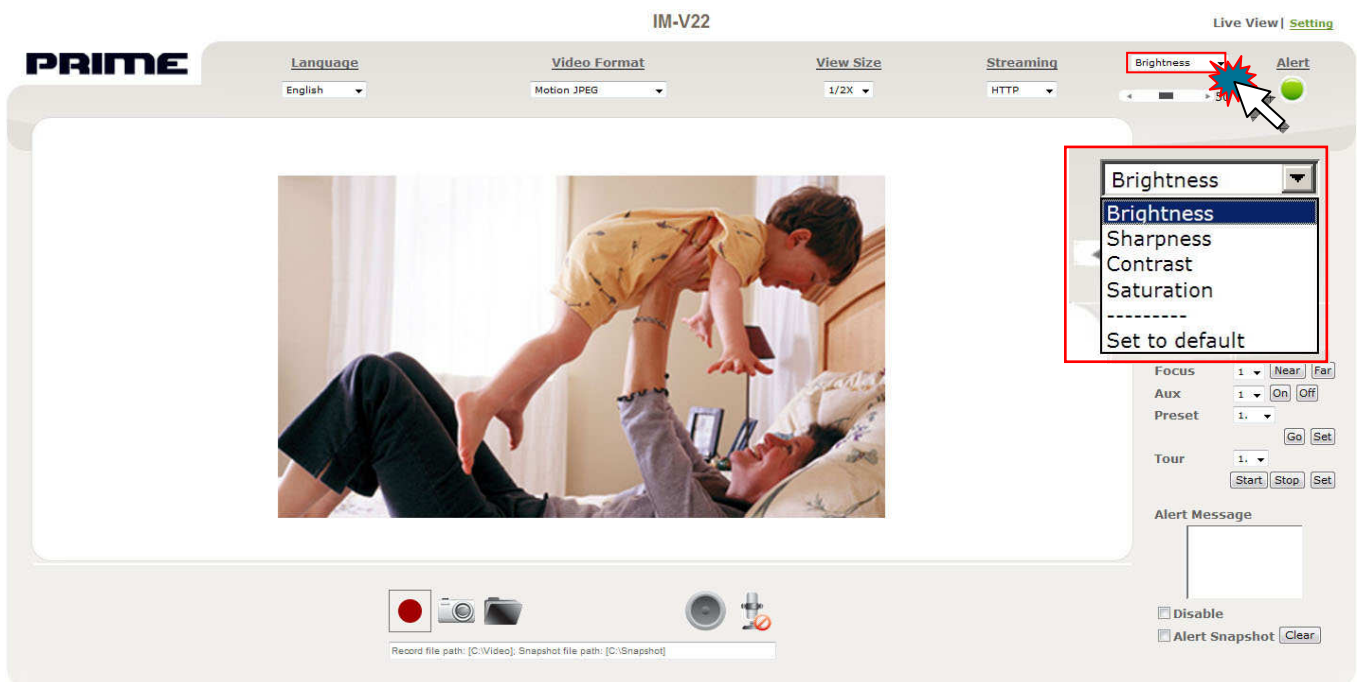

Brightness 0



Brightness 100

Brightness

Adjust the brightness of image.

Contrast

Adjust the contrast of colors.

Saturation

Adjust the saturation of colors.

Set to default

Reset all of the color settings to default figures.

NOTE :

50 is the default figures of the value for color setting, the range is 0~100. After the value is changed and the result will be shown on your screen.


Alert

The alert flash will be changed from green to red in order to warning users immediately when any event is triggered.

This smart design can prevent the user omitting from any event.



NOTE :

The alert message will display the information at the same time.

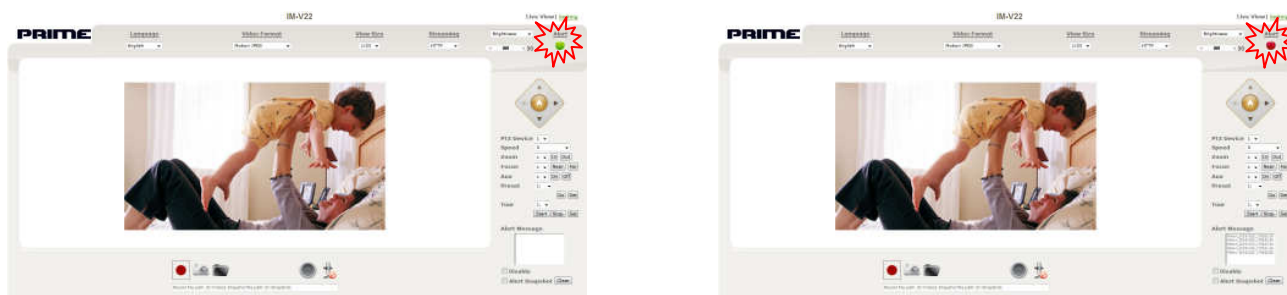

Trigger the event

The alert flash will keep in red till you disable it. Click the alert flash again to disable it.

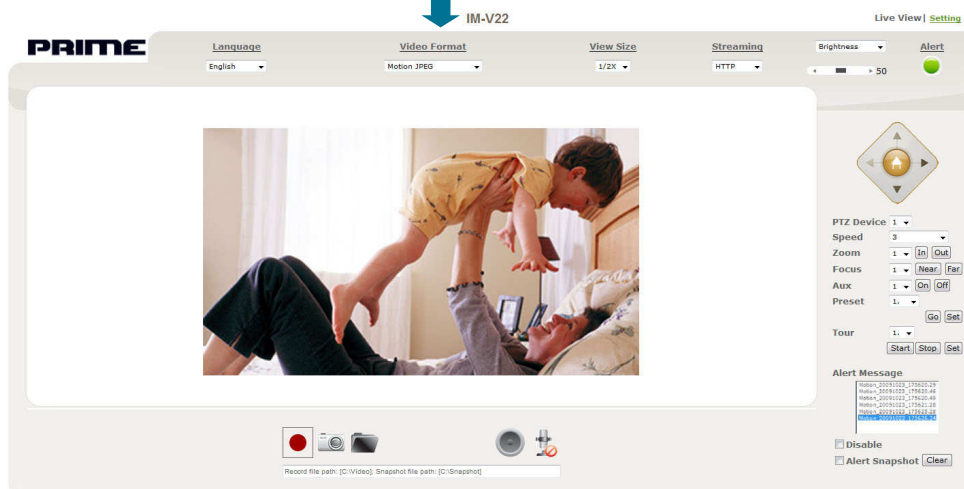
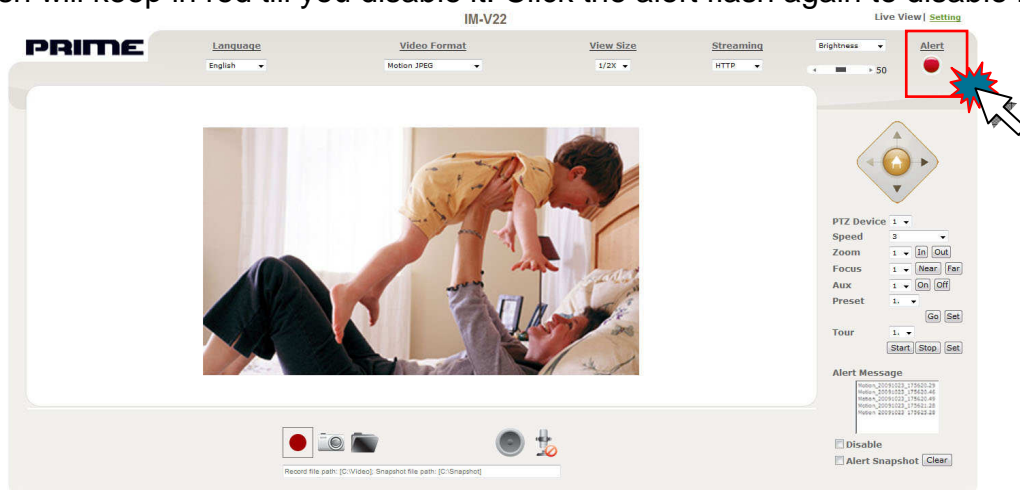


NOTE :

The function of **Alert** needs to match and use with **Event Setting**, please confirmed the **Event Device** and **Setting** before you start this function.

Alert Message

It will display the event message when receiving the event. And some controls and applications will be available. Please see the detail illustration as below:

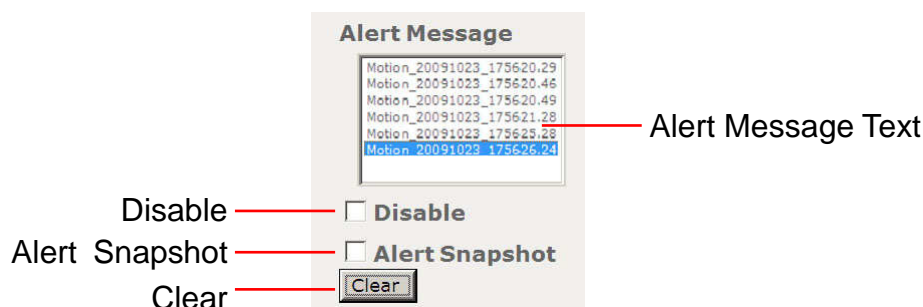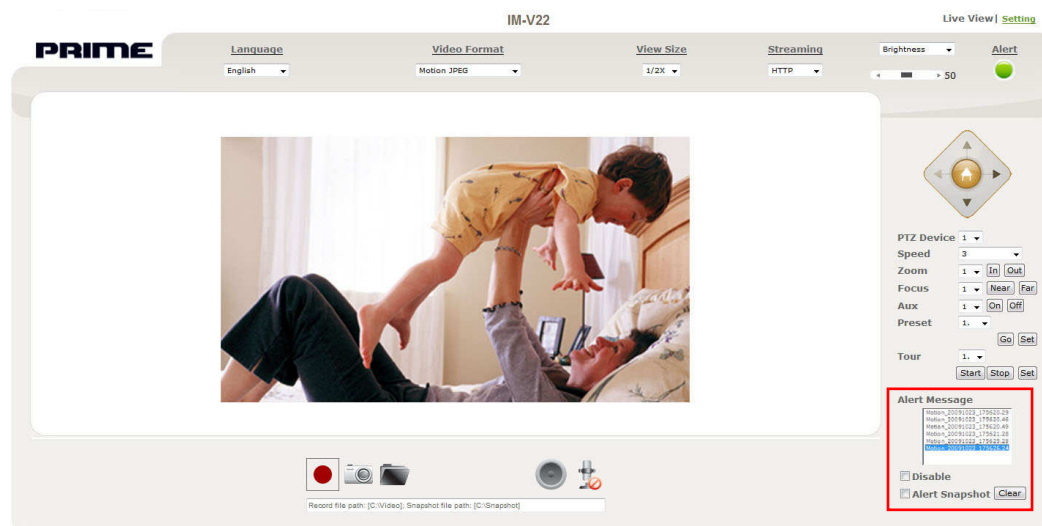


Alert Message Text

Display the message in the field of the **Alert Message Text** when the event is activated. The event message format as below:

Event Type	Date	Time
Motion	MM/DD/YY	HH:MM:SS
Alarm	MM/DD/YY	HH:MM:SS

For the detail information, please double click the event message at the alert message text field and a pop-up window of the alert message will be shown.

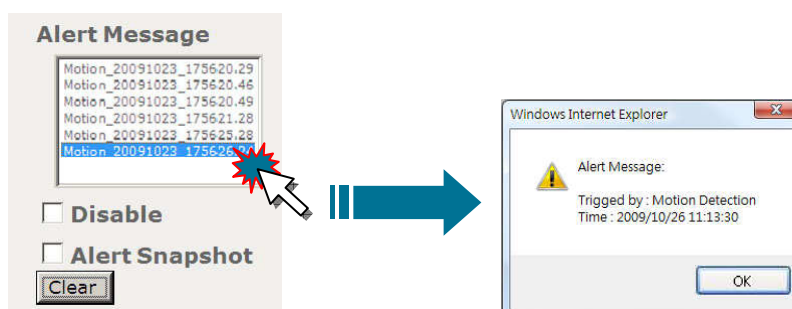

NOTE :


The event type will be different based on the model.

Disable


Enable/Display the Alert Message

The function of displaying message in field of Alert Message Text can be hidden when Alert is triggered.

Alert Message Text field will keep previous values before Alert being triggered if there is a message already recorded.

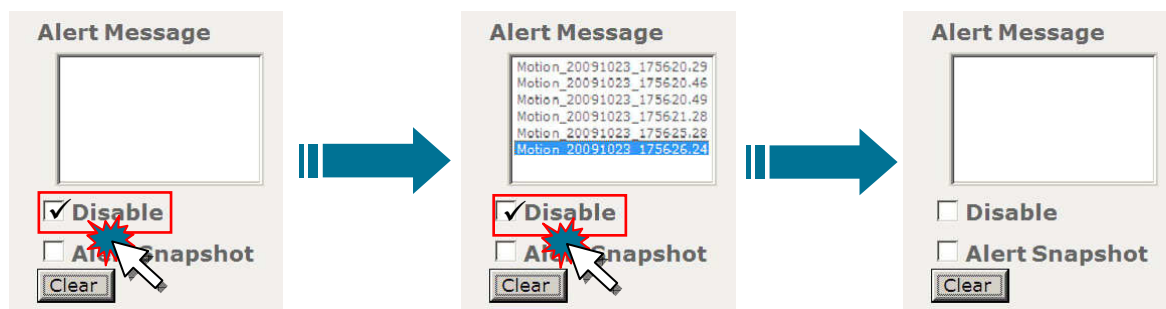*Alert Snapshot*


It will Snapshot the image when event is triggered. The saving name will follow the Alert Message Text.

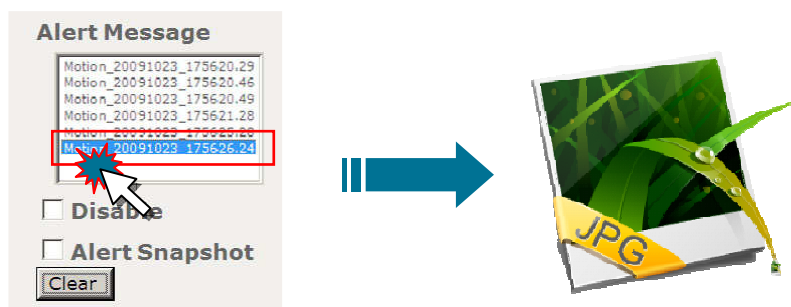**NOTE :**

The saving path will follow the path setting from Shortcut Bar.




Clear


Click **clear** button to remove all of the event messages from the Alert Message Text.

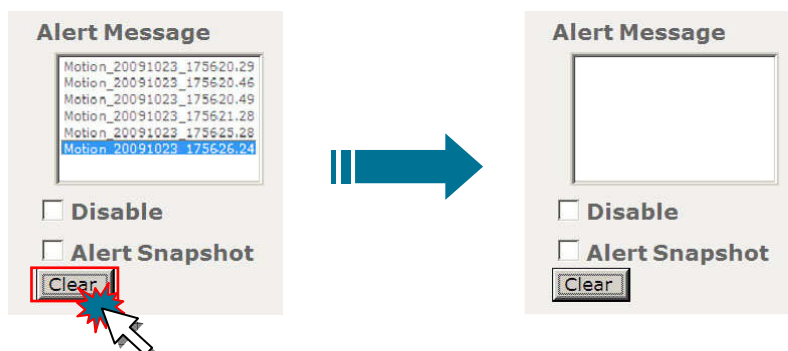

PTZ Control Panel

After enable the PTZ function the control panel of the PTZ will show on your screen.
The detail function illustration as below:

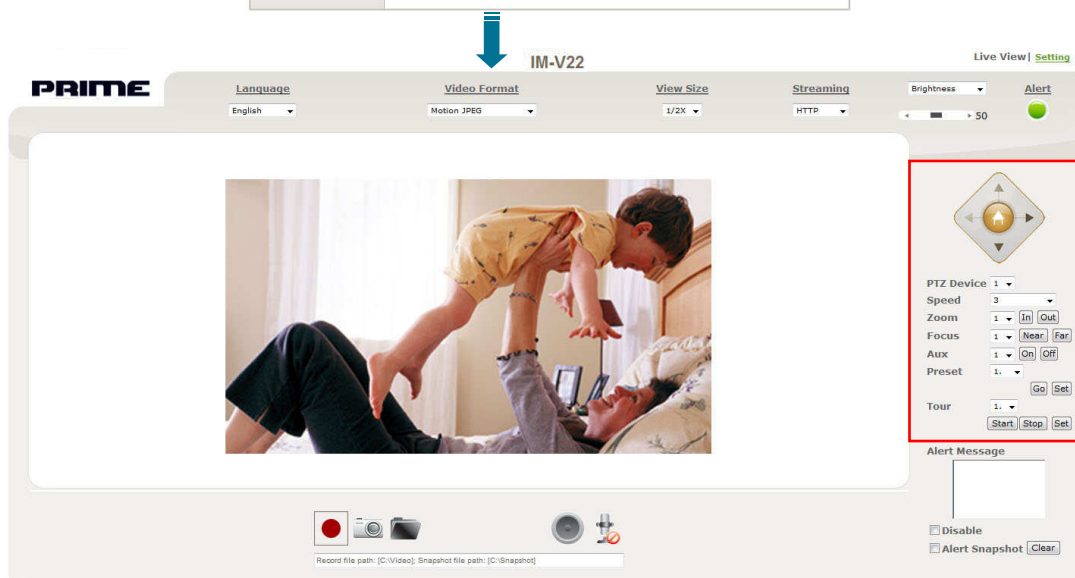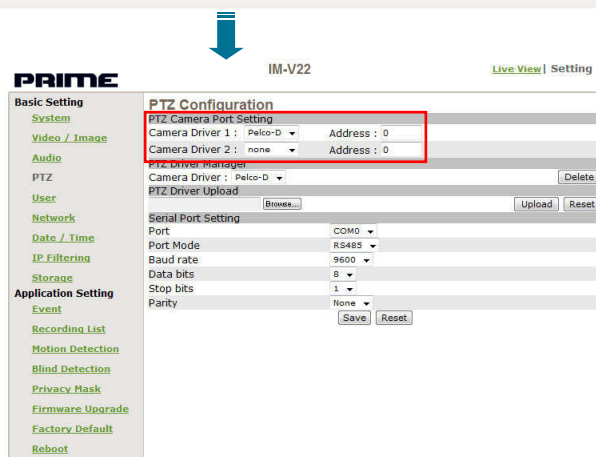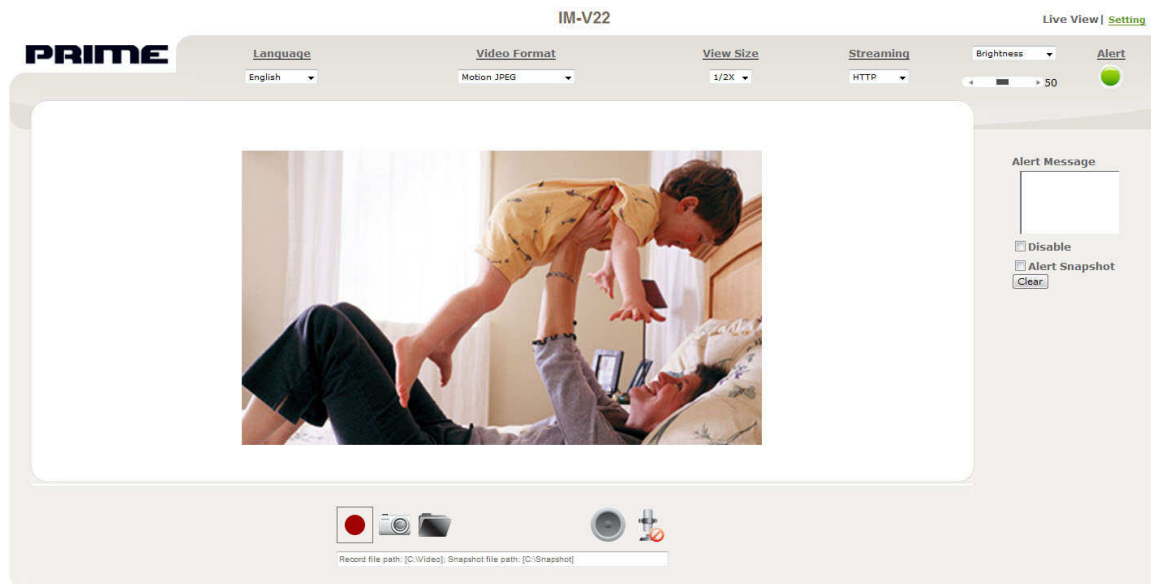


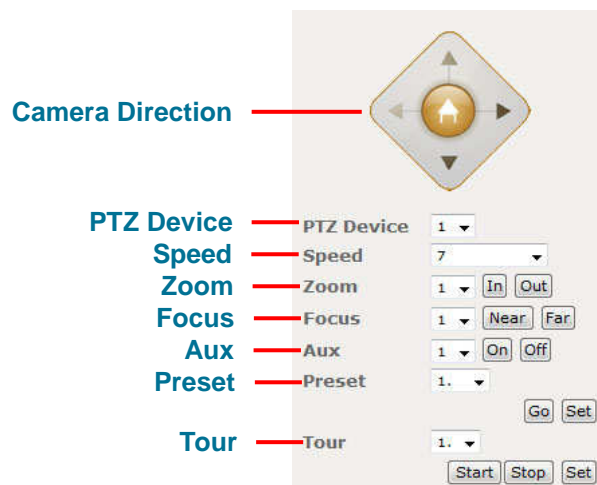

Camera Direction	Control the Pan/Tilt function
PTZ Device	Device selected
Speed	Adjust the Pan/Tilt movement speed
Zoom	Control the Zoom IN/OUT function
Focus	Use the manual Focus function
Aux	Control the external device
Preset	Set up/Enable the Preset
Tour	Set up/Enable the Tour

Camera Direction

Adjust the lens of camera by press Up, Dow, Left, Right and Home).

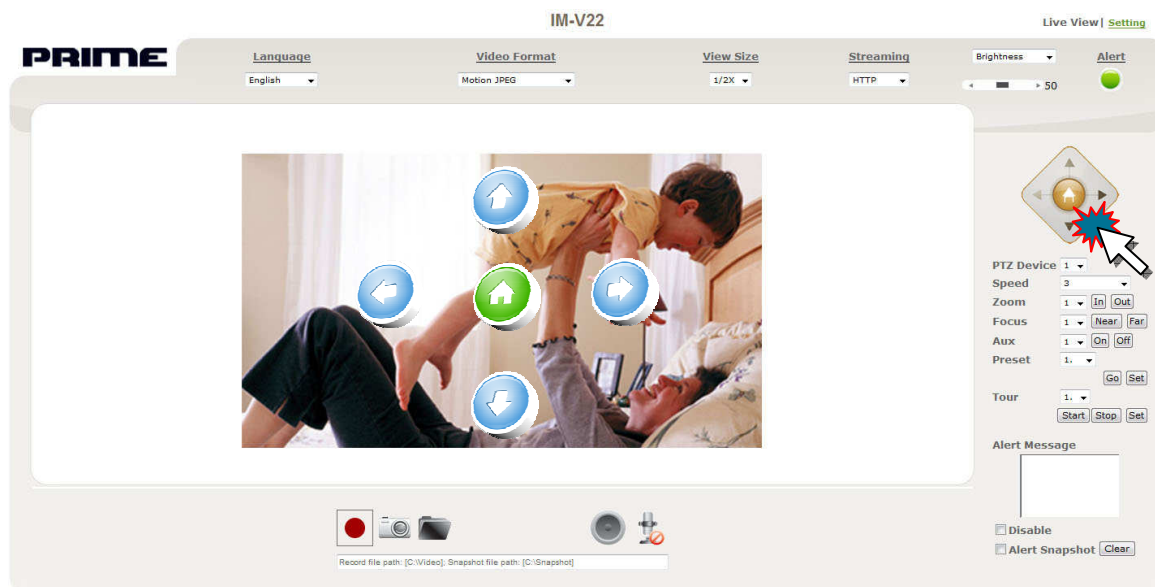

PTZ Device

Select the device to control the RS485 device, the different device can setup the different protocol.

Camera Speed

Control the rotation speed of the camera form 1(lowest) to 8 (highest).

Function	Parameter							
Speed	1	2	3	4	5	6	7	8
Angle/Sec.	3	20	40	60	80	100	120	140

Zoom

To enable the **Zoom In/Out** function by click the Zoom In or Zoom Out button. The Zoom distance will follow up the source device, select the speed form **1**(lowest) to **4** (highest).

Focus

Click the **Near/Far** to adjust the focus by manual control. Select the speed form **1**(lowest) to **4** (highest).

NOTE :

Please confirm whether the lens of your camera supports the application.

Aux

Control the external device through RS485. Enable or disable the device activity by click **On/Off**. Select the device from **1** to **8**.

NOTE :

Please confirm whether the device supports the application.

Preset


Preset the rotation points from the camera. (16 points)

1. Click **Set** to enter the Preset Setting page.

2. Fill in the **Location Name** to continue the preset setting.



- Click the Up, Down, Left, Right and Home to adjust the camera direction.

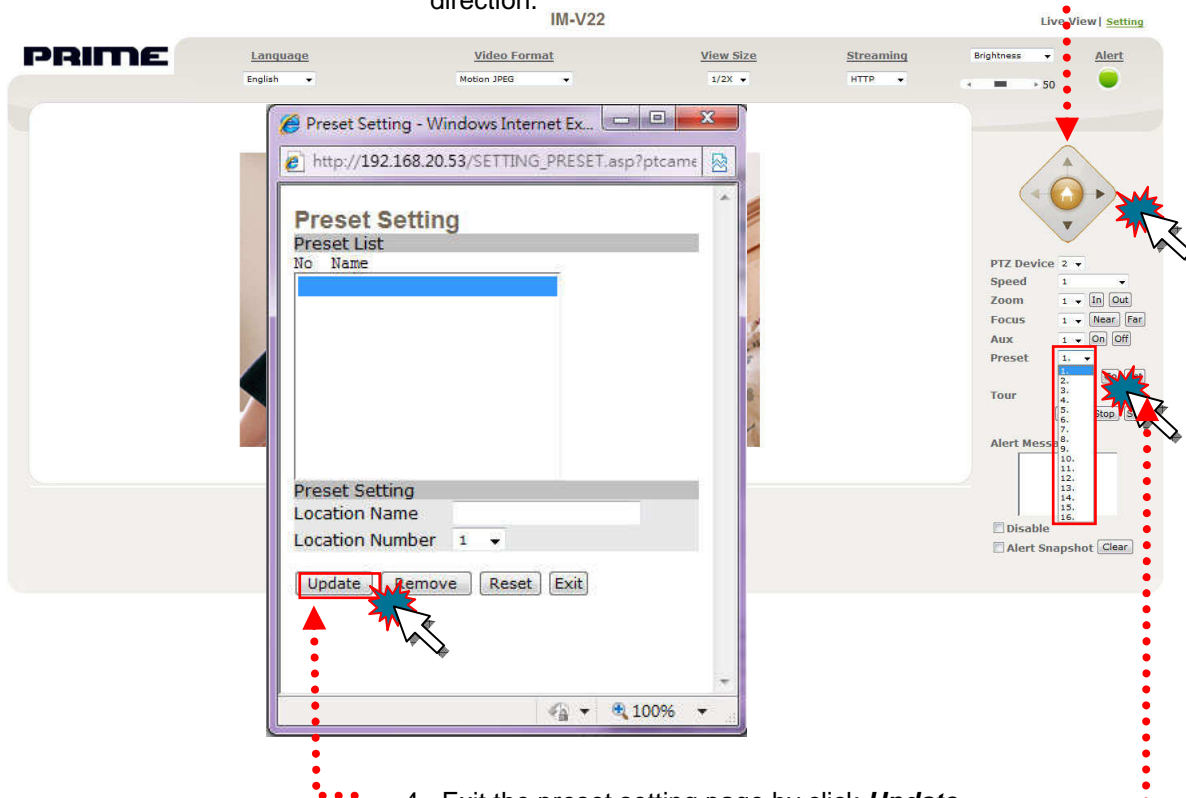

- Exit the preset setting page by click **Update**.
- After select the number for preset, click **Go**. The camera will move to the area automatically as setup by the select number.

Tour

Enable/Disable the tour mode of the camera. The rotation points of the camera must be setup in advance and provide five tour addresses to use it.

1. Click **Set** to enter the Tour Setting page.

The screenshot shows the IM-V22 camera web interface. The 'Settings' tab is active, and the 'Tour' section is expanded. The 'Set' button is highlighted with a red box and a red dotted arrow pointing to it. Below the main interface, a 'Tour Setting' window is open, showing a table of tour sequences and their dwelling times. The 'Tour Name' field is highlighted with a red box and a red dotted arrow pointing to it. The 'Tour Dwelling' field is also highlighted with a red box and a red dotted arrow pointing to it. The 'Update' button is highlighted with a red box and a red dotted arrow pointing to it.

Tour List	Tour No	Tour Name	Tour Dwelling	Tour Sequence1	Tour Sequence2	Tour Sequence3	Tour Sequence4	Tour Sequence5	Tour Sequence6	Tour Sequence7	Tour Sequence8	Tour Sequence9	Tour Sequence10	Tour Sequence11	Tour Sequence12	Tour Sequence13	Tour Sequence14	Tour Sequence15	Tour Sequence16
1	1		3	none	none	none	none	none	none	none	none	none	none	none	none	none	none	none	none

2. Name the tour. You can set up 5 tour groups at maximum.

3. Dwelling time (sec.) at each tour point.

4. Select a preset location for the camera.

The screenshot shows the IM-V22 camera web interface. The 'Tour Setting' window is open, and the 'Update' button is highlighted with a red box and a red dotted arrow pointing to it. The 'Start' button is also highlighted with a red box and a red dotted arrow pointing to it. The 'Tour Name' field is highlighted with a red box and a red dotted arrow pointing to it. The 'Tour Dwelling' field is also highlighted with a red box and a red dotted arrow pointing to it.

Tour List	Tour No	Tour Name	Tour Dwelling	Tour Sequence1	Tour Sequence2	Tour Sequence3	Tour Sequence4	Tour Sequence5	Tour Sequence6	Tour Sequence7	Tour Sequence8	Tour Sequence9	Tour Sequence10	Tour Sequence11	Tour Sequence12	Tour Sequence13	Tour Sequence14	Tour Sequence15	Tour Sequence16
1	1		3	none	none	none	none	none	none	none	none	none	none	none	none	none	none	none	none

5. Click Update to Exit.

6. Select the number you need then click Start to activate the tour function.



Shortcuts

Click the **right-button** of your mouse in Live View mode to display the Shortcuts List. Choose the option directly depend on different system requirements. The detail function illustration as below:





+ZOOM IN

Click the **right button** of your mouse and select **+ZOOM IN** to enlarge the image. The navigation screen indicates the part of the image being magnified. 8 Levels of zoom in/out are supported.

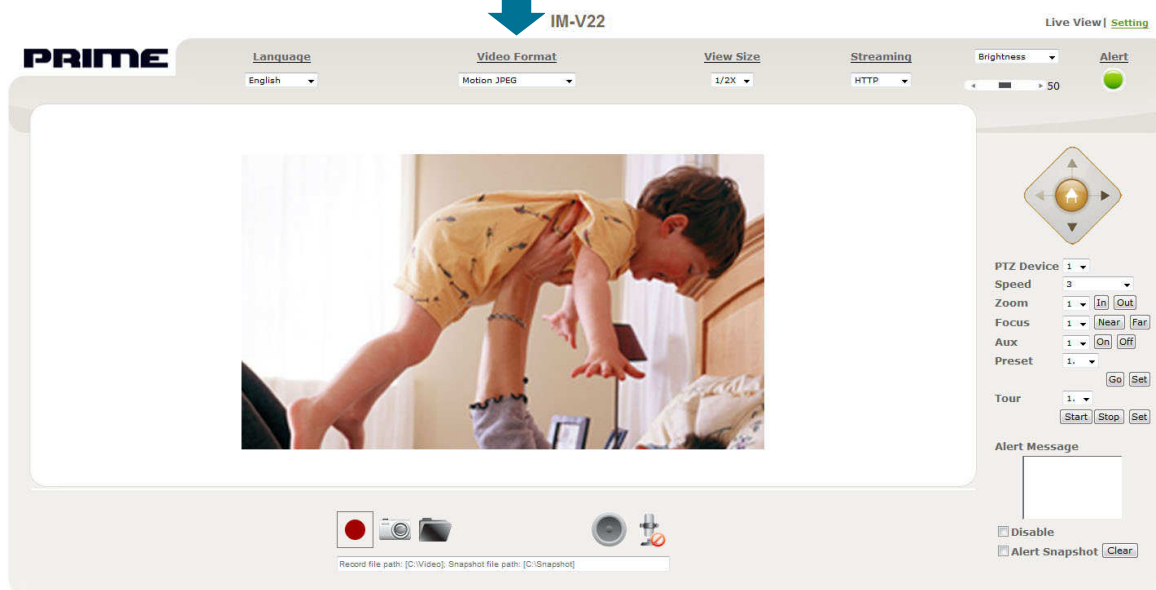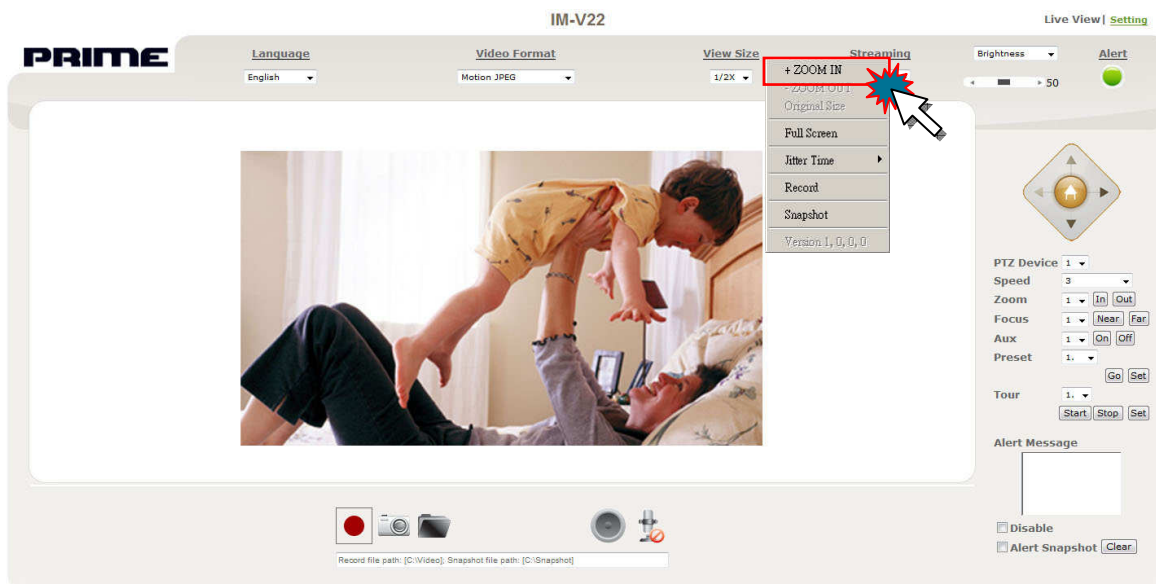

-ZOOM OUT

Click the **right button** of your mouse and select **+ZOOM out** to reduce the image.
8 Levels of zoom in/out are supported.

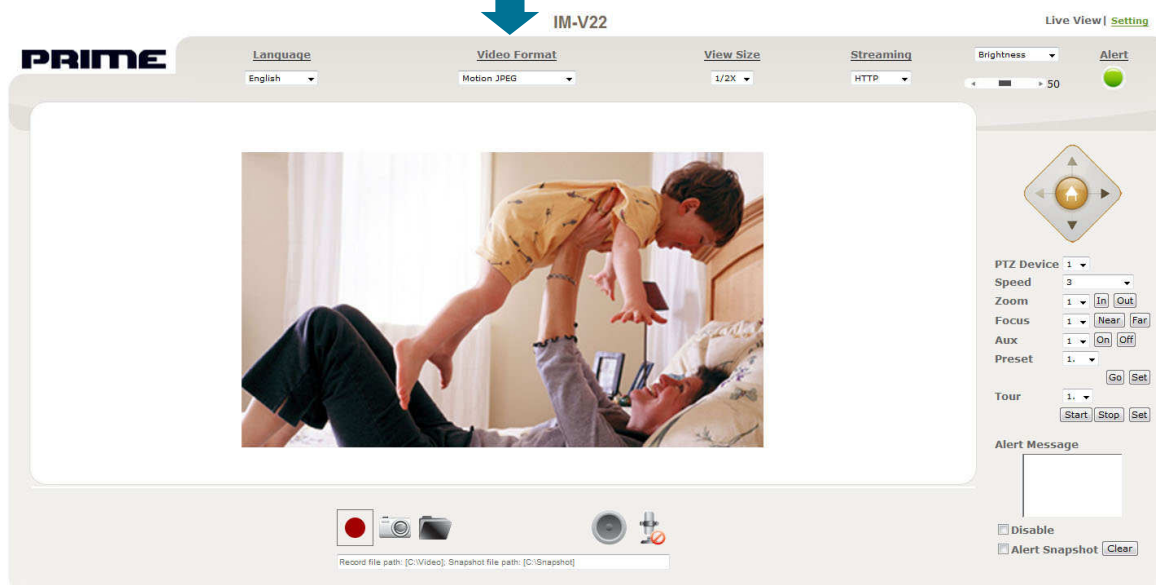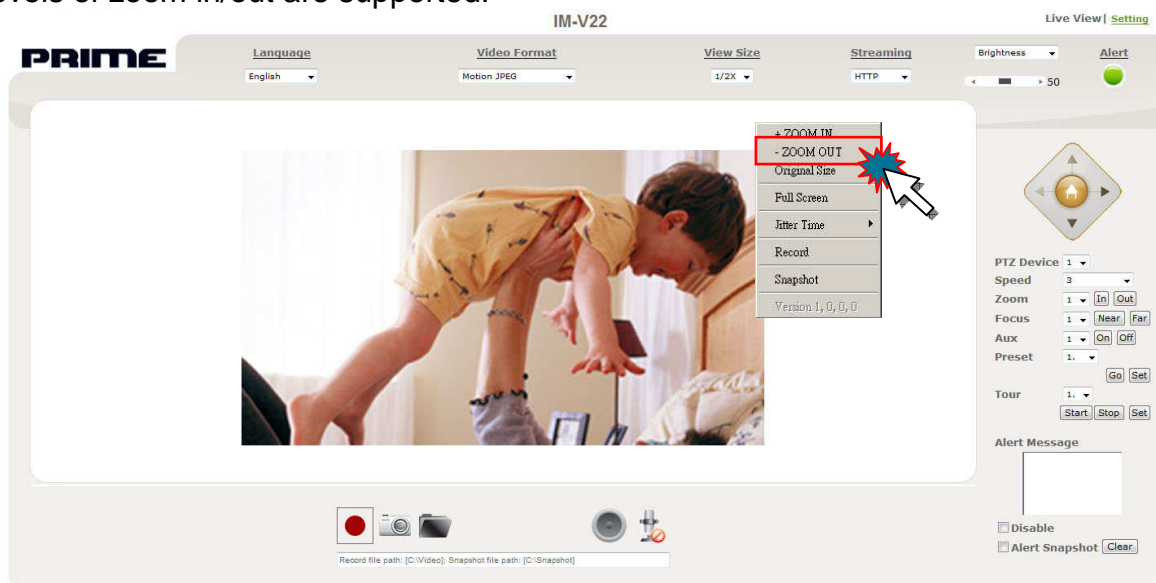


NOTE :

You can also Zoom In/Out the image by press the scroll wheel button of your mouse.


Original Size

No matter what the multiple of digital zoom is, you can reset the image size by click the **right button** of your mouse and select **Original Size**.

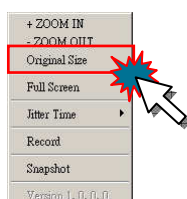

Full Screen

Click the **right button** of your mouse and select **Full Screen** to change the screen to full screen mode and release it by click the button again. You can also release it by click the "**ESC**" button on the keyboard.

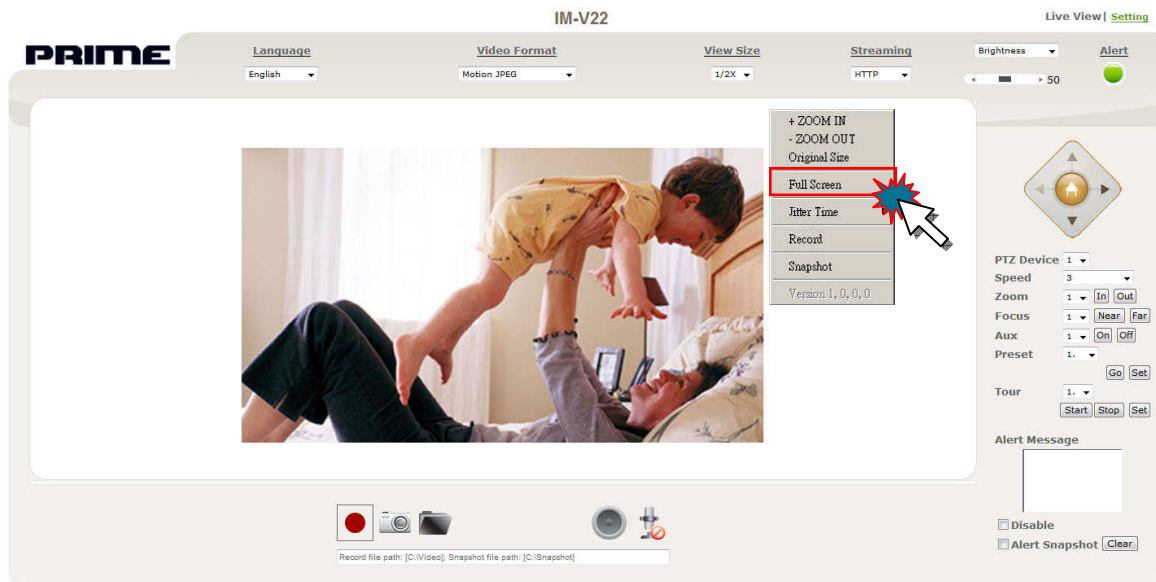

NOTE :

You can also use the other shortcuts function when it is enable.

Jitter Time


Click the **right button** of your mouse and select **Jitter Time** to set up the buffer time to make audio sync which can helps the video and audio smoother.

It is not a standard settings but according to your bandwidth to adjust the buffer time.

7 kinds of parameters are supported as below: N/A, 150ms, 300ms, 500ms, 1s, 3s and 5s.

The delay time will appear probably in the image if the jitter butter time is highest.

150ms is the default parameter.

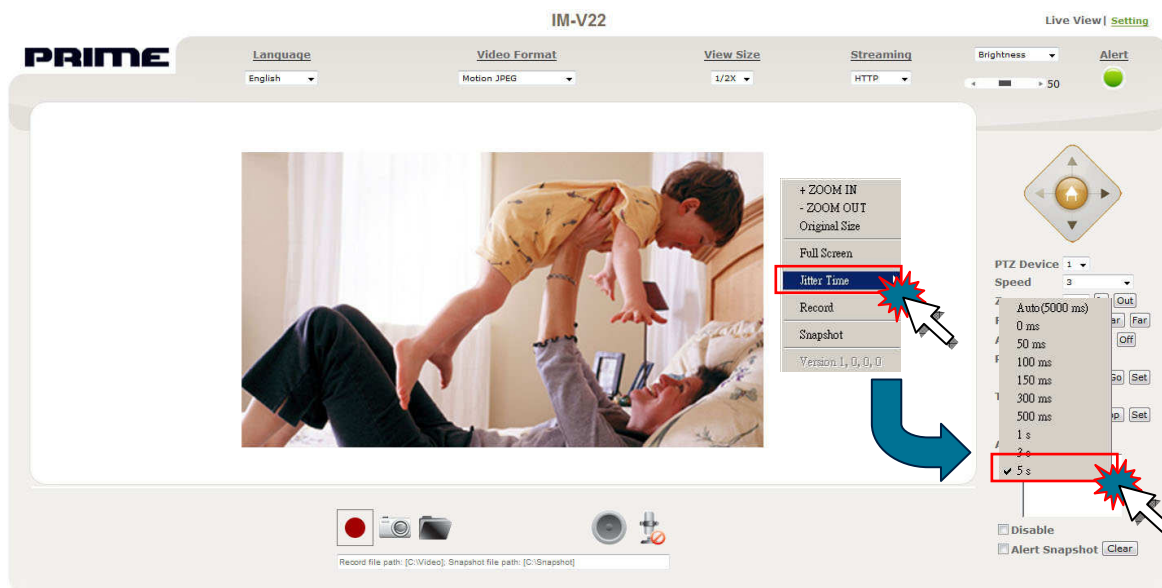

Record

Click the **right button** of your mouse and select **Record** to start to record the image and the file will saved at the default path. Stop the recording by click the button again.

You can also start /stop recording by press  and  on the shortcut bar.


The record icon of Shortcut Bar will change the status and the Live View image will display with the red square signal in the left corner when it is recording.



Snapshot

Click the **right button** of your mouse and select **Snapshot** to Snapshot the image and the file will save at the default path.

You can also take snapshot by press  on the shortcut bar.

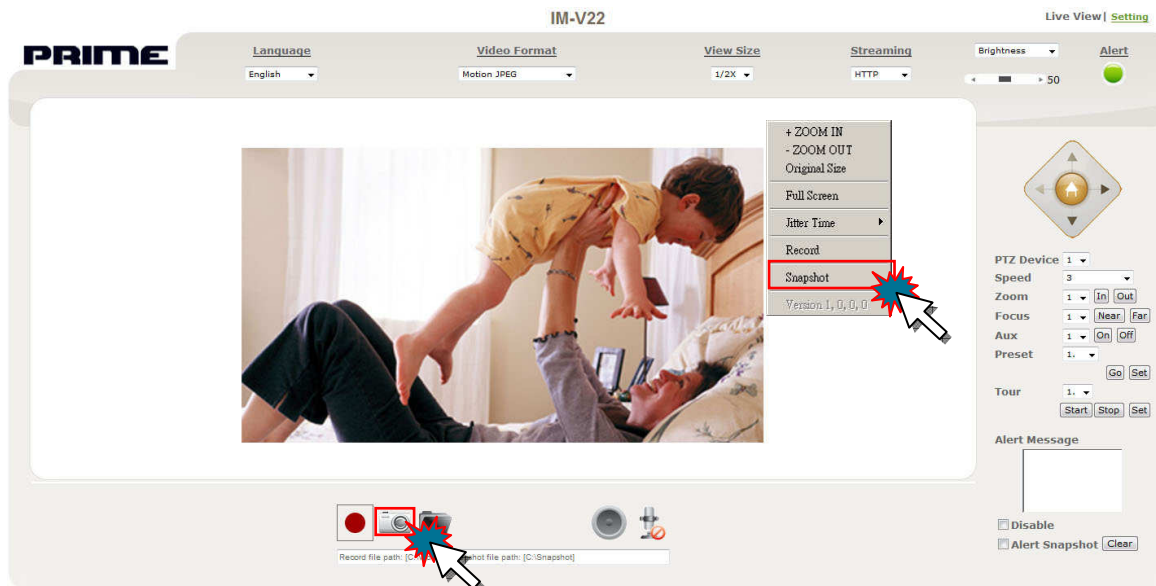

Version

Show the ActiveX Control version by click the **right button** of your mouse and you will see the version on the bottom.




NOTE :

The version will depend on the actual product spec of shipment.


Shortcut Bar

Enable/Disable the application function from Shortcut Bar.

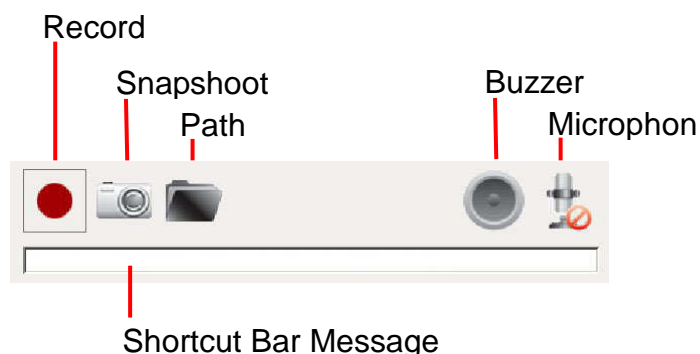


Microphone

Click the thumbnail of the **Microphone** on the shortcut bar to enable/disable it (one-way audio).

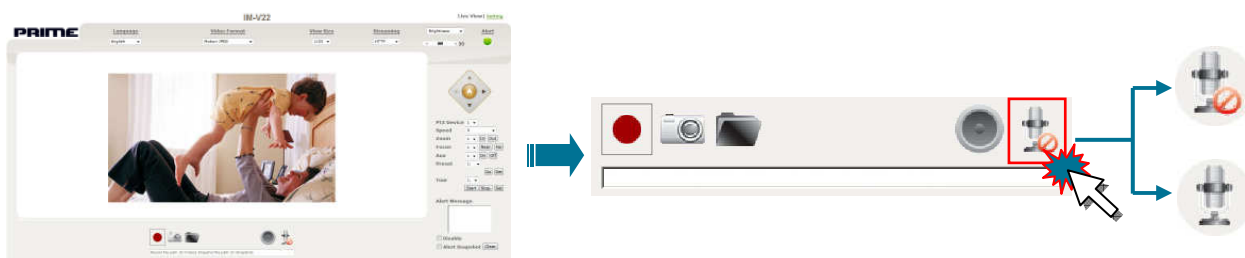


- Transmit the voice into the IM-V22 IP IR Dome Camera by using the PC's microphone.

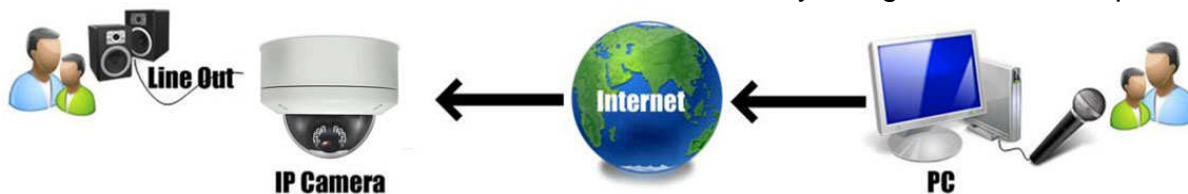


Buzzer


Click the thumbnail of the **Buzzer** on the shortcut bar to enable/disable it (one-way audio).

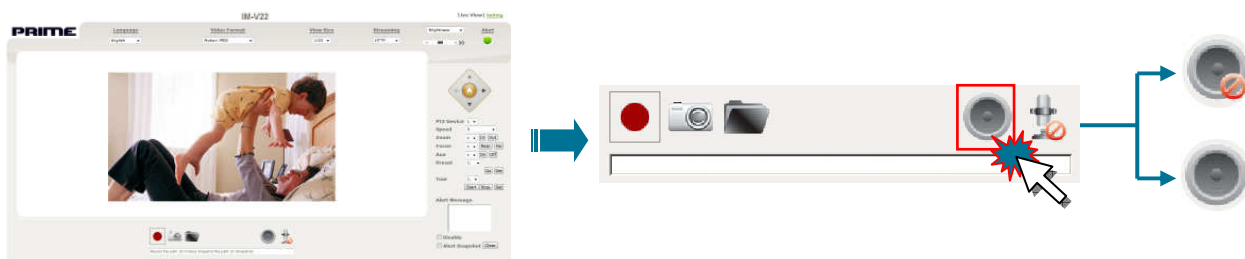

- It can receive the voice of the microphone from the IM-V22 IP IR Dome Camera.

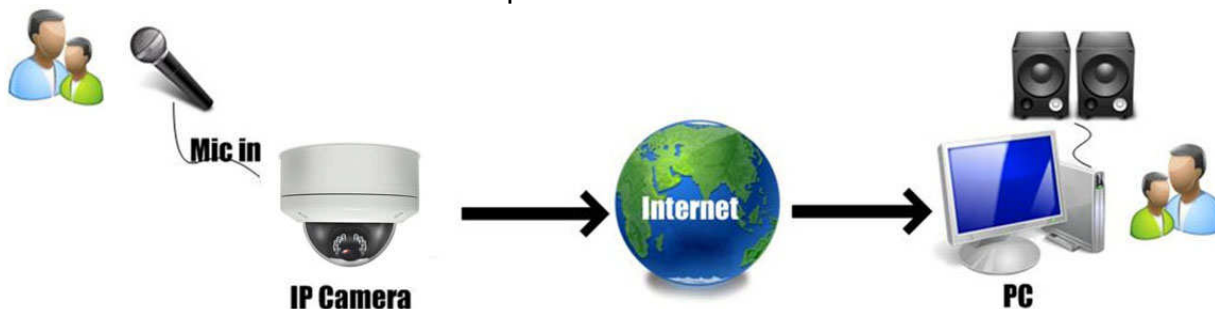

- Enable the **Microphone** and **Buzzer** at the same time to achieve the two-way audio application if you like it.

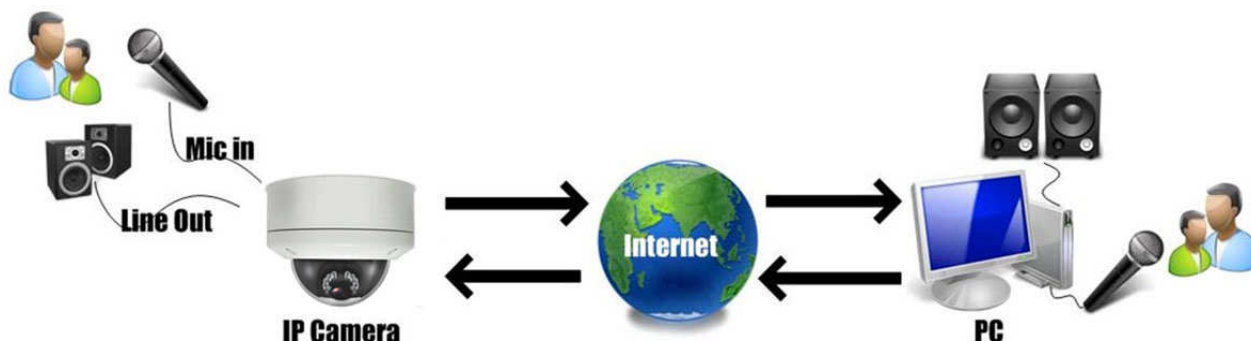

NOTE :


Adjust the parameter of the audio according to the **Audio Setting**.
It will hide the **Audio** icon from the Live View if the Audio Function is disabled.



Path

Click the thumbnail of the **Path Setting** on the shortcut bar to change the saving folder path.

Please see the detail setting as below: **Path**, **Filename Prefix** and **Recording Limit**

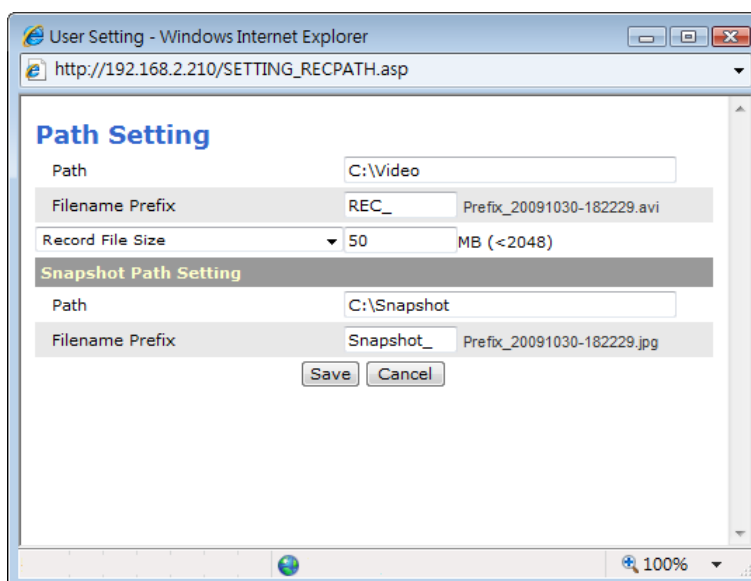

NOTE :

Due to the path setting will saved the modification into ActiveX Control and the *.ini file.
No matter what the type of the IP Camera is changing, the path will follow the same folder to save it.

1. Path

To assign a folder for saved the **Record** and **Snapshot**, and the file would be saving to the default folder. You can also change the other folder to save the files as you want.

Function	Default Path
Record	C:\Video
Snapshot	C:\Snapshot

2. Filename Prefix

To set up a prefix of the filename which you are recorded or snapshotted, and it will follow up the format to save it.

Please see the detail information as below:

Type	Prefix	Fixed Format
Record	Rec_	YY/MM/DD-HH:MM:SS.avi
Snapshot	Snapshot_	YY/MM/DD-HH:MM:SS.jpg

3. Record Limit


The **Record Path Setting** supported only and it has limit of file size.

IM-V22 IP IR Dome Camera will create the fixed recording file according to this setting.

It provides two kinds of setting for record file size as below:

Record File Size

Record Duration.

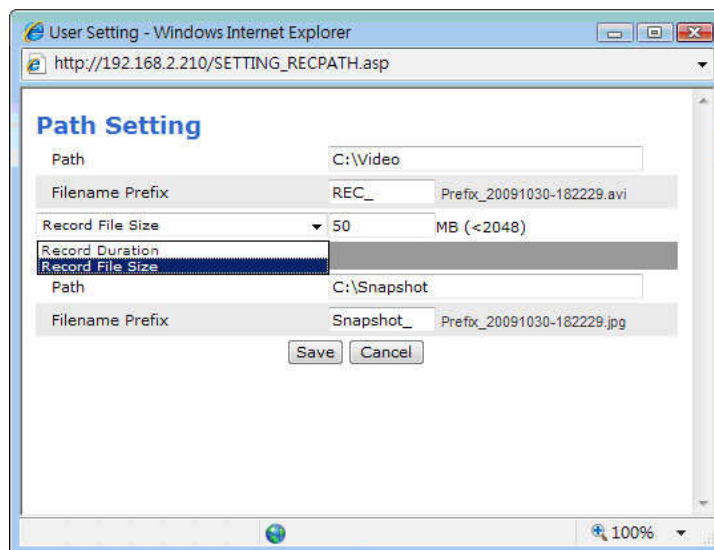

Record File Size

Record File Size 50 MB (<2048)

50 MB is the default size of the record file and the limit is 2048MB.

Record Duration

Record Duration 50 Seconds

50S econds is the default duration of the record file and the limit is 99999 Seconds. The default duration is the 50 Seconds, and the limit is the 99999 Seconds.

NOTE :


No matter what the type is, the value will keep the same figure.

Snapshot

Snapshot the Live View image

Click the thumbnail of the **Snapshot** on the shortcut bar to Snapshot the image in Live View and the file will save at the default path.

The icon of the Snapshot will flash the status when Snapshot.

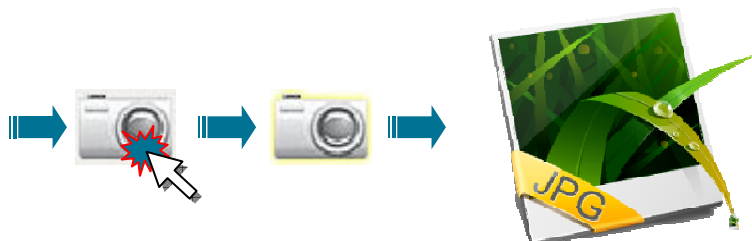


Record

Record the streaming image.

Click the thumbnail of the Record on the shortcut bar to record the image in Live View and the file will save at the default path.

The icon of the Record will display with red square signal in the bottom of the left corner when record.

The Record can detect the status of web browser and it will keep the recording image file completely when the Network disconnection suddenly.

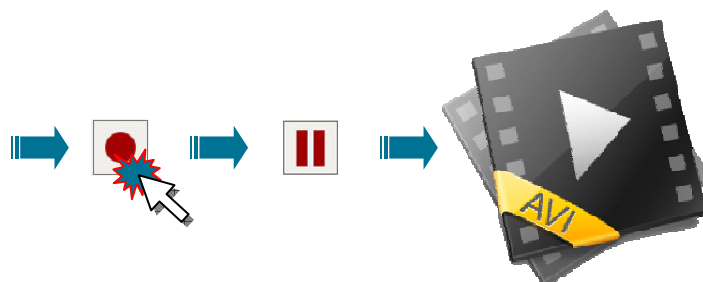

Shortcut Bar Message

Display the information of record or Snapshot in the Shortcut Bar Message.

All of the status for Shortcut Bar Message, please see the illustration as below:



- Login Record file path: [C:\Video]; Snapshot file path: [C:\Snapshot]



- Record Start recording to : C:\Video\REC__%Y%m%d-%H%M%S.avi
Recording to C:\Video\REC__%Y%m%d-%H%M%S.avi is stopped
Fail to record: C:\Video\REC __%Y%m%d-%H%M%S.avi



- Snapshot Snapshot: C:\Snapshot\Snapshot__20091102-181620-804.jpg has been saved.
Fail to snapshot in path C:\Snapshot

NOTE :

The setting of the path and filename will follow the **Path Setting**.

Setting User Preferences

The Setting menu let you change the following settings:

Basic Setting

System
Video/Image
Audio
PTZ
User
Network
Date/Time
IP Filtering
Storage

Application Setting

Event
Recording List
Motion Detection
Blind Detection
Privacy Mask
Firmware Upgrade
Factory Default
Reboot

* After each setting, click **Save** to save and apply them.

PRIME

IM-V22

Live View | Setting

Basic Setting

System

System

[System Log](#)

[Video / Image](#)

[Audio](#)

[PTZ](#)

[User](#)

[Network](#)

[Date / Time](#)

[IP Filtering](#)

[Storage](#)

Application Setting

[Event](#)

[Recording List](#)

[Motion Detection](#)

[Blind Detection](#)

[Privacy Mask](#)

[Firmware Upgrade](#)

[Factory Default](#)

[Reboot](#)

System Setting

System Info	
Device Name	IM-V22 Set
MAC Address	A8:55:6A:00:01:09
IP Address	192.168.20.229
Network Mask	255.255.255.0
Gateway	192.168.20.1
Model	IM-V22
Hardware Version	00
Firmware Version	V1.00 STD-1
Firmware Build Time	Sep 10 2010 11:36:03
Current Viewers	0

System Log

```

1970 Jan  1 08:00:19 : System boot up.
2010 Sep 27 16:52:07 : HTTPD listening on port 80
2010 Sep 27 17:25:11 : Group parameter update: Time
2010 Sep 27 17:25:54 : [192.168.20.49] authorization failed to start streaming
2010 Sep 27 17:25:54 : [192.168.20.49] root starts live view
2010 Sep 27 17:25:54 : [192.168.20.49] root starts live view
2010 Sep 27 17:25:54 : [192.168.20.49] root starts live view
2010 Sep 27 17:25:54 : [192.168.20.49] root starts live view
2010 Sep 27 17:31:59 : Group parameter update: Time
2010 Sep 27 17:37:11 : Group parameter update: Time
2010 Sep 27 17:37:13 : Group parameter update: Time
2010 Sep 27 17:37:45 : [192.168.20.49] authorization failed to start streaming
2010 Sep 27 17:37:45 : [192.168.20.49] root starts live view
2010 Sep 27 17:37:45 : [192.168.20.49] root starts live view
2010 Sep 27 17:37:45 : [192.168.20.49] root starts live view

```

Basic Setting

The Basic Setting menu lets you view the Basic Setting for IM-V22 IP IR Dome Camera and change the following setting:

System	System
	System Log
Video Image	Video
	PreProc/Overlay
	Sensor
Audio	
User	
Network	Network Setting
	Stream Setting
	PPPoE
	DDNS
	UPnP
	SMTP
	SAMBA
	Notification
	Multicast

Date/Time

IP Filtering

System

System Setting

Device Name: Give the name of your camera here. Complete the setting by Click **Set**.

MAC Address, IP Address, Network Mask, and Gateway: Network information

Model: Display the product model name.

Hardware Version, Firmware Version and Firmware Build time: Firmware information.

Current Viewers: The number of viewers who are currently accessing the video stream.

The screenshot shows the web interface for the IM-V22 camera. The left sidebar contains the 'Basic Setting' menu with options: System, System Log, Video / Image, Audio, PTZ, User, Network, Date / Time, IP Filtering, Storage, Application Setting, Event, Recording List, Motion Detection, Blind Detection, Privacy Mask, Firmware Upgrade, Factory Default, and Reboot. The main content area is titled 'System Setting' and contains a table with the following data:

System Info		Set
Device Name	IM-V22	
MAC Address	A8:55:6A:00:01:09	
IP Address	192.168.20.229	
Network Mask	255.255.255.0	
Gateway	192.168.20.1	
Model	IM-V22	
Hardware Version	00	
Firmware Version	V1.00 STD-1	
Firmware Build Time	Sep 10 2010 11:36:03	
Current Viewers	0	

Below the table is a 'System Log' section showing a list of events with timestamps and descriptions, such as 'System boot up.', 'HTTPD listening on port 80', and 'root starts live view'.

System Log

IM-V22 IP IR Dome Camera allows administrator to view all of the login information, including boot record, video streaming mode, login IP, changes, and the date/time information. You can save the entries to a Word document by manual.

Notice all of the information is deleted when you turn off the IM-V22 IP IR Dome Camera.

The screenshot shows the 'System Log' configuration page for the IM-V22 camera. The left sidebar contains a menu with options like Basic Setting, System, System Log, Video / Image, Audio, PTZ, User, Network, Date / Time, IP Filtering, Storage, Application Setting, Event, Recording List, Motion Detection, Blind Detection, Privacy Mask, Firmware Upgrade, Factory Default, and Reboot. The main content area is titled 'System Log' and includes the following settings:

- System Log: Max Size (100000)
- Critical Log: ☒ Display
- Warning Log: ☒ Display
- Information Log: ☒ Display
- Syslogd Service: ☐ Start
- Syslogd Service: Server (highlighted with a red box)
- Syslogd Service: Port (514)

A blue arrow points to the Server field with the text: 'Fill in the IP address of Syslogd Service.'

- **System Log**

Max Size: Set the Number allowed for the log file, 100000 is the default.
 Critical Log: Click **Display** to show the most important log file.
 Warning Log: Click **Display** to show the warning log file.
 Information Log: Click **Display** to show the information log file.

- **Syslog Service**

Syslogd Service: Click **Start** to send the log file to server.
 Server: Fill in the IP address that the Syslogd Service is.
 Port: Set the port number.

Video/Image
Video

- **Video Setting**

Sensor Mode: Set the mode of the sensor from UXGA Mode (1600x1200) and WXGA Mode (1280x720).

- **H264**

Resolution: Set the resolution of the image from WXGA (1280x720), 640x352 and 320x176.

Frame Rate (FPS): Set the frame rate from 1, 3, 5, 10, 15, 20, 25 and 30.

Quality: It provides two kinds of the quality as below:

Bitrate: 512, 640, 768, 1024, 1280, 1536, 2048, 2560 and 3072

Fix Quality: Best, Better, Normal, Fast and Fastest.

GOP: Set the frames for GOP from 1, 5, 10, 15, 30, 60, 120 and 150.

- **H264 (Sub)**

Resolution: Set the resolution of the image from 640x352, 320x176 and 192x112.

Frame Rate (FPS): Set the frame rate from 1, 3, 5, 10, 15, 20, 25 and 30.

Quality: It provides two kinds of the quality as below:

Bitrate: 384, 512, 640, 768, 1024, 1280, 1536, 2048, 2560 and 3072

Fix Quality: Best, Better, Normal, Fast and Fastest.

GOP: Set the frames for GOP from 1, 5, 10, 15, 30, 60, 120 and 150.

- **Motion JPG**

Resolution: Set the resolution of the image from 640x352, 320x176 and 192x112.

Frame Rate (FPS): Set the frame rate from 1, 3, 5, 10 and 15.

Quality: Set the quality from 512, 640, 768, 1024, 1280, 1536, 2048, 2560 and 3072

PRIME IM-V22 [Live View](#) [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Video](#)
- [PreProc / Overlay](#)
- [Sensor](#)
- [Audio](#)
- [PTZ](#)
- [User](#)
- [Network](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)
- Application Setting**
 - [Event](#)
 - [Recording List](#)
 - [Motion Detection](#)
 - [Blind Detection](#)
 - [Privacy Mask](#)
 - [Firmware Upgrade](#)
 - [Factory Default](#)
 - [Reboot](#)

Video / Image Setting

Video Setting

Sensor Mode: ☒ UXGA Mode (1600x1200) ☐ WXGA Mode (1280x720)

H264

Resolution: UXGA(1600x1200)

FrameRate(FPS): 10 frames

Quality: ☒ Bitrate 1024 ☐ Fix Quality Best

GOP: 15 frames

H264 (Sub)

Resolution: VGA(640x480)

FrameRate(FPS): 15 frames

Quality: ☒ Bitrate 1024 ☐ Fix Quality Best

GOP: 15 frames

Motion JPG

Resolution: UXGA(1600x1200)

FrameRate(FPS): 3 frames

Quality: Bitrate 1024

PreProc/Overlay

• **PreProc**

Camera Position: Set the position of the camera from Default, Flip, Mirror and Rotate 180.

The screenshot displays the web interface for the IM-V22 camera. The interface is divided into a left sidebar and a main content area. The sidebar, under the 'PRIME' logo, lists various settings categories: Basic Setting (System, Video / Image, Video, PreProc / Overlay, Sensor), Audio, PTZ, User, Network, Date / Time, IP Filtering, Storage, Application Setting (Event, Recording List, Motion Detection, Blind Detection, Privacy Mask, Firmware Upgrade, Factory Default, Reboot). The 'PreProc / Overlay' category is selected. The main content area shows the 'PreProc Setting' and 'Overlay Setting' sections. The 'PreProc' section includes a 'Camera Position' dropdown menu set to 'Default'. The 'Overlay Setting' section includes a 'Language' dropdown set to 'English', a 'Display Mode' section with checkboxes for 'Date', 'Time', and 'Text', a 'Foreground Color' input field set to '#FFFFFF', a 'Background Color' input field set to '#000000', a 'Display Text' input field set to 'IPCAM', a 'DateTime Position' section with X and Y coordinates (X: 0, Y: 0), a 'Text Position' section with X and Y coordinates (X: 0, Y: 37), and an 'Alpha Blending' dropdown set to '0'. 'Save' and 'Reset' buttons are located at the bottom of the settings area.

PRIME IM-V22 [Live View](#) | [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Video](#)
- [PreProc / Overlay](#)**
- [Sensor](#)

Audio

PTZ

User

Network

Date / Time

IP Filtering

Storage

Application Setting

- [Event](#)
- [Recording List](#)
- [Motion Detection](#)
- [Blind Detection](#)
- [Privacy Mask](#)
- [Firmware Upgrade](#)
- [Factory Default](#)
- [Reboot](#)

PreProc Setting

PreProc

Camera Position: Default

Overlay Setting

Overlay

Language: English

Display Mode: ☐ Date ☐ Time ☐ Text

Foreground Color: #FFFFFF

Background Color: #000000

Display Text: IPCAM

DateTime Position: X: 0 (0-704) Y: 0 (0-576)


Text Position: X: 0 (0-704) Y: 37 (0-576)

Alpha Blending: 0

[Save](#) [Reset](#)

• Overlay Setting

- Language: Set the language for the overlay.
- Display mode: Set the display mode from Date, Time and Txt or not.
- Foreground color: Selects the foreground color for Date, Time and Text to display. Click the color block in order to show the palette. Move the arrow point and click on the color what you like.
- Background color: Selects the background color for Date, Time and Text to display. Click the color block in order to show the palette. Move the arrow point and click on the color what you like.
- Display text: Fill in the text what you want to show on the screen, e.g. Lobby IP Cam.
- Date/time position: Set the value of the X/Y-axis for the location that the Date/Time will show on the screen. (Anyone on the four corners is available.)
- Text position: Set the value of the X/Y-axis for the location that the text will show on the screen. (Anyone on the four corners is available.)
- Alpha Blending: Set the Alpha Blending for the transparency of the overlay from 0%, 50% and 90%.

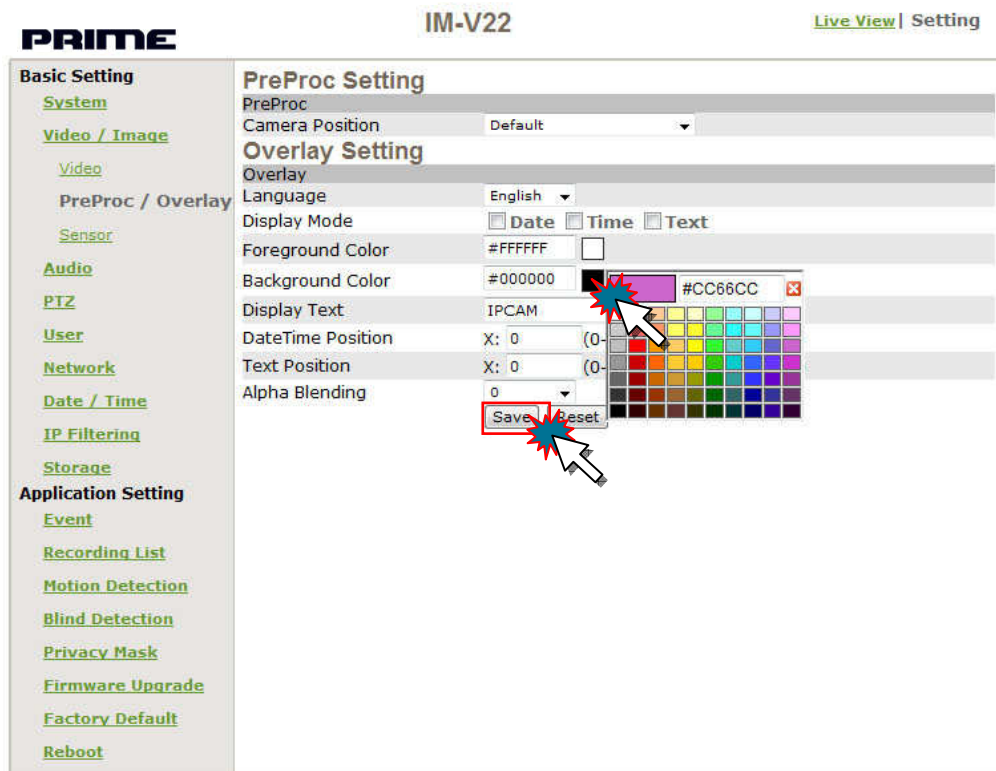

Sensor

- Day/Night Setting: Set the mode for the Day and Night from Auto, Manual and External.
You can also select Day/Night ambiguity suppression in Auto mode.

PRIME
IM-V22
[Live View](#) | [Setting](#)

Basic Setting
[System](#)
[Video / Image](#)
[Video](#)
[PreProc / Overlay](#)
Sensor
[Audio](#)
[PTZ](#)
[User](#)
[Network](#)
[Date / Time](#)
[IP Filtering](#)
[Storage](#)
Application Setting
[Event](#)
[Recording List](#)
[Motion Detection](#)
[Blind Detection](#)
[Privacy Mask](#)
[Firmware Upgrade](#)
[Factory Default](#)
[Reboot](#)

Sensor Setting

Day/Night Setting

Manual

Status Day

Mode

☐ Day/Night
 ambiguity suppression

Switching Delay

1

conds

AE Setting

Backlight

☐ Enable

Slow Shutter

OFF

AGC

Mid

Flicker Control

OFF

Save

Reset




DAY



NIGHT

- Switching Delay: Set the time for switching delay from 0~15 Seconds.
- AE Setting Backlight: Click **Enable** to set the backlight for the image.

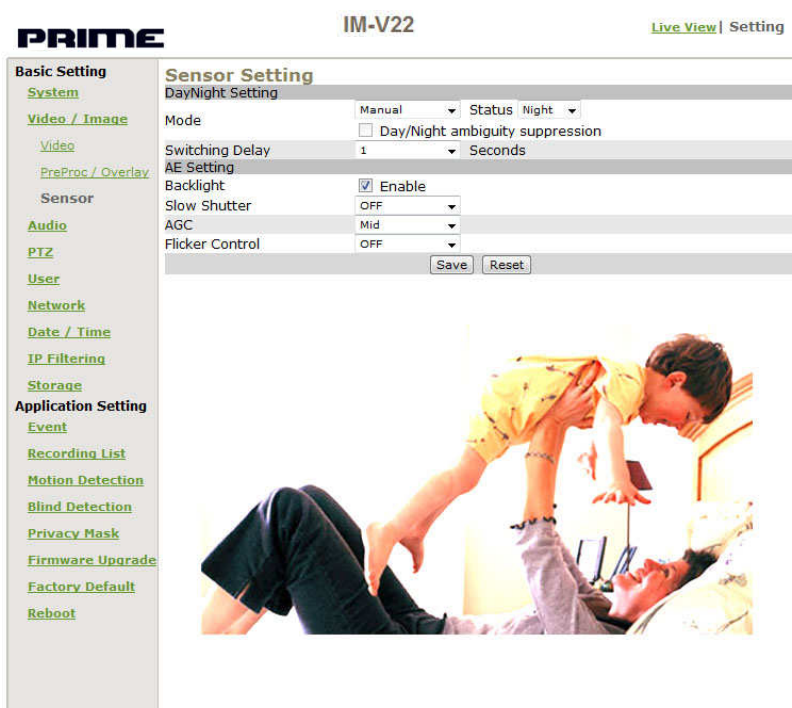

- Slow Shutter: Set the Slow Shutter from OFF, X2, X4, X8 and X16.
- AGC: Set the AGC from Low, Mid and High.
- Flicker Control: Set the Flicker Control from 50Hz, 60Hz and OFF.

Audio

Audio

Set the Audio mode from Full-Duplex, Half Duplex, Simplex-Speaker Only, Simplex-Microphone Only and Audio Off.

Full duplex: Microphone and Amplifier using allowed of at the same time, or turning them off.

Half duplex: Microphone or Amplifier using allowed of by manual switch.

Simplex microphone only: Microphone use only is allowed.

Simplex amplifier only: Speaker use only is allowed.

Audio off: Turn the audio off; i.e. both of the microphone and speaker will be off.

Audio in

Codec: Select the type of Codec for audio encryption from G726/32, G711a, G711u and AMR.

Gain: Set the Gain from 0, 25, 50, 75 and 100.

Audio out

Codec: Select the type of Codec for audio decryption from G726/32, G711a and G711u.

Gain: Set the Gain from 0, 25, 50, 75 and 100.

Code	Compression Bitrates (Kbit/s)	Note
G711a	64	PCM (For American System)
G711u	64	PCM (For European System)
G726/32K	32	ADPCM
AMR	4.75	

PRIME IM-V22 [Live View](#) [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- Audio**
- [PTZ](#)
- [User](#)
- [Network](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)

Application Setting

- [Event](#)
- [Recording List](#)
- [Motion Detection](#)
- [Blind Detection](#)
- [Privacy Mask](#)
- [Firmware Upgrade](#)
- [Factory Default](#)
- [Reboot](#)

Device Audio Setting

Audio Mode: Full-Duplex

Audio In

Codec: G726/32

Gain: 50

Audio Out

Codec: G711a

Gain: 50

[Save](#) [Reset](#)

User

IM-V22 IP IR Dome Camera provides the administrator to set the privileges for administrator, operator and viewer that ensure the security and control of the camera.

According to the requirements of the users, administrator owns the authority to define the privilege for each user.

The privileges of the administrator, operator, and viewer are listed as below:

	User	Administrator	Operator	Viewer
Live View				
Live View		v	v	v
Setting				
Basic Setting				
System		v	v	
Video / Image		v	v	
Audio		v	v	
PTZ		v	v	
User		root		
Network		v		
Date / Time		v		
IP Filtering		v		
Application Setting				
Event		v	v	
Motion Detection		v	v	
Privacy Mask		v	v	
Firmware Upgrade		root		
Factory Default		v		
Reboot		v		

PTZ

PTZ Camera Port Setting

Camera Driver: IM-V22 supports the PTZ control of those analog PTZ cameras use the drivers of Pelco-D, Pelco-P. Refer to the user manual of your PTZ cameras, and you will know which driver to select. Moreover, select the serial number (address) of the targeted PTZ camera for controlled setting. If the selection is none, please upload the PTZ driver first.

PTZ Driver Manager

In the Camera Driver column, list all the drivers that are installed in the video server. Select **Delete** to eliminate any selected driver.

PTZ Driver Upload

Upload the PTZ drivers from **www.3Svision.com** for more camera drivers which are supported.

Serial Port Setting

Port: COM0
 Port Mode: RS485
 Baud rate: Select the measure of the symbol rate from 2400, 4800 and 9600.
 Data bits: Select the number of bits used to represent one character of data from 7 and 8.
 Stop bits: Select the bit used in asynchronous communications to indicate the end of a piece of data from 1 and 2.
 Parity: Select the parity from None, Even and Odd.

PRIME IM-V22 [Live View](#) [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Audio](#)
- [PTZ](#)
- [User](#)
- [Network](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)
- Application Setting**
 - [Event](#)
 - [Recording List](#)
 - [Motion Detection](#)
 - [Blind Detection](#)
 - [Privacy Mask](#)
 - [Firmware Upgrade](#)
 - [Factory Default](#)
 - [Reboot](#)

PTZ Configuration

PTZ Camera Port Setting

Camera Driver 1 : Pelco-D Address : 0

Camera Driver 2 : none Address : 0

PTZ Driver Manager

Camera Driver : Pelco-D [Delete](#)

PTZ Driver Upload

[Browse...](#) [Upload](#) [Reset](#)

Serial Port Setting

Port : COM0

Port Mode : RS485

Baud rate : 9600

Data bits : 8

Stop bits : 1

Parity : None

[Save](#) [Reset](#)

User List



Use this menu to set the following setting:

Add: Add a new user and to define a different privilege.

Update: Change the privilege or password of a user.

User name changed is not allowed.

Delete: Delete a user here.

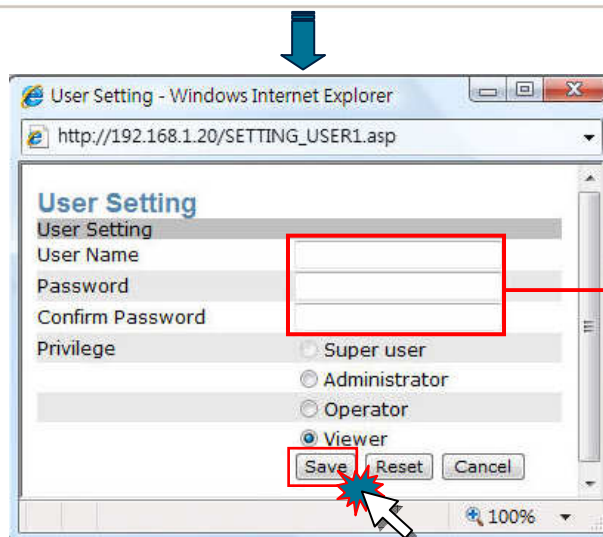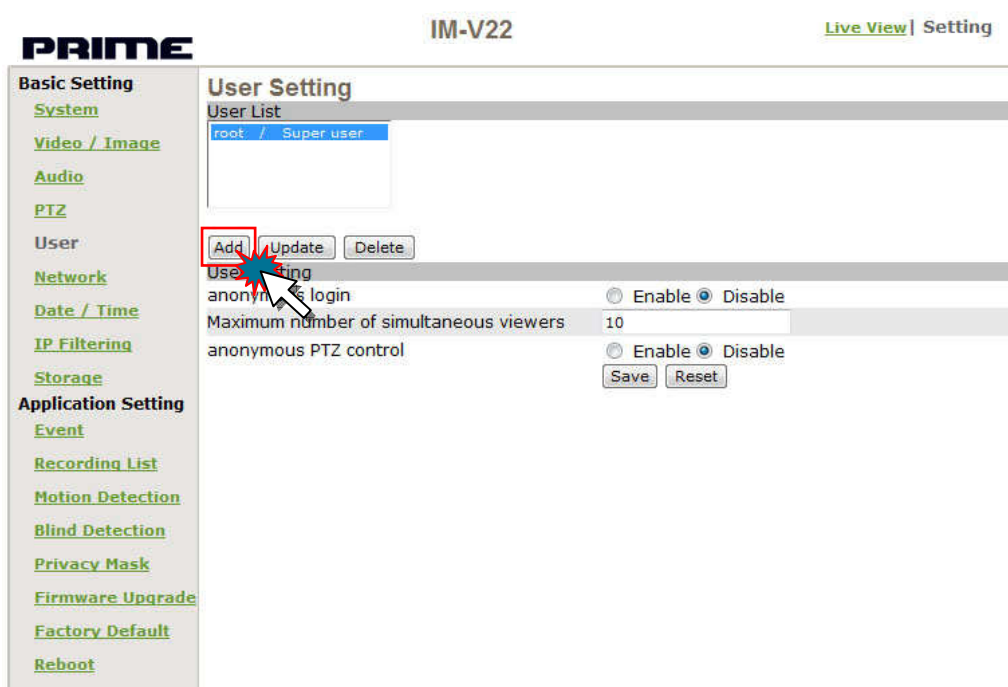

Fill in the username,
password and
privilege as required.

User Setting

- **Anonymous login:** Click **Enable** to allow anyone user to login.
For the special demand, login to the browse without username and password is allowed.
The selection of **Disable** is recommended for the security.
- **Maximum number of simultaneous viewers**
Depending on the bandwidth and requirements, a limit up to 20 viewers who are allowed to view the camera simultaneously can be defined.

The root can not be deleted but can be updated.

Activate the anonymous view and camera rotation functions; define the number of viewers who are allowed for on-line review simultaneously.



Attention: The default user name and password have been set as "root".

The root user cannot be deleted but can be changed. For the safety consideration, it is recommended to change the root's password when the first time login. You can press the reset button to reset to factory default.

Network

Network Setting

• IP Assignment

DHCP

DHCP (Dynamic Host Configuration Protocol) is a protocol that enables automatic assignment of TCP/IP information to the client. Each DHCP client connects to the DHCP server to access its network setting information, including IP address, gateway, and DNS server.

The IP address of the camera is 192.168.0.20 by default when DHCP is "OFF". When you select "DHCP ON" and access the DHCP network environment, the camera will automatically send a DHCP packet to request an IP address. This IP address is assigned automatically from the DHCP server on the network. No additional settings are required for this page unless you need to change the network configuration. The DHCP status of the camera is "OFF" by default.

Other settings:

For IP address, Subnet mask, Default gateway, DNS 1, and DNS 2, the DHCP server will assign these values automatically when DHCP is in "ON" status; otherwise, you need to key in the values manually.

PRIME IM-V22 [Live View](#) [Setting](#)

Basic Setting	
System	
Video / Image	
Audio	
PTZ	
User	
Network	
Network	
Services	
Streaming	
PPPoE	
DDNS	
UPnP	
SMTP	
SMB	
Notification	
Multicast	
Date / Time	
IP Filtering	
Storage	
Application Setting	
Event	
Recording List	
Motion Detection	
Blind Detection	
Privacy Mask	
Firmware Upgrade	
Factory Default	
Reboot	


Network Setting	
IP Assignment	
DHCP	<input type="radio"/> On <input checked="" type="radio"/> Off
IP Address	192.168.20.229
Subnet Mask	255.255.255.0
Default Gateway	192.168.20.1
DNS 1	192.168.10.13
DNS 2	168.95.1.1
MAC Address	A8:55:6A:00:01:09
Save Reset	

NOTE :

The system will be set the Link-Local Address by automatically when there is no any IP address is assigned from the DHCP server.

Services

It can become the small FTP server to download the AVI or JPEG file from SAMBA or SD Card. The default status is enabling the function. Due to the function only provide the SAMBA and SD Card applications, not release to all FTP setting for user.

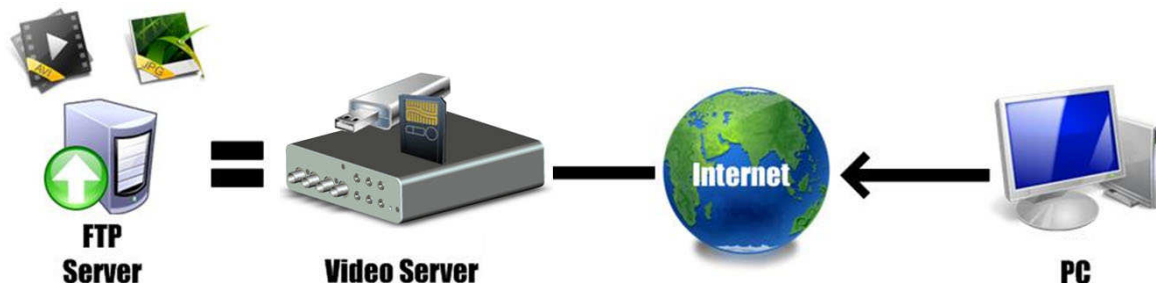

The default account and password is **ftp**, and you can only modify the password by yourself.

PRIME

IM-V22

[Live View](#) | [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Audio](#)
- [PTZ](#)
- [User](#)
- [Network](#)
- [Network](#)
- [Services](#)
- [Streaming](#)
- [PPPoE](#)
- [DDNS](#)
- [UPnP](#)
- [SMTP](#)
- [SAMBA](#)
- [Notification](#)
- [Multicast](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)
- Application Setting**
- [Event](#)
- [Recording List](#)
- [Motion Detection](#)
- [Blind Detection](#)
- [Privacy Mask](#)
- [Firmware Upgrade](#)
- [Factory Default](#)
- [Reboot](#)

Services Setting

FTP Service

Password (Default value:ftp)

Confirm Password

Stream Setting

Set the video streaming port here. (HTTP and factory default are recommended)

- **Streaming**

HTTP: Port 80 can pass through most firewalls. Video streams are transmitted through HTTP Port (80 by default) to ensure passage through firewalls.

RTSP: Port 554 uses a fixed port (i.e. TCP) or can be defined by users to ensure reliable data transmission. Video streams are transmitted through RTSP Port (554 by default) to avoid video fragment or mosaics due to poor transmission quality.

RTP: Port 50000 to 60000 are UDP ports and can be defined by users. They provide the fastest but also most unreliable transmission service. Video streams are transmitted through UDP Port (50000~60000 by default) to ensure the fastest image transmission. However, video fragment or mosaics may occur due to poor transmission quality.

The screenshot shows the web interface for the IM-V22 camera. The top bar includes the 'PRIME' logo, the model 'IM-V22', and links for 'Live View' and 'Setting'. The left sidebar is titled 'Basic Setting' and contains a list of menu items: System, Video / Image, Audio, PTZ, User, Network, Streaming, PPPoE, DDNS, UPnP, SMTP, SAMBA, Notification, Multicast, Date / Time, IP Filtering, Storage, Application Setting, Event, Recording List, Motion Detection, Blind Detection, Privacy Mask, Firmware Upgrade, Factory Default, and Reboot. The 'Streaming' menu item is selected. The main content area is titled 'Streaming Setting' and contains a table with the following data:

Streaming	
HTTP	80
RTSP	554
RTP	50000 ~ 60000

At the bottom of the table are 'Save' and 'Reset' buttons.

NOTE :

Please refer to the chapter of **Stream** for further detailed description.

PPPoE Setting (Dial-up Networking Setting)

Point-to-Point Protocol over Ethernet is a protocol that supports access to a high-speed wideband network using a PC and a wideband modem (such as xDSL, Cable, Wireless modem). The user need only to equip the PC with an Ethernet card and apply to an ISP and an ADSL provider (such as Chunghwa Telecom) for ADSL service to roam the Internet through ordinary twisted copper wires.

PPPoE setting must be executed in the LAN environment for your PC to connect to ADSL. Follow the steps below to complete the setting:

1. Dial: You can select whether or not to dial when you boot the machine.
2. Use DHCP or fixed IP for connection to the LAN environment.
3. Key in the IP address of the camera and enter "PPPoE Setting" following the route Setting → Basic Setting → Network → PPPoE.
4. Key in the xDSL "Username" and "Password" acquired from your ISP. Click **Save** to confirm the setting.
5. Where the ADSL modem and the camera is connected via a switch-hub, you can press "Reboot" or restart the machine manually to try PPPoE dialing when the setting of the camera has been completed.
6. A different IP address is obtained after each dial-up network connection. You can get the new IP address from Setting → Basic Settings → System. If you want to know the new IP address anytime, you must enter Setting → Basic Settings → Notification to set some settings. There are three ways to get information: 1. SMTP 2. FTP 3. HTTP. For details, refer to the Notification Setup Menu.



NOTE :

You can use the DDNS function to access the camera. Refer to the **DDNS Setting** for more information

• PPPoE

- Dial: You can select whether or not to dial when you boot the Camera.
(On boot or Off).
- Username: Enter the username provided by your ISP.
- Password: Enter the password.

• PPPoE Information

- IP Address: The IP address is acquired when the dialing has been executed successfully.
- Subnet Mask: The subnet mask information is acquired when the dialing has been executed successfully.
- Default Gateway: The gateway information is acquired when the dialing has been executed successfully.
- DNS: The ISP domain name is acquired when the dialing has been executed successfully.

PRIME

IM-V22

[Live View](#) | [Setting](#)

Basic Setting
[System](#)
[Video / Image](#)
[Audio](#)
[PTZ](#)
[User](#)
[Network](#)
[Network](#)
[Services](#)
[Streaming](#)
PPPoE
[DDNS](#)
[UPnP](#)
[SMTP](#)
[SMB](#)
[Notification](#)
[Multicast](#)
[Date / Time](#)
[IP Filtering](#)
[Storage](#)
Application Setting
[Event](#)
[Recording List](#)
[Motion Detection](#)
[Blind Detection](#)
[Privacy Mask](#)
[Firmware Upgrade](#)
[Factory Default](#)
[Reboot](#)

PPPoE Setting
PPPoE
Dial ☐ On boot ☒ Off
Username
Password

PPPoE information
IP Address
Subnet Mask
Default Gateway
DNS

DDNS (Dynamic Domain Name Server)

The IP address (Ex. 210.168.0.22) is like a telephone number, while the website address is like a name in an address book. The DDNS allows the user to access the website by entering the name of the website without memorizing a bunch of cold numbers.

When you apply for an Internet service, you will have at least one IP address from your ISP that is either fixed or dynamic. Most of the ADSL service providers will give you a dynamic IP for ADSL environments, which means your IP address will constantly change each time you connect to the Internet. As a result, users from WAN environments will have much difficulty finding the correct IP address. The DDNS (Dynamic DNS service) is created for exactly this kind of moment. By updating your WAN IP address each time you connect to the Internet, the DDNS helps you locate your website and access your website easily. You can find a lot of free DDNS service providers on the Internet, such as www.no-ip.com and www.DynDNS.org.

Some gateway-routers can directly communicate with DDNS. In this case, you may directly enter your DDNS account on the setting page in the Internet router, and then the router will update your WAN IP status whenever it is changed and report to the DDNS. If your router does not support direct communication with the DDNS, you can download a small application program on the DDNS service page to help you update your WAN IP.

- **DDNS**

Active: Enables/disables DDNS

DDNS Server: Currently we only support <http://dyndns.org>. This is a free domain name server provided by DynDNS. You may log on this website for relevant information and apply for free domain names.

Username: Your account for the domain name you applied for

Password: Your password for the domain name you applied for

Domain Name: The domain name you applied for.

PRIME IM-V22 [Live View](#) [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Audio](#)
- [PTZ](#)
- [User](#)
- [Network](#)
- [Network](#)
- [Services](#)
- [Streaming](#)
- [PPPoE](#)
- DDNS**
- [UPnP](#)
- [SMTP](#)
- [SMB](#)
- [Notification](#)
- [Multicast](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)

Application Setting

- [Event](#)
- [Recording List](#)
- [Motion Detection](#)
- [Blind Detection](#)
- [Privacy Mask](#)
- [Firmware Upgrade](#)
- [Factory Default](#)
- [Reboot](#)

DDNS Setting

DDNS

Active: ☐ Enable ☒ Disable

DDNS Server: ☒ dyndns.org ☐ 3322.org ☐ oray.net

Username:

Password:

Domain Name:

UPnP (Universal Plug and Play)

If you connect your camera to a router, IP allocator, or wireless AP, your camera will possibly be blocked by the NAT and can't be located on the Internet. To penetrate the firewall, activate the supportive item- UPnP. The Link URL shows the external IP address and the port of the router. Enter the IP address in the Internet Explorer to penetrate the NAT.

• UPnP Device

Active: yes (enable)/no (disable)
Device Name: the name of the UPnP device

• UPnP Traversal

Active: yes (enable)/no (disable)
Port Range: the range of the usable ports, from 32768 to 65535 as default
Link URL: After the network camera penetrates the firewall successfully, the actual external IP address and port will be shown.

PRIME

IM-V22

[Live View](#) | [Setting](#)

Basic Setting

[System](#)

[Video / Image](#)

[Audio](#)

[PTZ](#)

[User](#)

[Network](#)

[Network](#)

[Services](#)

[Streaming](#)

[PPPoE](#)

[DDNS](#)

[UPnP](#)

[SMTP](#)

[SAMB](#)

[Notification](#)

[Multicast](#)

[Date / Time](#)

[IP Filtering](#)

[Storage](#)

Application Setting

[Event](#)

[Recording List](#)

[Motion Detection](#)

[Blind Detection](#)

[Privacy Mask](#)

[Firmware Upgrade](#)

[Factory Default](#)

[Reboot](#)

UPnP Setting

UPnP Device

Active ☒ Yes ☐ No


Device Name

UPnP Traversal

Active ☐ Yes ☒ No


Port Range ~

Link URL

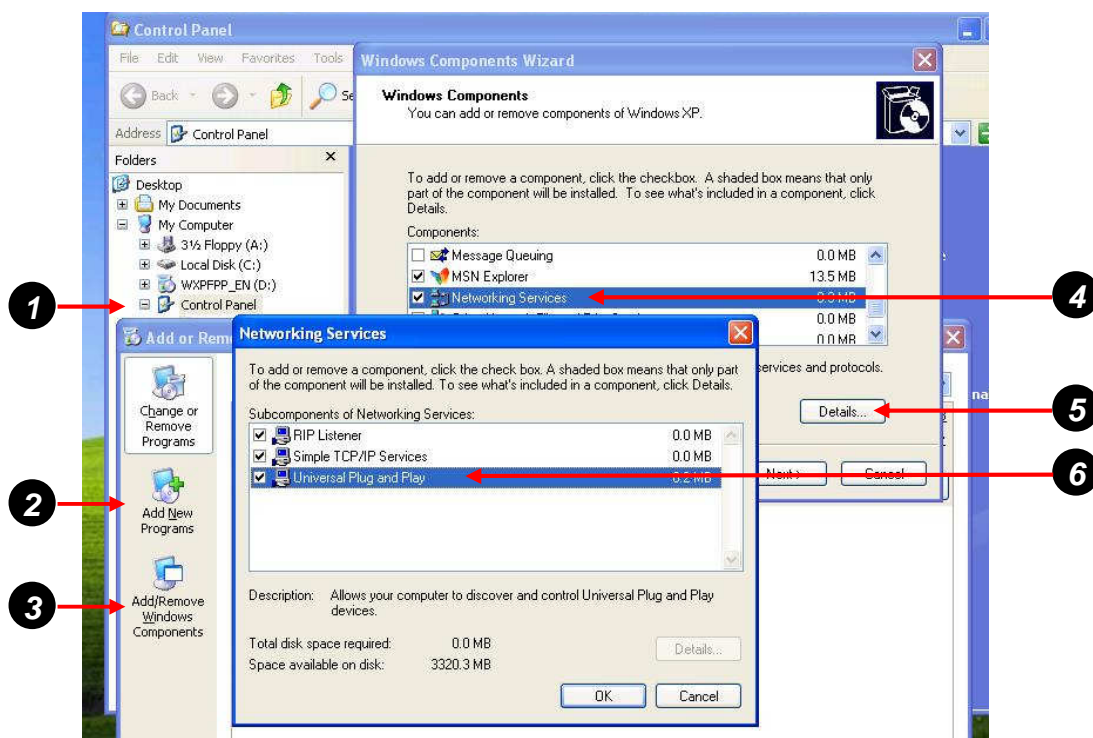To Activate the UPnP function in Windows OS**Windows XP****1. Windows component installation.**

- Step 1 Select **Control Panel**.
- Step 2 Select **Add/Remove Programs**.
- Step 3 Select **Add/Remove Windows Components**.
- Step 4 Select **Networking Services**.
- Step 5 Click **Detail**.
- Step 6 Select **Universal Plug and Play**.

2. Open Windows firewall option

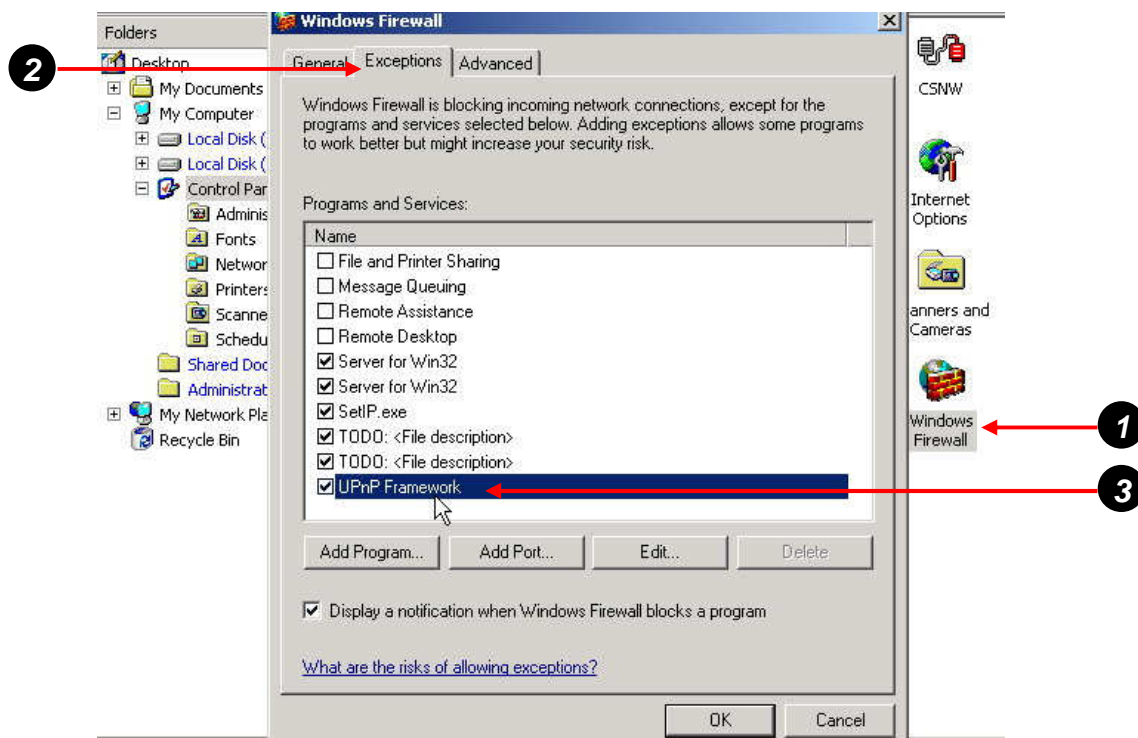


Step 1 Select **Windows Firewall** in the Control Panel.

Step 2 Select **Exceptions**.

Step 3 Select **UPnP Framework**.

3. View the connection device using “My Network Place”

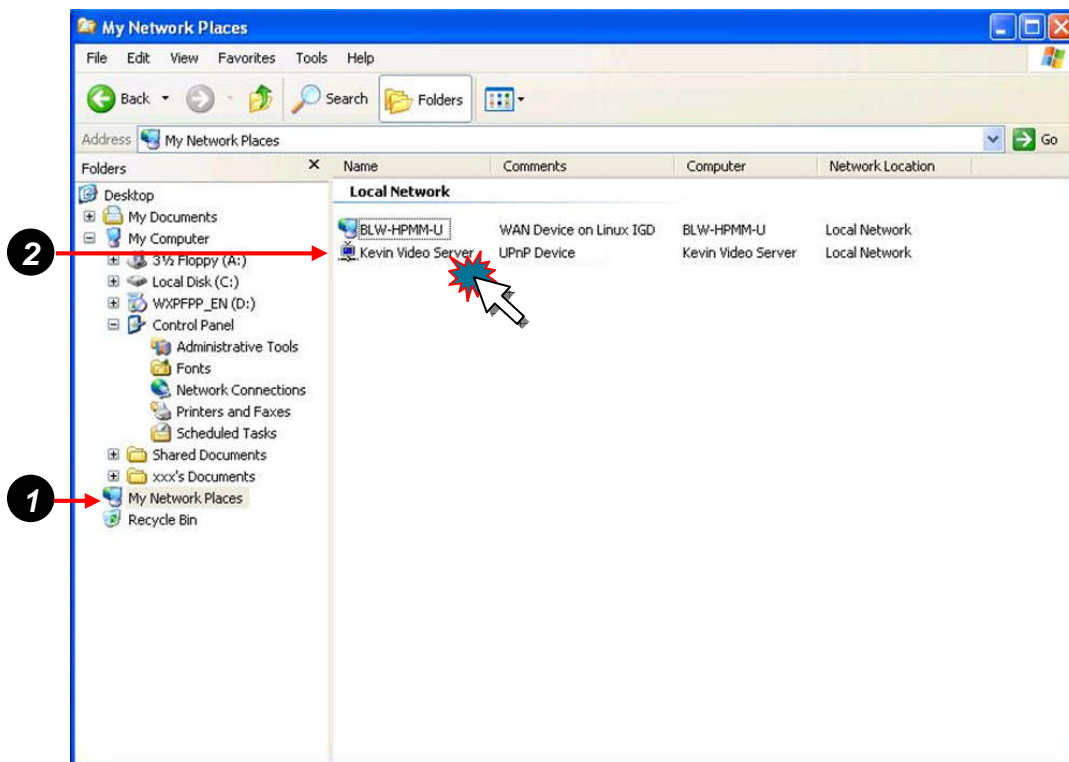

Step 1 Open the folder of **My Network Place**.

Step 2 The LAN camera will appear on the screen
Double click it.

SMTP (Mail Server Setting)

IM-V22 IP IR Dome Camera provides you to transmit images to a particular email address when a motion detection event occurred or a sensor is triggered.

A mail server setting for the camera is required, if you want to use this function.

- **SMTP Setting**

Enter the following information sequential to complete the settings as below:

SMTP server:	The SMTP server IP address.
SMTP From:	The email of the sender, i.e. xxx@xxx.com
SMTP Authentication:	Enables/disables
User name:	The user name is from SMTP server.
Password:	The password is from SMTP server.

The screenshot shows the web interface for the IM-V22 camera. At the top, there's a header with the 'PRIME' logo, the model 'IM-V22', and links for 'Live View' and 'Setting'. The left sidebar contains a 'Basic Setting' section with links for System, Video / Image, Audio, PTZ, User, Network, and Application Setting. The 'SMTP Setting' page is active, displaying fields for SMTP Server, SMTP From, SMTP Port (set to 25), SMTP Authentication (radio buttons for Enable and Disable, with Disable selected), SMTP Username, SMTP Password, and To mail address. There are 'Save', 'Reset', and 'Testing' buttons at the bottom of the form.

NOTE :

IM-V22 IP IR Dome Camera support the mail account of SSL (Secure Sockets Layer) cryptographic protocol only, and the normal free webmail service belong the TLS (Transport Layer Security) cryptographic protocol.

Samba

IM-V22 IP IR Dome Camera provides you to upload the snapshots to a specified shared folder when an event is triggered.

A Samba setting is required, if you want to use this function.

• Samba Setting

Enter the following information sequential to complete the settings as below:

Active:	Enable/Disable
Samba Authentication:	Enable/Disable
Username:	The username
Password:	The password
Path:	To specify the IP address of the computer that you want to share with and the file name, i.e. 192.168.0.X/xxx
Recycle Record:	Enable for the last record file to mantle the first record file.
Remaining SAMBA Capacity:	The remaining capacity can be record.
Shared Folder Size (MB):	The total capacity of the folder. Always remember to set the size of the folder to avoid exhaustion of disk capacity.

PRIME IM-V22 [Live View](#) | [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Audio](#)
- [PTZ](#)
- [User](#)
- [Network](#)
 - [Network](#)
 - [Services](#)
 - [Streaming](#)
 - [PPPoE](#)
 - [DDNS](#)
 - [UPnP](#)
 - [SMTP](#)
- SAMBA**
 - [Notification](#)
 - [Multicast](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)

Application Setting

- [Event](#)
- [Recording List](#)
- [Motion Detection](#)
- [Blind Detection](#)
- [Privacy Mask](#)
- [Firmware Upgrade](#)
- [Factory Default](#)
- [Reboot](#)

Samba Setting

Samba

Active ☐ Enable ☒ Disable

Samba Authentication ☐ Enable ☒ Disable

User Name

Password

Path(ex://ip/folder) [Testing](#)

Recycle Record ☒ Enable ☐ Disable

Remaining SAMBA Capacity MB

Shared Folder Size 0%

Used Space: 0MB Free Spaces: 0MB

[Save](#) [Reset](#)

Notification

For a dynamic IP, you need to update the IP address every time when you connect to the camera via internet. This setting allows you to update the IP address by automatic notification of IP address change.

Select one of the following three notice options to update the IP address:

- **SMTP Notification**

SMTP Notification: notification via SMTP mail server
 SMTP SendTo: the recipient, i.e. xxx@xxx.com
 SMTP Subject: mail subject

- **FTP Notification**

FTP Server: FTP Server name.
 FTP Port: FTP port. The default setting is 21 (recommended).
 FTP Upload path: The path to upload files.
 FTP Login name: The name to log in the FTP.
 FTP Login Password: The password to log in the FTP.

- **HTTP Notification**

Server: The address of the server, i.e. http://.
 Port: The port to access HTTP. The default setting is 80 (recommended).
 Parameter: The setting of the parameters, refer to the installation setting of your HTTP server.

Refer to the installation setting of your HTTP server for the setting of the parameters (such as Username, Password, and Proxy).

PRIME

IM-V22

[Live View](#) | [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Audio](#)
- [PTZ](#)
- [User](#)
- [Network](#)
- [Network](#)
- [Services](#)
- [Streaming](#)
- [PPPoE](#)
- [DDNS](#)
- [UPnP](#)
- [SMTP](#)
- [SMB](#)
- Notification**
- [Multicast](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)

Application Setting

- [Event](#)
- [Recording List](#)
- [Motion Detection](#)
- [Blind Detection](#)
- [Privacy Mask](#)
- [Firmware Upgrade](#)
- [Factory Default](#)
- [Reboot](#)

Notification of IP address Change

SMTP Notification

SMTP Notification ☐ Enable ☒ Disable

SMTP SendTo

SMTP Subject

FTP Notification

FTP Notification ☐ Enable ☒ Disable

FTP Server

FTP Port

FTP Upload Path

FTP Login Name

FTP Login Password

HTTP Notification

HTTP Notification ☐ Enable ☒ Disable

Server

Port

Parameter

User Name

Password

Proxy Address

Proxy Port

Proxy username

Proxy Password

Multicast

This function allows multiple people to watch video streaming without limited in the number of users, but is only applicable to the LAN environment. Video streaming format (H.264) is depended on the selected image format setting in Basic Setting → Video/Image → Video Format.

• H264 (Main Stream)

It allowed multiple users to view the H.264 video stream free from limited in the number of users. However, this is only effective within the LAN.

• H264 (Sub Stream)

It allowed multiple users to view the H.264 video stream free from limited in the number of users. However, this is only effective within the LAN.

• Motion JPEG

It allowed multiple users to view the Motion JPEG video stream free from limited in the number of users. However, this is only effective within the LAN.

PRIME
IM-V22
Live View | Setting

Basic Setting

[System](#)

[Video / Image](#)

[Audio](#)

[PTZ](#)

[User](#)

[Network](#)

[Network](#)

[Services](#)

[Streaming](#)

[PPPoE](#)

[DDNS](#)

[UPnP](#)

[SMTP](#)

[SMB](#)

[Notification](#)

Multicast

[Date / Time](#)

[IP Filtering](#)

[Storage](#)

Application Setting

[Event](#)

[Recording List](#)

[Motion Detection](#)

[Blind Detection](#)

[Privacy Mask](#)

[Firmware Upgrade](#)

[Factory Default](#)

[Reboot](#)

Multicast Setting

H264 (Main Stream)

Enable ☐ On ☒ Off

Video Address (224.1.1.1 ~ 239.255.255.255)

Video Port (2~65534, Even)

Video TTL (1~255)

Audio Address (224.1.1.1 ~ 239.255.255.255)

Audio Port (2~65534, Even)

Audio TTL (1~255)

Event Address (224.1.1.1 ~ 239.255.255.255)

Event Port (2~65534, Even)

Event TTL (1~255)

H264 (Sub Stream)

Enable ☐ On ☒ Off

Video Address (224.1.1.1 ~ 239.255.255.255)

Video Port (2~65534, Even)

Video TTL (1~255)

Audio Address (224.1.1.1 ~ 239.255.255.255)

Audio Port (2~65534, Even)

Audio TTL (1~255)

Event Address (224.1.1.1 ~ 239.255.255.255)

Event Port (2~65534, Even)

Event TTL (1~255)

Motion JPEG

Enable ☐ On ☒ Off

Video Address (224.1.1.1 ~ 239.255.255.255)

Video Port (2~65534, Even)

Video TTL (1~255)

Audio Address (224.1.1.1 ~ 239.255.255.255)

Audio Port (2~65534, Even)

Audio TTL (1~255)

Event Address (224.1.1.1 ~ 239.255.255.255)

Event Port (2~65534, Even)

Event TTL (1~255)

NOTE :

Please refer to the chapter of **Appendix: Multicast Application** for different environment

Date/Time

- **Server Time** (the date/time of the server)
- **PC Time** (the date/time of your PC)
- **Time Setting** (date/time setting)

It provides 3 ways for you to synchronized the time as below:

1. To synchronize the time from PC's time:
To preset time synchronized for the camera from your PC time.
2. Get the time from an NTP server:
To synchronize the time from the NTP (Network Time Protocol)
 - Click **NTP** in the Time Setting.
 - Enter the IP address in the NTP server. (1~3)
 - Press the **SAVE** to apply it.

Once the NTP time obtain, the IM-V22 IP IR Dome Camera will updated the time.

NOTE :

The default NTP servers as below:

NTP Server 1: 198.123.30.132

NTP Server 2: 192.43.244.18

NTP Server 3: 133.100.9.2

3. Change the time by manually:
 - Click **User Input** in the Time Setting.
 - Select the format of date to display, i.e. "yyyy/mm/dd" format.
 - Select the format of date to display, "hh:mm:ss" by 24 hours format.
 - Select the time zone.
 - Select **Adjust** to adjust the time.

PRIME IM-V22 [Live View](#) [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Audio](#)
- [PTZ](#)
- [User](#)
- [Network](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)

Application Setting

- [Event](#)
- [Recording List](#)
- [Motion Detection](#)
- [Blind Detection](#)
- [Privacy Mask](#)
- [Firmware Upgrade](#)
- [Factory Default](#)
- [Reboot](#)

Date / Time Setting

Server Time

Date: 2010-08-31 Time: 17:57:28

Time Setting

Date: 2010-08-31 Time: 17:57:29

Time Setting

Set Time ☒ Synchronize with PC's time ☐ NTP ☐ User Input

NTP Server 1: 198.123.30.132

NTP Server 2: 192.43.244.18

NTP Server 3: 133.100.9.2

Date: 2010-08-30

Time: 15:02:45

Time Zone: (GMT+08:00) Taipei

Daylight Saving Time: ☐ Enable ☒ Disable ☐ Auto

Daylight Saving Time

Start Time: 1ST Sunday January

Switch from: 02:00 To 03:00

End Time: 1ST Sunday January

Switch from: 03:00 To 02:00

[Save](#) [Reset](#)

IP Filter

IM-V22 IP IR Dome Camera provides you to allowed or deny the visitors from particular/target address by IP Filter Setting.

- **General**

IP Filtering: Enable/disable

Policy: Allow/deny

- **Filter IP Address (Overview of the setting for IPs)**

Add: Enter the IP address that you allowed or denied it.

Remove: Remove the IP address existed.

Remove All: Remove all of the IP address existed.

The screenshot shows the web interface for the IM-V22 camera. The top bar includes the 'PRIME' logo, the model 'IM-V22', and links for 'Live View' and 'Setting'. The left sidebar lists various settings categories: Basic Setting (System, Video / Image, Audio, PTZ, User, Network, Date / Time, IP Filtering, Storage), Application Setting (Event, Recording List, Motion Detection, Blind Detection, Privacy Mask, Firmware Upgrade, Factory Default, Reboot). The main content area is titled 'IP Filtering Setting' and contains a 'General' section with 'IP Filtering' set to 'Disable' and 'Policy' set to 'Deny'. Below this is a 'Filtered IP Address' table with an 'Add' button and 'Remove'/'Remove All' buttons.



Attention:

Setting rules as below:

1. Actions that may cause a limited connection are to be denied.
2. Improper use of this function may cause disconnection from Internet. You might need to use hardware reset to reset to the factory default. Please refer to the "Factory Default" for details.

Application Setting

The Application Setting menu lets you view the Application Setting for IM-V22 IP IR Dome Camera and change the following setting:

Event Event
 Trigger
 Event Server

Motion Detection
Blind Detection
Privacy Mask
Firmware Upgrade
Factory Default
Reboot

Event

IM-V22 IP IR Dome Camera is the equipment with intelligent security management function.

It ensure the security monitoring by authorized users to define the **Trigger Events** which is base on the particular times and situations, and set the respond to the event for the Camera.

It proposed to avoid exceed in five to preview in **Event Seeing**.


The screenshot displays the web interface for the IM-V22 camera. At the top, the 'PRIME' logo is on the left, 'IM-V22' is in the center, and 'Live View | Setting' is on the right. The left sidebar contains a menu with 'Basic Setting' (System, Video / Image, Audio, PTZ, User, Network, Date / Time, IP Filtering, Storage) and 'Application Setting' (Event, Event Trigger, Event Server, Recording List, Motion Detection, Blind Detection, Privacy Mask, Firmware Upgrade, Factory Default, Reboot). The 'Event' option under 'Application Setting' is selected. The main content area is titled 'Event Setting' and contains an 'Event List' table with columns: Name, Enable, Trig./Sched., and Action. The table has one entry: 'New0' with 'yes' for Enable, 'Motion Detec' for Trig./Sched., and 'FTP' for Action. Below the table are four buttons: 'Add Event', 'Add Schedule', 'Delete', and 'Modify'.

Name	Enable	Trig./Sched.	Action
New0	yes	Motion Detec	FTP

Event

- **Event List**

Add Event: Click **Add Event** to enter the **Trigger Even Setting**.

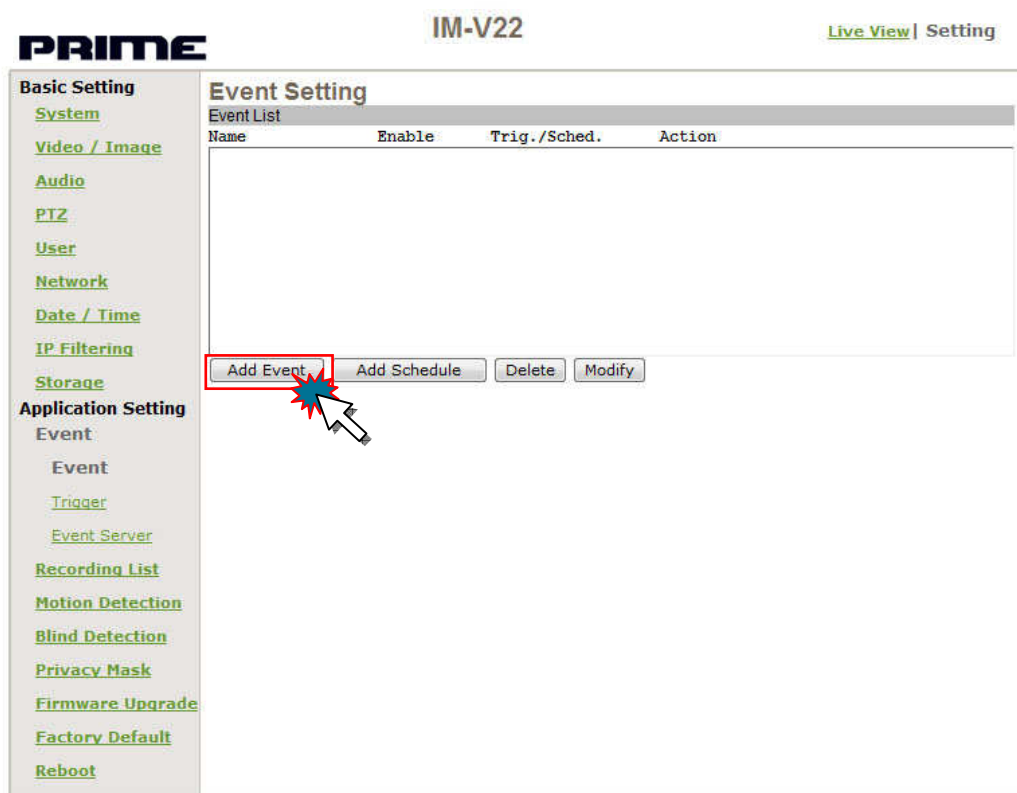


The screenshot shows the 'Event Setting' configuration page. It has several sections:

- General**: Name field with 'New0'.
- Response to event trigger**:
 - ☒ Always
 - ☐ During time: Includes checkboxes for days (Sun, Mon, Tue, Wed, Thu, Fri, Sat) and time fields for Start Time (00:00) and End Time (00:00).
 - ☐ Never
- Trigger by**:
 - ☐ Alarm input
 - ☐ Motion Detection: Includes radio buttons for Area 1, Area 2, and Area 3.
 - ☐ On boot
 - ☐ Blind Detection: Includes radio buttons for Area 1, Area 2, and Area 3.
 - ☐ Net Loss
- Response process**:
 - ☐ Active alarm out
 - ☐ Upload video/image to server
 - ☐ Send HTTP notification
 - ☐ Send TCP notification
 - ☐ Send NAP notification
 - ☐ Day Night

 At the bottom are 'Save' and 'Cancel' buttons.

Add Schedule: Click **Add Schedule** to add a new schedule.

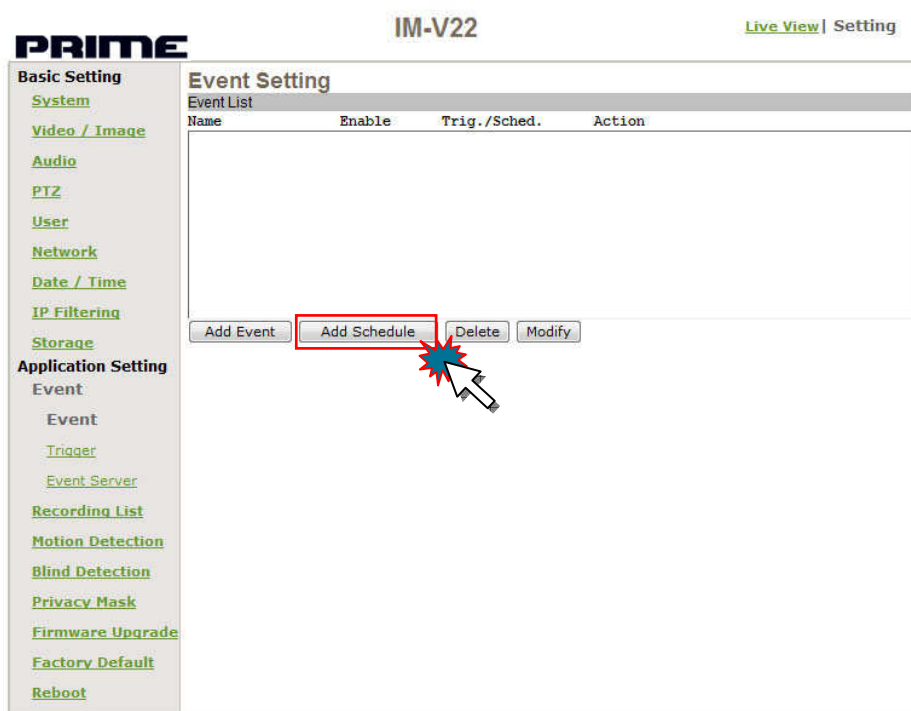

Schedule Setting

General

Name:

Response to event trigger

☒ Always

☐ During time ☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat

Start Time: End Time:

☐ Never

Response process

☐ Active alarm out

☐ Upload video/image to server

☐ Send HTTP notification

☐ Send TCP notification

☐ Send NAP notification

☐ Day Night

General:

Name: Name the trigger event.

Response to event trigger: Time setting for the trigger event

Always: Always monitoring

During time: Check the date you want to monitor (Sun.~Sat.) and the duration of monitoring.
For example, if you want to set the camera to monitor from 7 pm after work to 7 am next morning from Monday to Friday, check the boxes from Monday to Friday, enter "19:00" in the "Start From" field, and enter "12:00" in the "Duration" field.

Never: Do not set the time.

Trigger by: Sources of trigger events (Note: You can set only one trigger event once.)

Alarm input: The alarm is triggered by the security equipment connected from the DI terminals behind the machine, such as door/window detectors, infrared sensors.

Motion Detection: The alarm is triggered when motion is detected. The camera will send an alarm when any objects appear in the set detection area.

On boot: The alarm is triggered by reboot. The camera will send an alarm when the system is rebooted due to power shortage, sabotage, or other reasons.

Blind Detection: The alarm is triggered when motion is detected. The camera will send an alarm when any objects appear in the set detection area.

Net Loss: The alarm is triggered when the network is disconnected. The camera response process by the selection which you have set.

Response process: trigger event response (Note: Multiple selections are available)

Active alarm out: An event is detected by the security equipment connected from the DI terminal behind the machine, such as high-decibel alarms, light projectors. You can set the alarm duration in the "Duration" field.

Upload video/image to server: The camera will save the Motion JPEG of the event to the Upload Server (FTP/SMTP) or the Recording Storage Device (Samba).

Include pre-trigger buffer: When an event is detected, the camera will record the previous video image up to 10 seconds.

Include post-trigger buffer: When an event is detected, the camera will record the post video image up to 10 seconds.

Continue video upload: When the event is continue, the camera will record the video image up to 10 seconds.

For example: If the pre-trigger 5 seconds, post-trigger 5 seconds and continue video upload 5 seconds have been selected, the total file size will be 15 seconds.

The camera will save the capture photo of the event to the Upload Server (FTP/SMTP) or the Recording Storage Device (Samba).

Send HTTP notification: The alarm will be sent to the HTTP server you specified. To use this function, set the coordinative HTTP server in the Event Server setting page in advance.

Send TCP notification: The alarm will be sent to the TCP Server you specified. To use this function, set the coordinative TCP server in the Event Server setting page in advance.

Send NAP notification: The alarm will be sent to the NAP Server you specified. To use this function, set the coordinative NAP server in the Event Server setting page in advance.

Day Night: Force the camera turn into Day/Night Mode when the trigger is detected.

NOTE :

The setting pages of Add Event and Add Schedule are the same. There is only one difference between them is the Add Schedule setting without the setting for **Trigger by**.

Delete: Delete the event cluster setting.

Modify: Modify the event cluster setting.


Trigger

Whenever the camera detected abnormal events during the scheduled time, it will respond by active trigger automatically.

There are 2 types for the trigger response: Alarm messages sending and emailing.

Recorded the image to the specify server.

Once you had completed this setting, you may requested to test by manually in this section to ensure all of the functions are working properly.

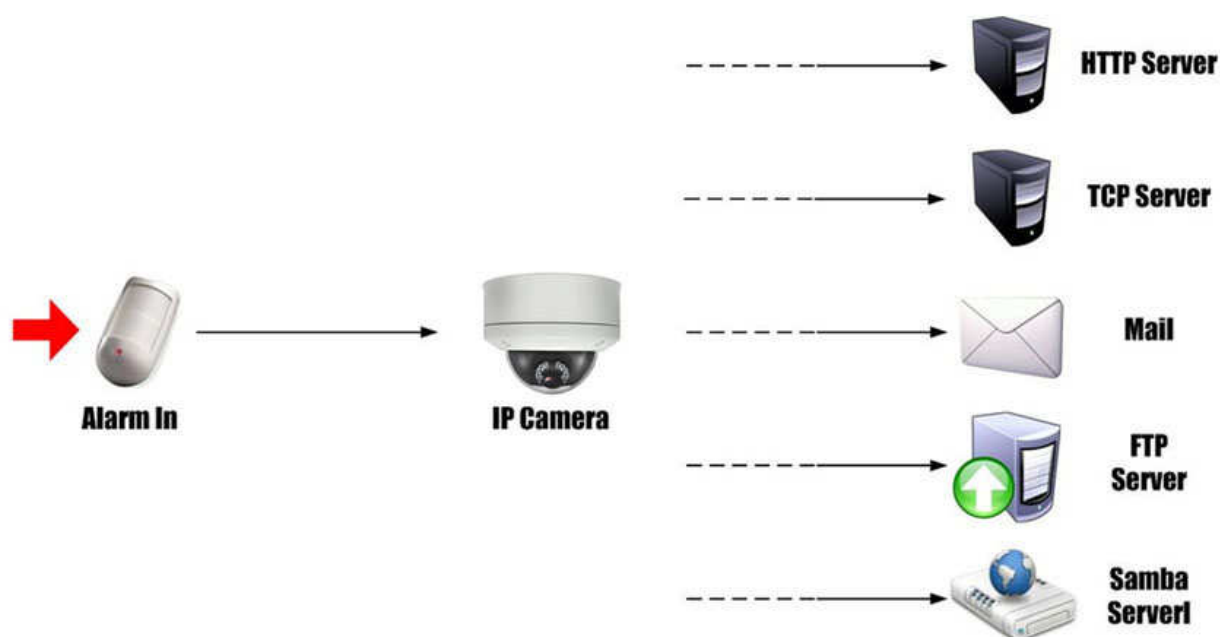

Normal Open has been set to the default status of the digital input pin, but you can change it to **Normal Ground** by setting in **Setting > Application > Event > Trigger**.

1. It will be **Open** status of the alarm input pin which is connected to external device when the alarm input has been set to **Normal Open**. Therefore, when the external device is triggered to close status, the alarm input pin will be triggered.
2. On the contrary, It will be **Close** status of the alarm input in which is connected to external device when the alarm input pin has been set to **Normal Grounded**. Therefore, when the external device is triggered to open status, the alarm input pin will be triggered.

NOTE :

Before you install the hardware for alarm I/O, please set up the **Trigger Setting** at first.
(Setting > Application Setting > Event > Trigger)

- **Alarm Input Setting**

Set the alarm input type between N.O.(Normal Open) and N.G. (Normal Ground).
The N.G. means N.C.

- **Trigger Alarm output:**

Click **Trigger** to start the alarm.

Click **Clear** to stop the alarm.

(Please make sure before you click **Clear** for close the alarm testing when the trigger testing is done).

- **Trigger mail**

After you enter the email address and subject in the filed, click the **Set** to test the mail sending completely.

- **Trigger FTP**

Click the **Set** to upload AVI files to FTP server to test completely.

- **HTTP Server**

After you enter the message in the **Message** field, click the **Set** to upload the message to HTTP server to test completely.

You can make custom parameters settings completely through
Application Setting > Event > Event Server.

- **TCP Server**

After you enter the message in the **Message** field, click the **Set** to upload the message to TCP server to test completely.

- **Trigger SAMBA**

After you enter the Path in the field and click the **Set** to share the folder from your PC.

PRIME IM-V22 [Live View](#) | [Setting](#)

Basic Setting System Video / Image Audio PTZ User Network Date / Time IP Filtering Storage Application Setting Event Event Trigger Event Server Recording List Motion Detection Blind Detection Privacy Mask Firmware Upgrade Factory Default Reboot	Trigger Setting Trigger Alarm Input Setting Alarm input1 <input checked="" type="radio"/> Normal Open <input type="radio"/> Normal Ground <input type="button" value="Save"/> <hr/> Trigger Alarm output Alarm output1 <input type="button" value="Trigger"/> <input type="button" value="Clear"/> <hr/> Trigger mail To mail address <input type="text"/> Subject <input type="text"/> <input type="button" value="Set"/> <hr/> Trigger FTP Upload AVI file to FTP server <input type="button" value="Set"/> <hr/> Trigger HTTP Server Custom parameters <input type="text"/> Message <input type="text"/> <input type="button" value="Set"/> <hr/> Trigger TCP Server Message <input type="text"/> <input type="button" value="Set"/> <hr/> Trigger SAMBA Path <input type="text"/> <input type="button" value="Set"/>
---	---

Event Servers (Upload Server)

You can make a setting to upload files to the server completely.

Please make a setting for servers in the **Event Server Setting** by following setting:

PRIME IM-V22 [Live View](#) | [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Audio](#)
- [PTZ](#)
- [User](#)
- [Network](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)
- Application Setting**
 - Event**
 - Event
 - Trigger
 - Event Server
 - Recording List
 - Motion Detection
 - Blind Detection
 - Privacy Mask
 - Firmware Upgrade
 - Factory Default
 - Reboot

Event Server Setting

Event Server List

Name	Protocol	Network Address	Upload Path	User Name

[Add FTP](#)
[Add HTTP](#)
[Add TCP](#)
[Add UDP](#)
[Modify](#)
[Remove](#)

Event Server Setup

FTP Server

Name: NewFtpServer0

Network Address:

Login:

Password:

Upload Path:

Port: 21

Passive: ☐

[OK](#) [Cancel](#)

Event Server Setup

UDP Server

Name: NewUdpServer0

Network Address:

Port:

[OK](#) [Cancel](#)

Event Server Setup

HTTP Server

Name: NewHttpServer0

Network Address:

Port: 80

Login:

Password:

Proxy:

Proxy Port:

Proxy Login:

Proxy Password:

[OK](#) [Cancel](#)

Event Server Setup

TCP Server

Name: NewTcpServer0

Network Address:

Port:

[OK](#) [Cancel](#)

- **Event Server List**

Add FTP Enter the information of the FTP server you specified.

Name: The name of the FTP
Network Address: IP address of the FTP
Login: Log-in name
Password: Log-in password
Upload Path: Uploading path
Port: Port
Passive: Check to set the FTP status as passive

Add HTTP Enter the information of the HTTP server you specified.

Name: HTTP name
Network Address: HTTP IP address
Login: Log-in name
Password: Log-in password
Proxy: Proxy server name
Proxy Port: Proxy server port
Proxy Login: Proxy server log-in name
Proxy Password: Proxy server log-in password

Add TCP Enter the information of the TCP server you specified.

Name: TCP server name
Network Address: TCP IP address
Port: TCP port

Add UDP Enter the information of the UDP server you specified.

Name: UDP server name
Network Address: UDP IP address.
Port: UDP port

Modify **Modifies the setting value**

Delete **Removes the setting value**

Recording List

Use this setting to management the recording list.

PRIME IM-V22 [Live View](#) | [Setting](#)

Basic Setting

- [System](#)
- [Video / Image](#)
- [Audio](#)
- [PTZ](#)
- [User](#)
- [Network](#)
- [Date / Time](#)
- [IP Filtering](#)
- [Storage](#)

Application Setting

- [Event](#)
- [Recording List](#)
- [Motion Detection](#)
- [Blind Detection](#)
- [Privacy Mask](#)
- [Firmware Upgrade](#)
- [Factory Default](#)
- [Reboot](#)

Recording Management

Search Conditions

Date: 20100928

Trigger: ☒ Any ☐ Alarm ☐ MD ☐ BD ☐ Net Loss

Storage Device: ☒ SD

[Search](#)


Recording List

Trig./Sched.	Prefix	Time	Size
--------------	--------	------	------

[Play](#) [Download](#) [Delete](#)

Motion Detection

Click the **Area** to open the setting frame and the setting frame will show on your screen. You can adjust the frame size by move and drag the edge of the frame on the arrow of your mouse, after adjusted click the left button of your mouse.

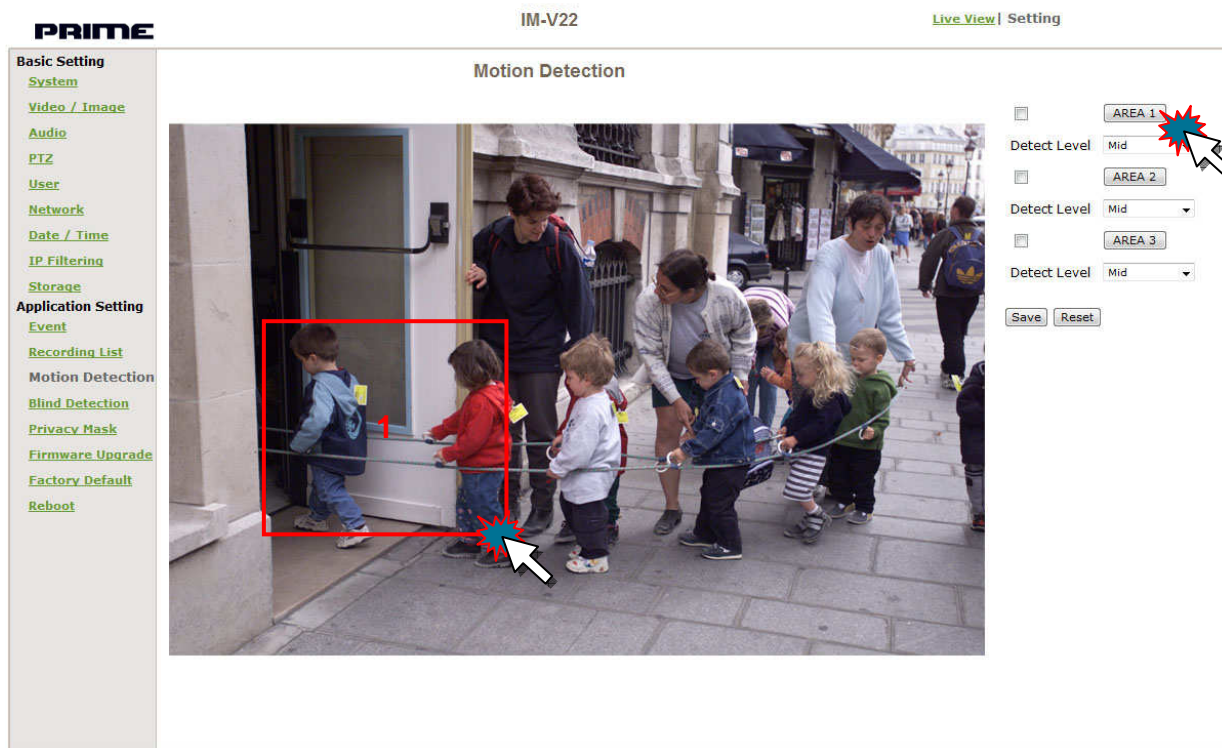


- Area:**
 There are 3 frames available for setting: Area 1, Area 2 and Area 3.
 Click **Area** to open the detectable area then click the signal checkbox to enable the function.
- Detect Level:**
 There are 5 levels for you to adjust the area: Lower, Low, Mid, High and Highest.

Blind Detection

Blind Detection means that you can set the inside/outside area for detect.

Blind Detection triggered if any object activity in the area that you have set.

Click the **Area** to open the setting frame and the setting frame will show on your screen. You can adjust the frame size by move and drag the edge of the frame on the arrow of your mouse, after adjusted click the left button of your mouse.

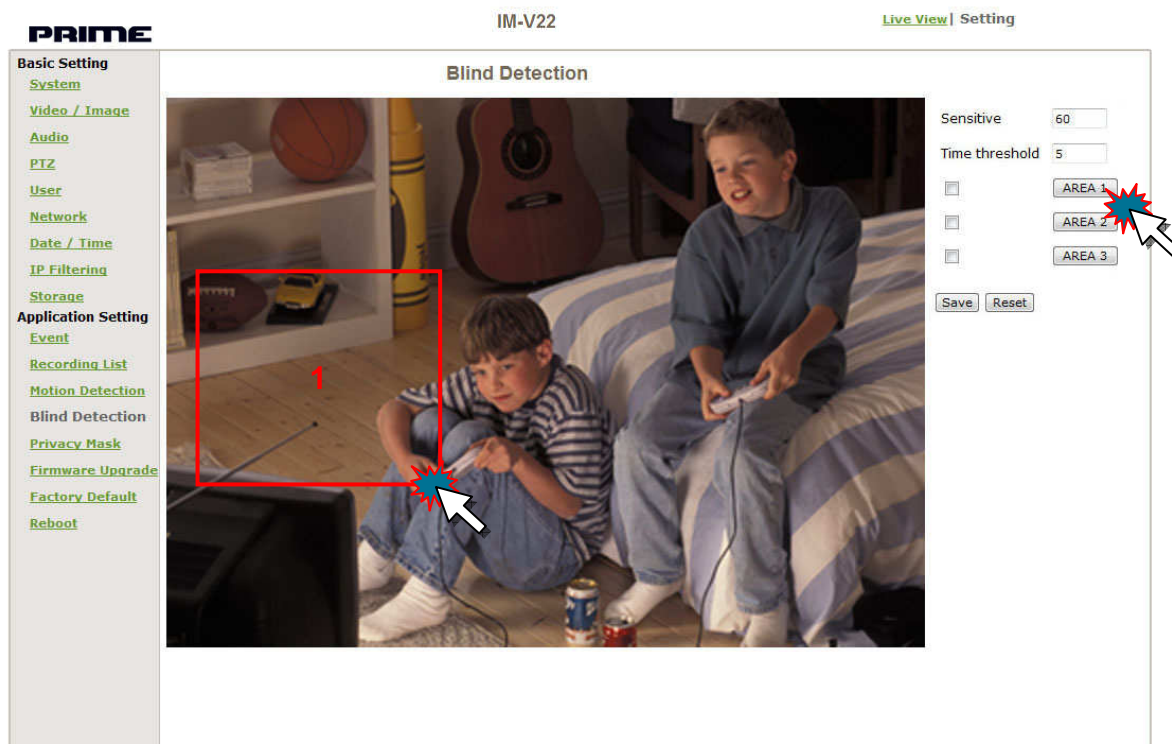

- **Area:**

There are 3 frames available for setting: Area 1, Area 2 and Area 3.

Click **Area** to open the detectable area then click the signal checkbox to enable the function.

- **Sensitive:**

Adjust the Sensitive of the area by entering the degrees in the field of **Sensitive**.

The setting range is **0~100**. **0** is the least sensitive and 100 is extremely sensitive.

- **Time threshold:**

Adjust the stay time to detect the object in the area.

The setting range is **0~100** seconds.

Privacy Mask

To ensure the confidential, IM-V22 IP IR Dome Camera provides the Privacy Mask for you to mask the image in the masked zone.

The following diagram illustrates how to set the Privacy Mask.

1. Click the **Area** to set the mask zone for you to open the setting frame and the setting frame will show on your screen.
(There are 3 frames available for setting: Area 1, Area 2 and Area 3.)
2. Adjust the frame size by move and drag the edge of the frame on the arrow of your mouse, after adjusted click the left button of your mouse.
3. Selects the color for Privacy Mask by click the **Color block** in order to show the palette, move the arrow point and click on the color what you like.
4. After the setting is completed, click Save to apply it and the screen will refresh within a few second automatically.



- **Color:**

Click the black color to select the color from color-cord table, or input the color-cord to change the color.

- **Area:**

There are 3 frames available for setting: Area 1, Area 2 and Area 3.

Click **Area** to open the detectable area then click the signal checkbox to enable the function.

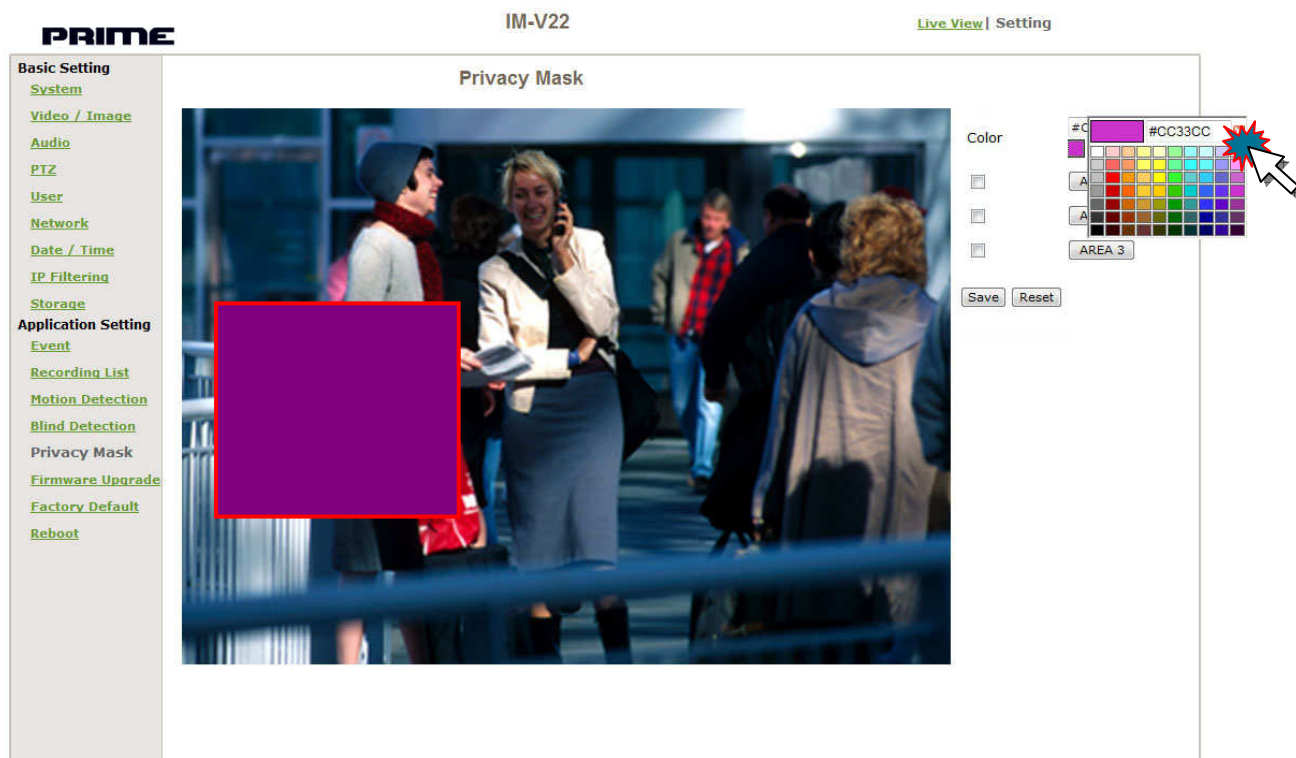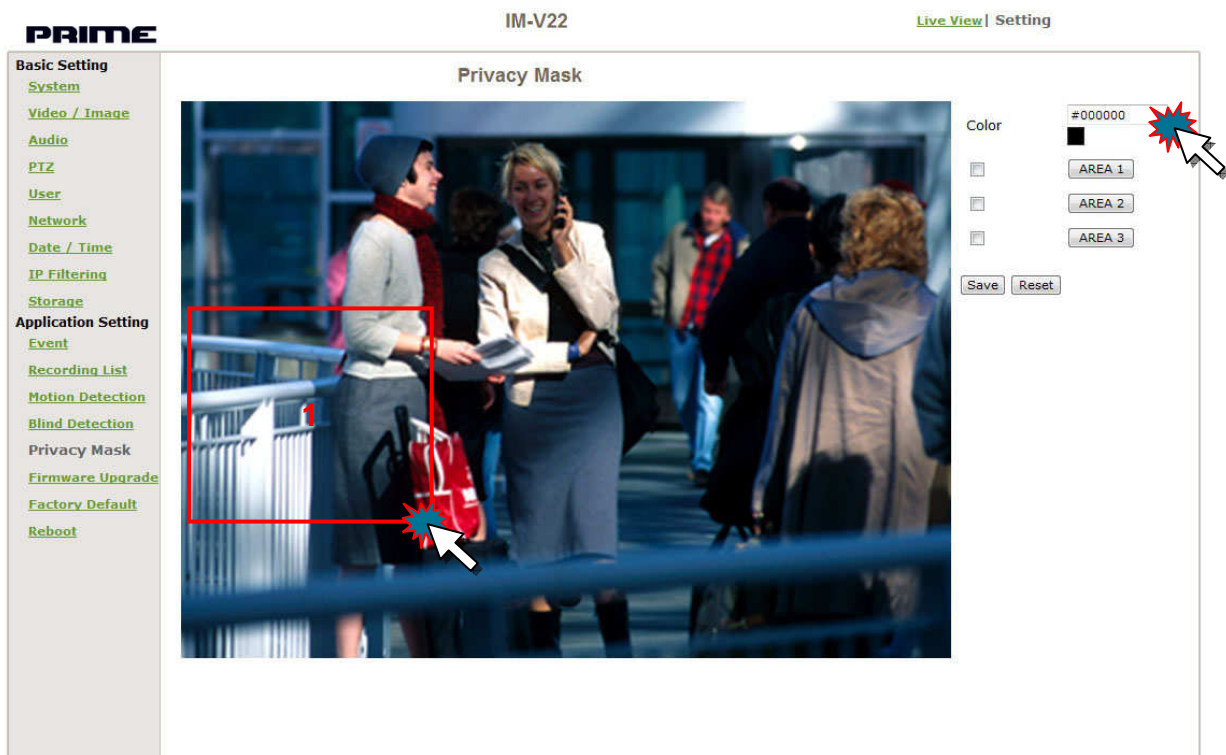


Firmware upgrade

Contact with your dealer for more information about firmware upgrade. Please follow the steps below to upgrade the firmware.




Attention: Important! Read Carefully!!

1. Please close all of the application that you are using on your PC.
2. Select **Firmware Upgrade** and the Firmware Upgrade Setting page will show on your screen.
3. Click **Browse** to select the location where the firmware file is.
4. Click **Submit** to upgrade the firmware immediately.

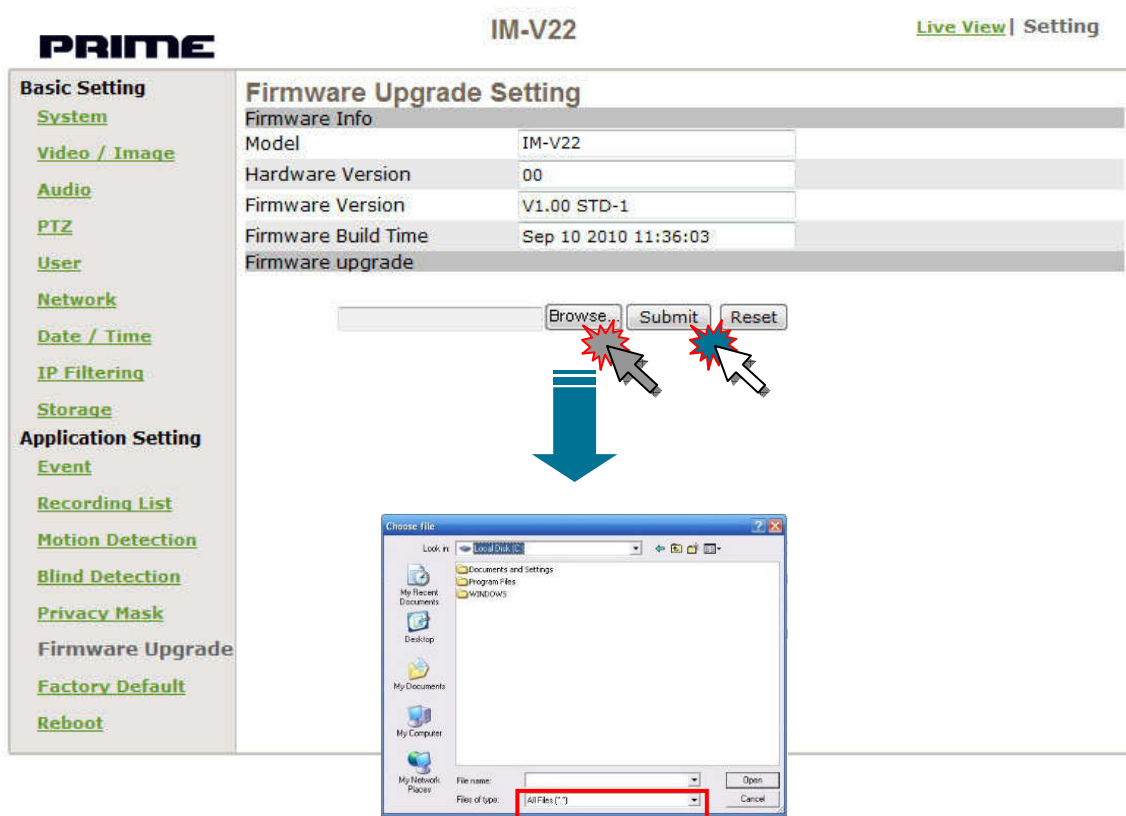


Select the location where the firmware file is.

- The progressing status of the firmware upgrade will show on your screen.

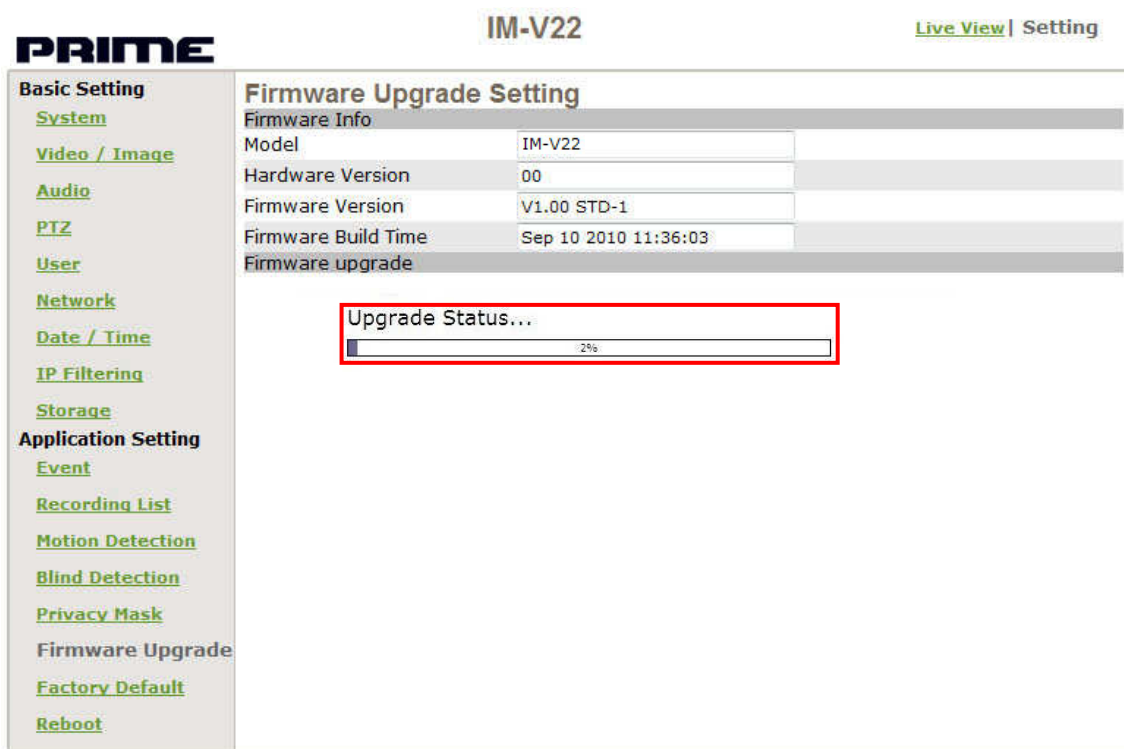

- IM-V22 IP IR Dome Camera reboots automatically after the firmware has been upgrade completed. Reconnect to the server after 60 seconds.

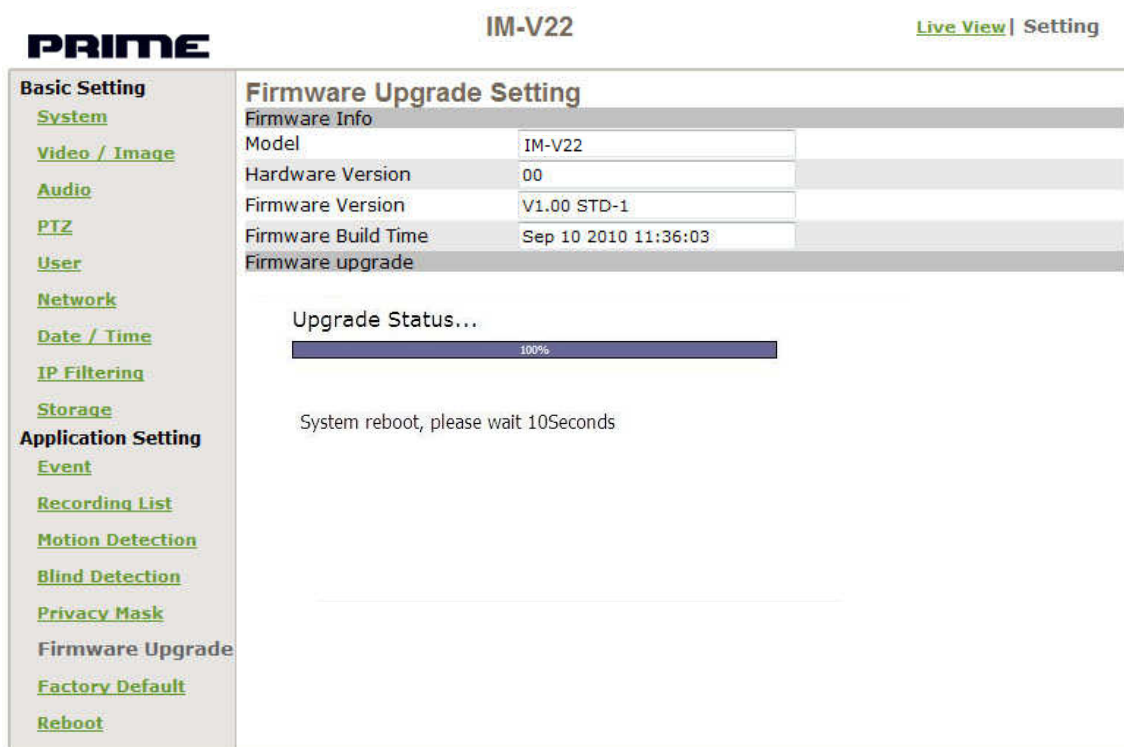

NOTE :

Please be careful and make sure there is no any interrupted during the process of the firmware upgrade because of the firmware is burned into the Flash Rom then.

System will probably damage seriously and need to rest to the factory default for repair it if the power cable has been removed or becomes loose during the upgrade.


It is not recommend you to upgrade the firmware in a wireless network environment because of the unstable packet transmission may conduce to data loss.

It is not necessary for you to restart the camera by manual after the firmware upgrade completed. The camera will reboot automatically after 60 seconds (Reboot OK), and it will open the IE Browser and filled in the IP address (The original IP address remains undeleted).

Factory Default

You can use this setting to reset IM-V22 IP IR Dome Camera to the factory default value without any changes. Including the IP address all of you have set will be invalid.

• Factory Default

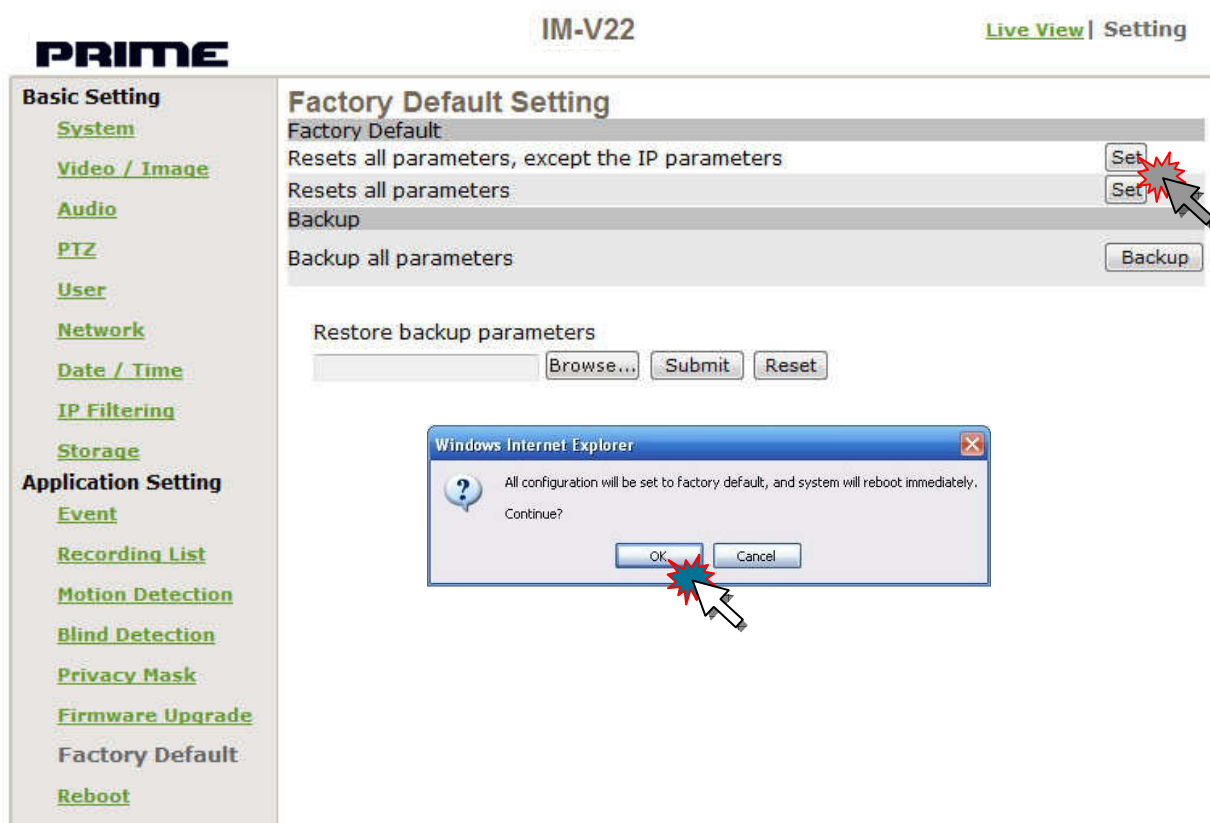

Resets all parameters, except the IP parameters:

Use this setting to reset the IM-V22 IP IR Dome Camera to the factory default value and all of the changes you have set will be invalid except the IP address and all of the settings which is relation to network will remain the valid. (Cable and wireless network setting are included)

Click the **Set** to start the factory reset and a warning pop-up window will appear to ask whether you really want to reset to the factory default value or not.

Click **OK** to complete the reset.


Resets all parameters:

Use this setting to reset the IM-V22 IP IR Dome Camera to the factory default value. All of the changes will be invalid. (IP address is included)

Click the **Set** to start the factory reset and a warning pop-up window will appear to ask whether you really want to reset to the factory default value or not.

Click **OK** to complete the reset.

- Backup

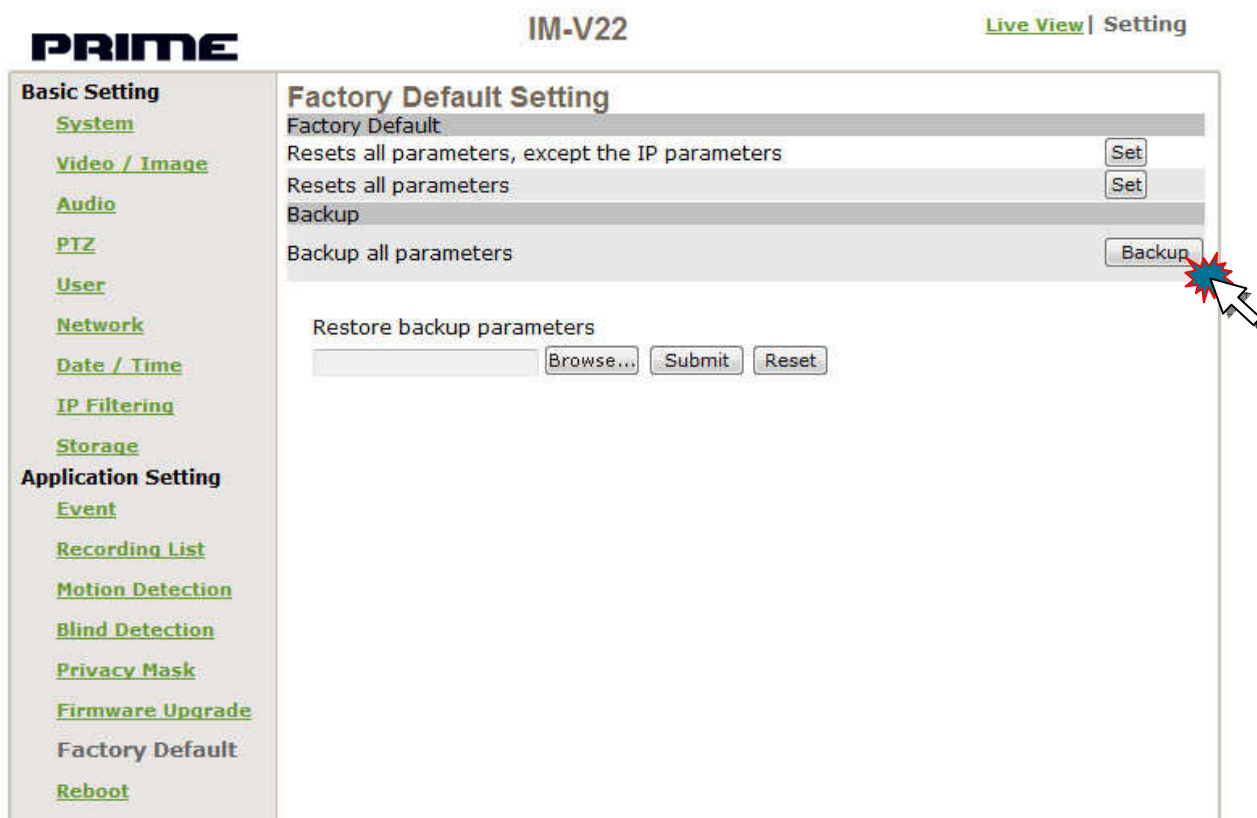


Back all parameters:

Use this setting to backup all of the changes you have set.
Click **Backup** and a file download inquired windows will pop up.
Back up the file named **param.bin**.





Attention: Don't change the file name; otherwise, the backup may fail.

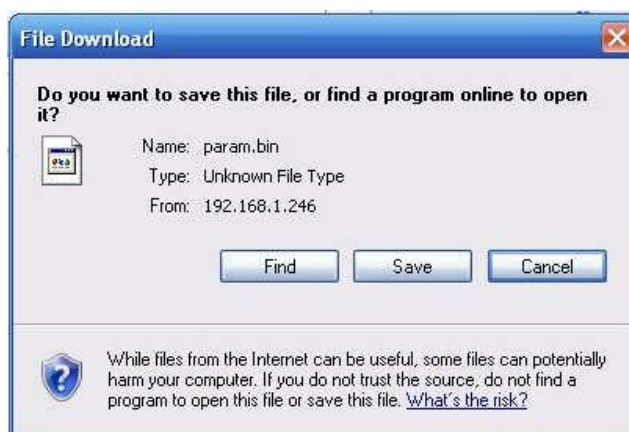

Restore backup parameters:

Use this setting to restore the changes that you have set.


Click **Browse** to select a backup file and click **Submit** to confirm it.

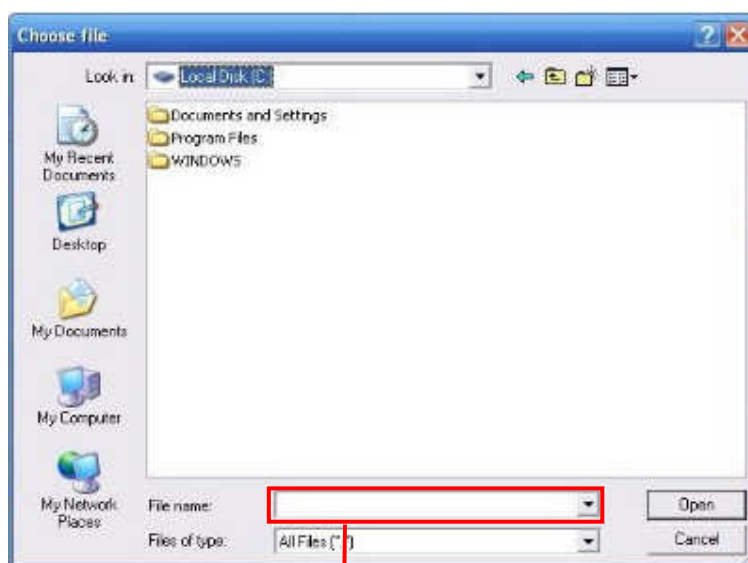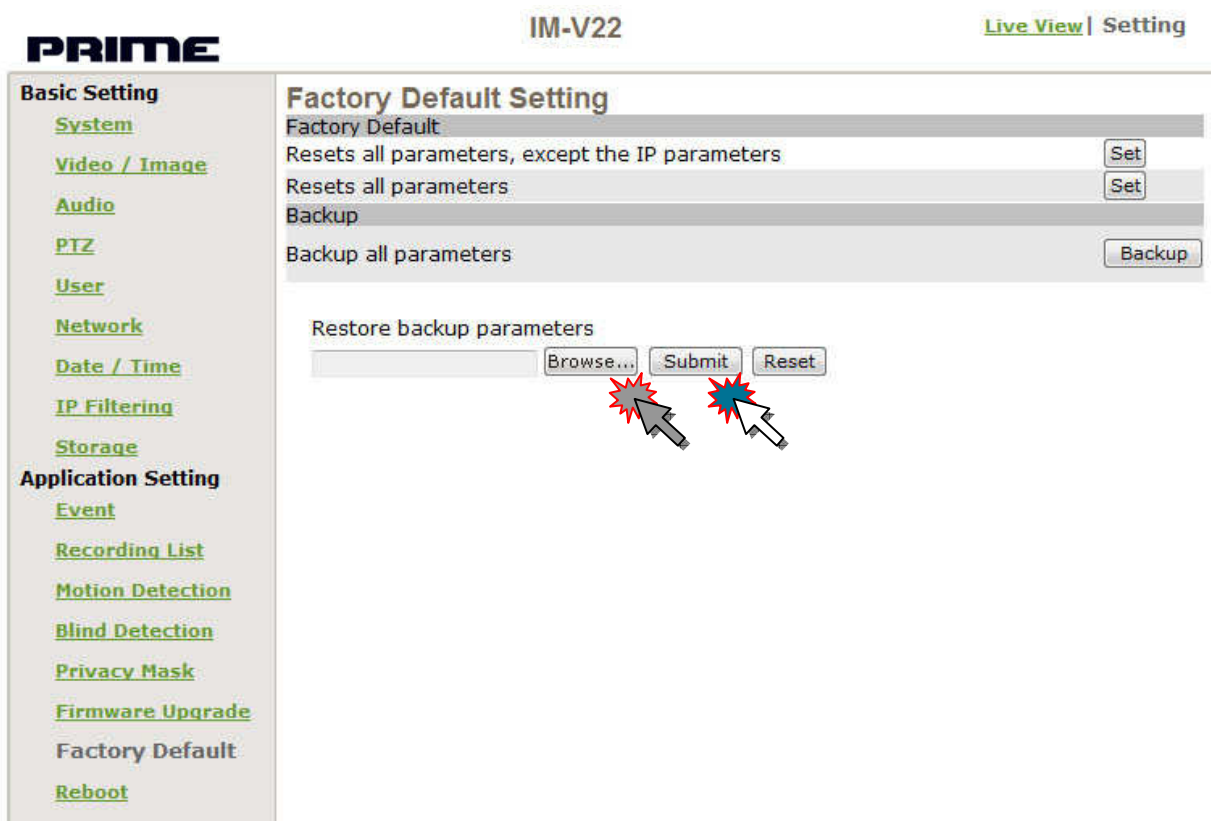

Select a backup file to restore.

Reboot

Use the setting to reboot the camera automatically by click **Reboot**.

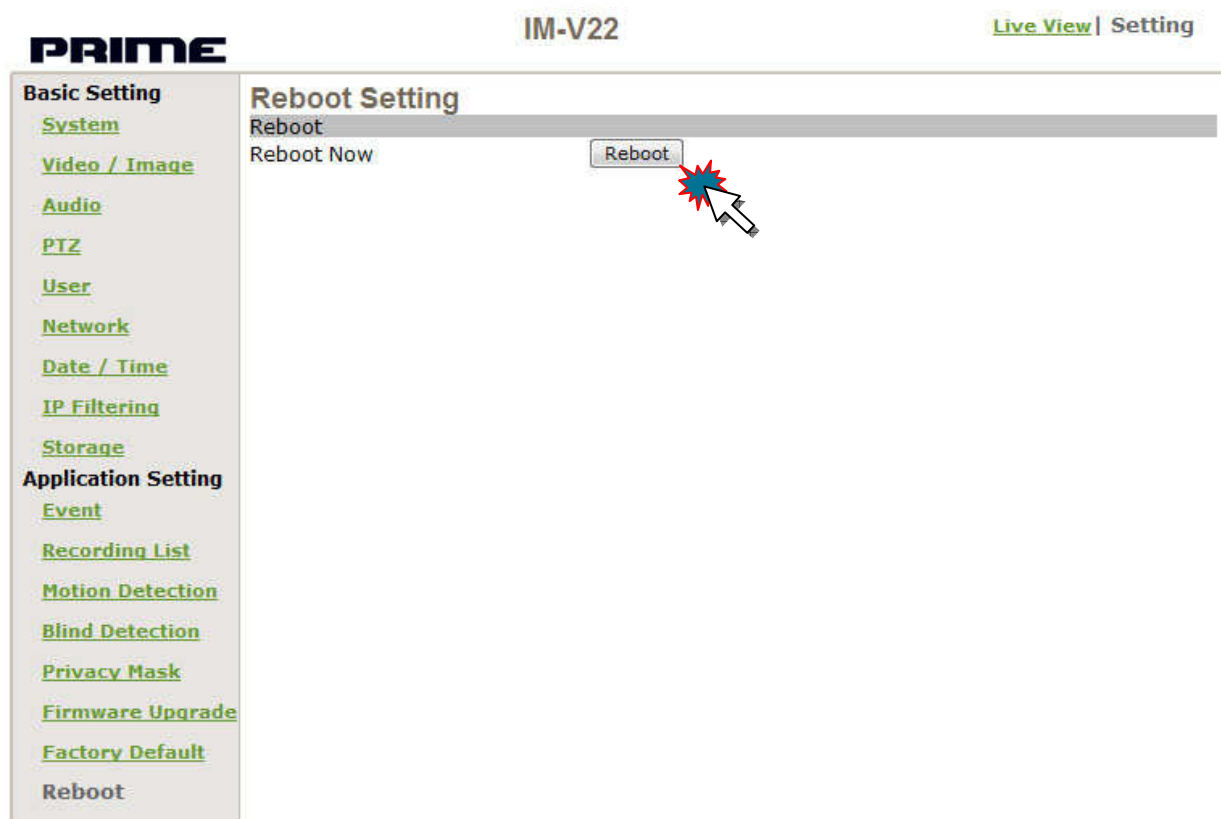

Appendix

Change the Internet Explorer Settings


Change the security setting of IE browser to allow the ActiveX Control be plug-in to the IE browser.

Please follow the steps as below:


1. Open the **IE browser** from Desktop or State Menu.



2. Select the **Tools → Internet Options → Security → Custom Level**

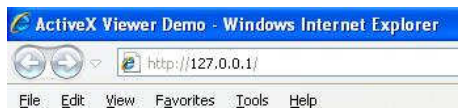

3. Select the bookmark of **Security** and click **Customer Level** to check the Security Level.

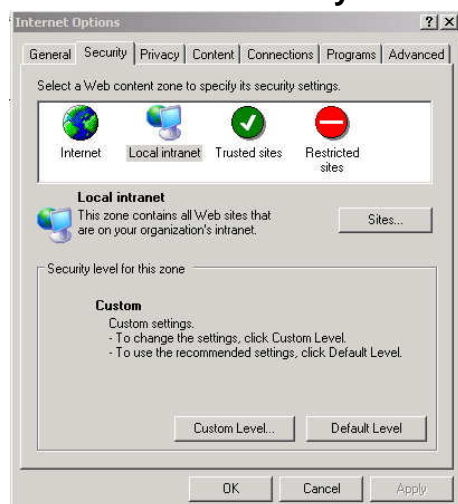

4. Make sure the security setting is **Medium**, and the commonly used default security level.



5. Click **OK** to save the parameter then quit the window. Please restart the IE Browser again.


Set up the Router setting with IP Camera

Use DHCP if you want to use IM-V22 IP IR Dome Camera via the Internet (LAN). However, the IP must be set to fixed when you want to use the camera on a WAN. For this application, it is required to set up the function of the virtual server on the ADSL router.

Please follow the steps as below to complete the setting:

1. Enter the camera setting page to set a fixed IP.
(Refer to the **Network Setting**) Ex.: 192.168.0.49
2. Enter the ADSL router main setting page. Ex.: Zonet ADSL router
3. Enter the Virtual Server setting page.
 - a. Set "mapping of **HTTP Port (80)** and **Definition Port (554)** to 192.168.0.49".
 - b. Restart ADSL router.

When the setting is completed, you can operate the camera from the WAN IP Address via the ADSL router.

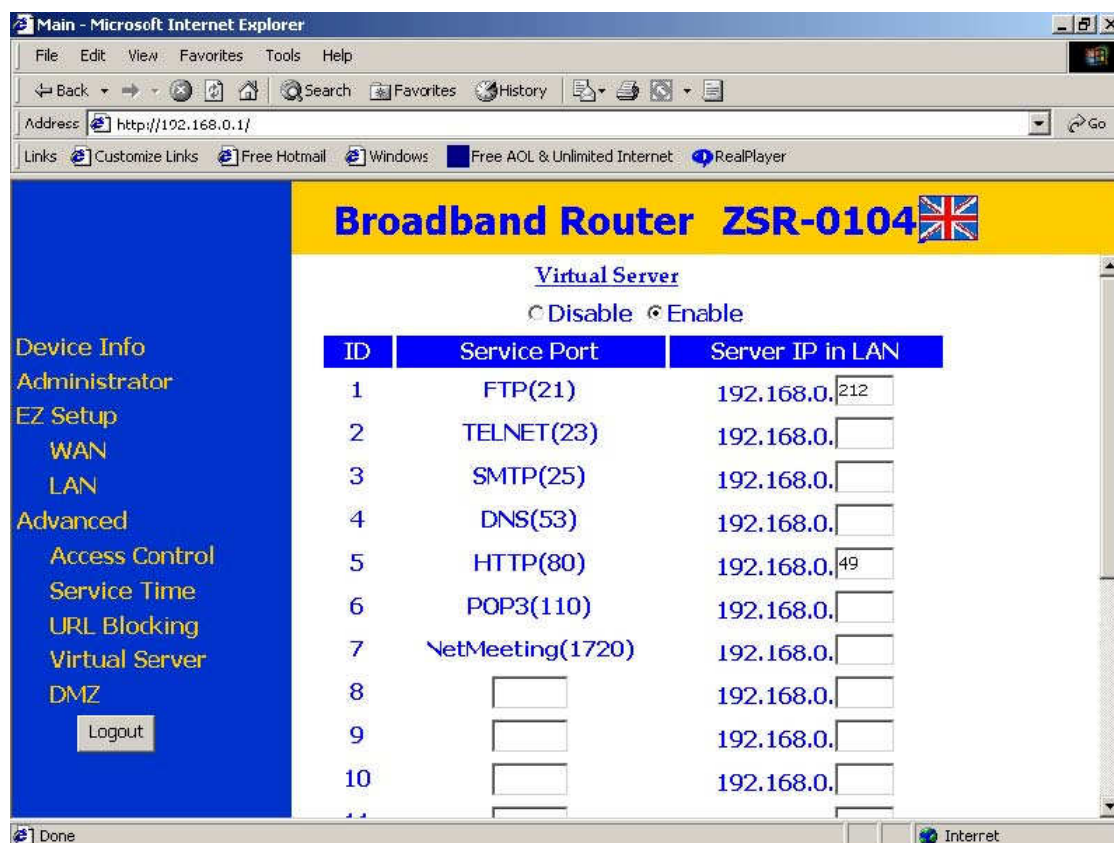

NOTE :

The setting screen of the virtual server is not the same for all of the ADSL routers. Please refer to the manual of the ADSL router that you purchased for more information about the setting.


DDNS Application

How to apply and setup the DDNS service?

The DDNS (Dynamic DNS) is an application for network service. It can help you to solve the problem of dynamic IP change in network device. You can assign a name for favorable website to correspond with device IP address through DDNS.

(e.g.: [www. IP Camera.com](http://www.IP Camera.com) and www.VideoServer.com).

After the setting is completed, you can connect the IP device through you have assigned the name.

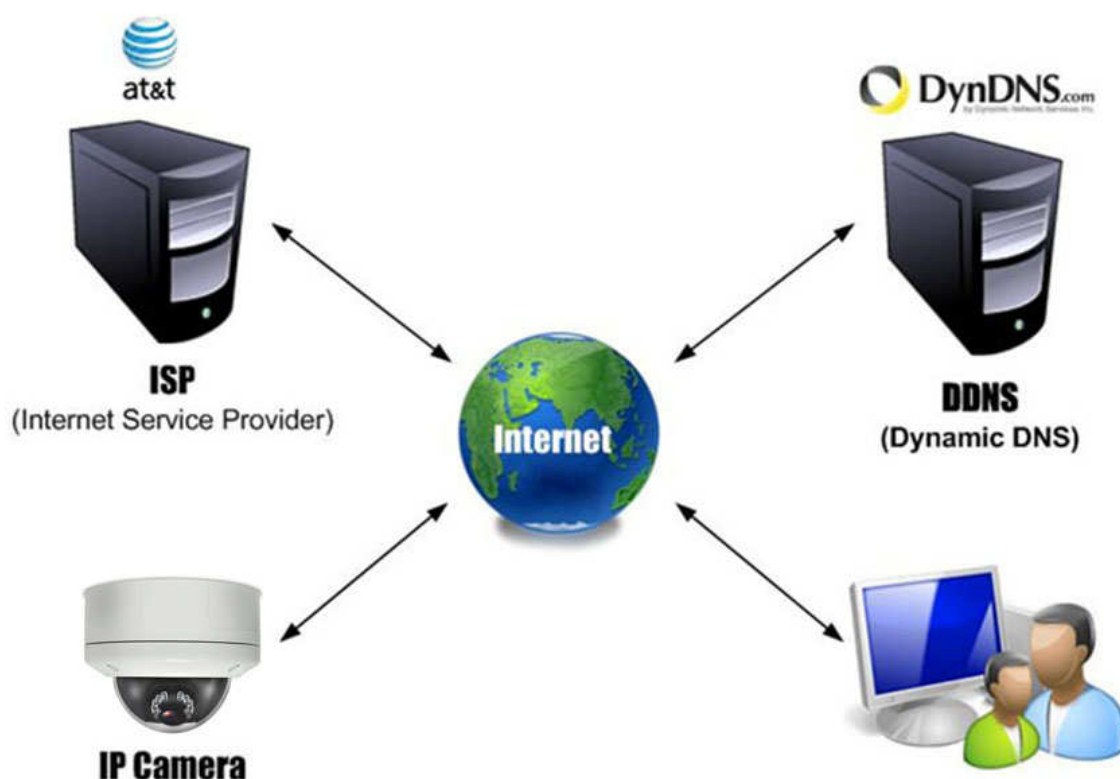

Firstly, please apply for an account from a DDNS supplier. These DDNS suppliers provide some free services for the users on the world. This chapter will demonstrate a step by step method of how to set up a DDNS account, for the example we illustrate here is DynDNS. Please follow the illustration as below:

NOTE :


You can find some free DDNS suppliers on Internet. For example: [DynDNS](http://DynDNS.com), [No-IP](http://No-IP.com) and [Oray](http://Oray.com).




1. Please enter the website address of "DynDNS" (<http://www.dyndns.com/>) through Browser.






2. Please click **Create Account**.
(Skip step 2~9 if you have an account with DynDns.org already.)

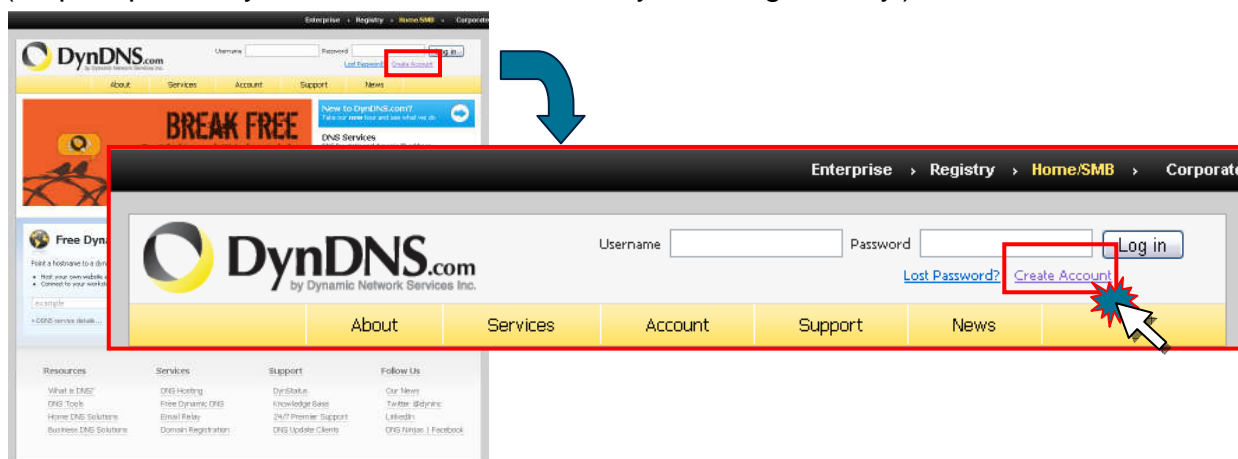


3. Please fill in all the required information in the table such as: **Username**, **Password**, **Email** and **Security Image Number** etc. When you have finished, please select **Agree Box** then click **Create Account**.

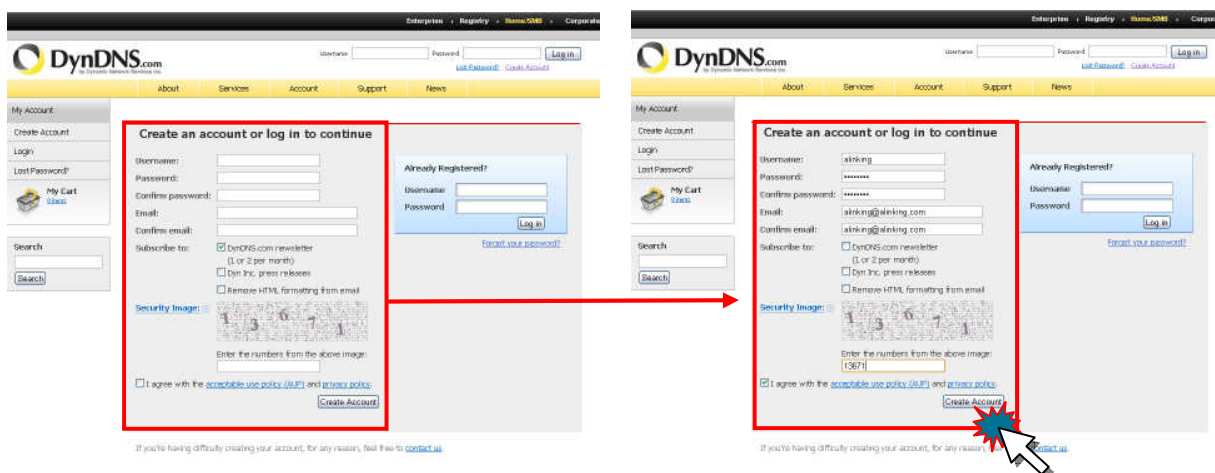

4. A confirmation letter will send to your mailbox after you click **Create Account**. Please acknowledge the confirmation letter by clicking on the link provided in the mail to continue with the steps

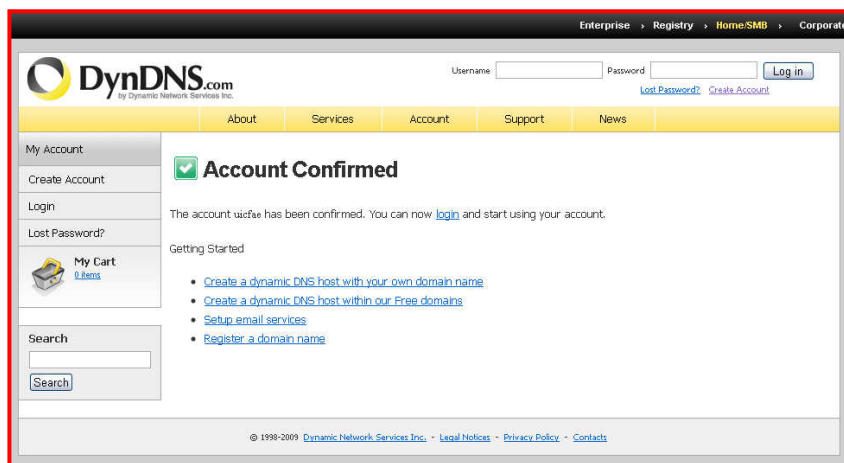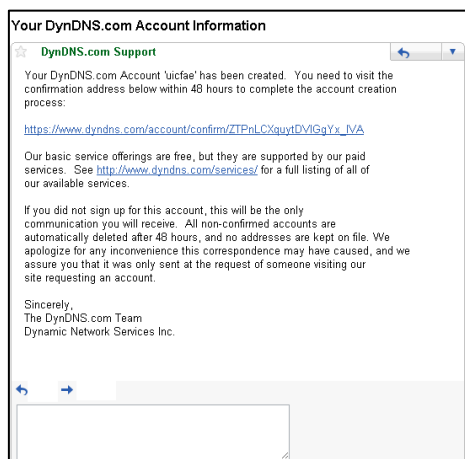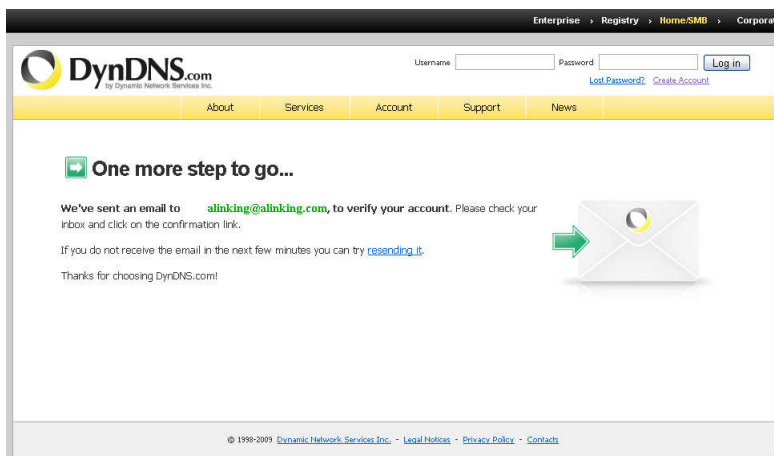


5. You can login to DynDns.org, please input the username and password on main webpage. And click "Service" button to set up the DDNS function.

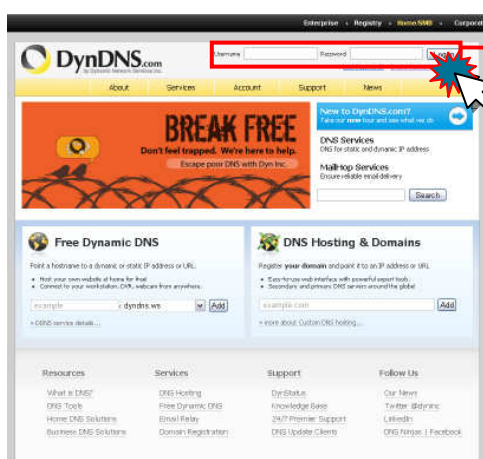



6. Please click **Dynamic DNS** then select **Dynamic DNS Free** service.



7. Click **Get Started** button to add the new Hostname.

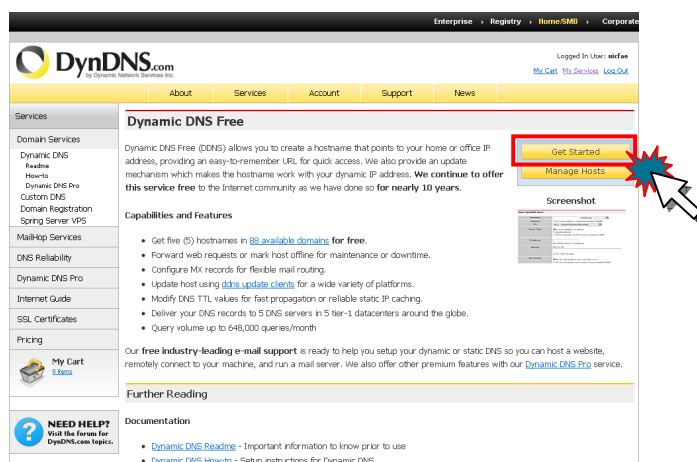

8. Set up the **Hostname** and **IP Address** by yourself. You can enter your favorite domain name as your **Hostname**, and input correct **IP address** (e.g. the IP address need to input the real IP address from IP Camera, please see the NOTE illustration below). Finally, click **Add Host** to finish with the setting.

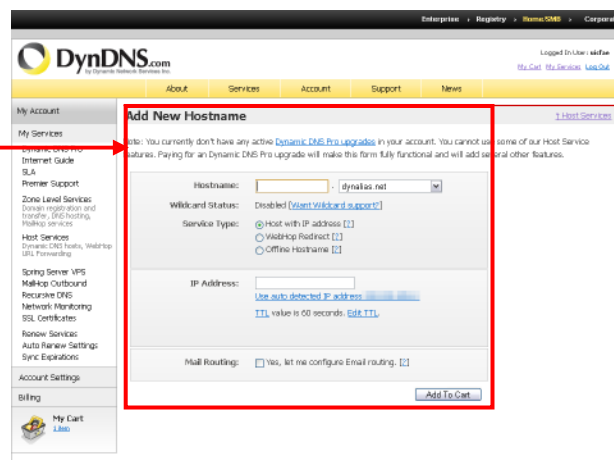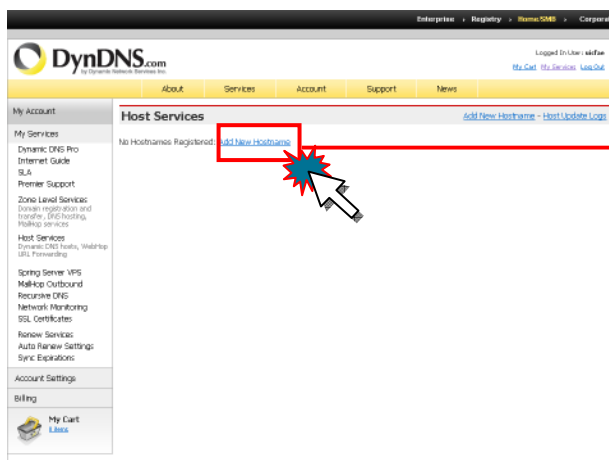


NOTE :

The IP almost appear after IP setting.


(PPPoE/DHCP/Fix IP). Click Setting > System > IP Address

Basic Setting	
System	
System	
System Log	
System Setting	
System Info	
Device Name	MegaPixel IPCAM <input type="button" value="Set"/>
MAC Address	00:30:F0:0E:01:5D
IP Address	122.147.155.171

9. After add new hostname, click **Next** to enter the next step.
(Note: as you are using **Dynamic DNS Free** service; so you can ignore the information of **Shopping Cart**.)

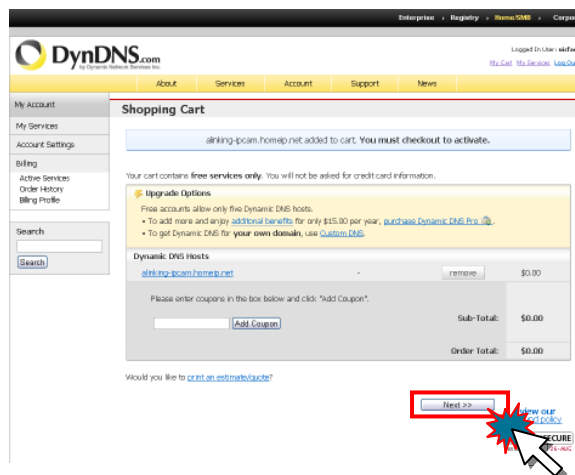

10. Please click Activate Services button to enable DDNS service.

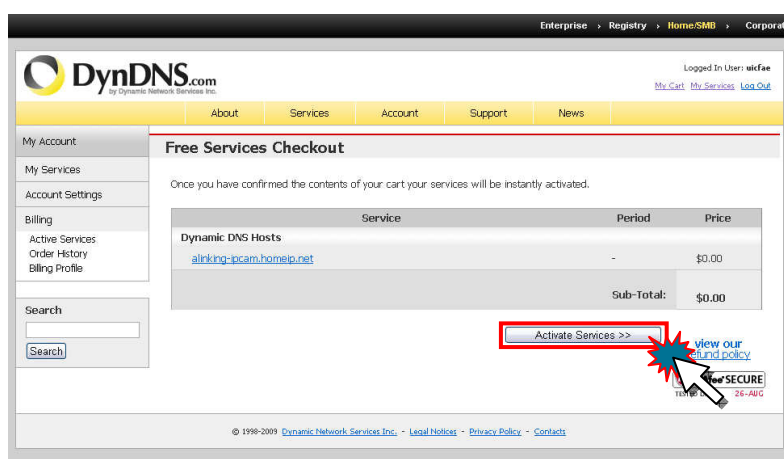


11. The completion of the registration page is shown below. You can now use the DDNS service to your devices.



How to check if the DDNS service is successful?

1. If you can not connect the IP devices through the domain name, which you have set up, you can test the DDNS service on your PC.
2. Please open the “command mode” from “Start Menu”.
Start Menu > Program > Accessories > Command mode
3. Input the command: `c:\>ping (Your domain name e.g. www.IP Camera.com) [ENTER]`.
If the command mode displays “Reply from” On the screen, then your DDNS is working correctly.

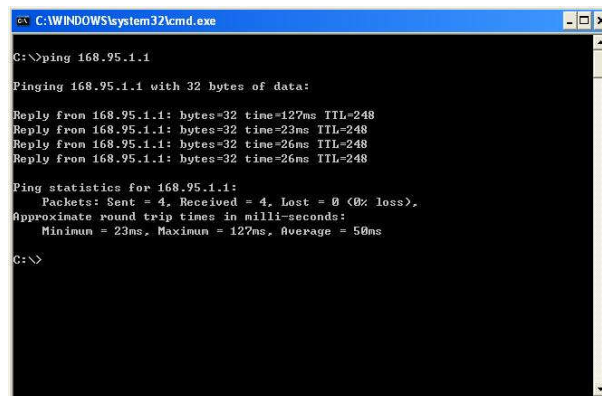

```
C:\WINDOWS\system32\cmd.exe

C:\>ping 168.95.1.1


Pinging 168.95.1.1 with 32 bytes of data:

Reply from 168.95.1.1: bytes=32 time=127ms TTL=248
Reply from 168.95.1.1: bytes=32 time=23ms TTL=248
Reply from 168.95.1.1: bytes=32 time=26ms TTL=248
Reply from 168.95.1.1: bytes=32 time=26ms TTL=248

Ping statistics for 168.95.1.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 23ms, Maximum = 127ms, Average = 58ms

C:\>
```

4. If the command mode displays “timed out”. Then your DDNS is not working. Please double check your account information is entered correctly.

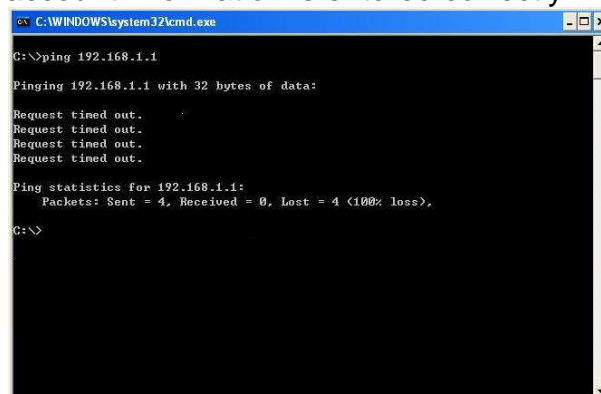

```
C:\WINDOWS\system32\cmd.exe

C:\>ping 192.168.1.1


Pinging 192.168.1.1 with 32 bytes of data:

Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),

C:\>
```

5. If the command mode displays “Ping request could not find host...”. Then you need to re-visit DDNS website to confirm all the required information is correctly filled in. Alternatively, you can set up another account with start

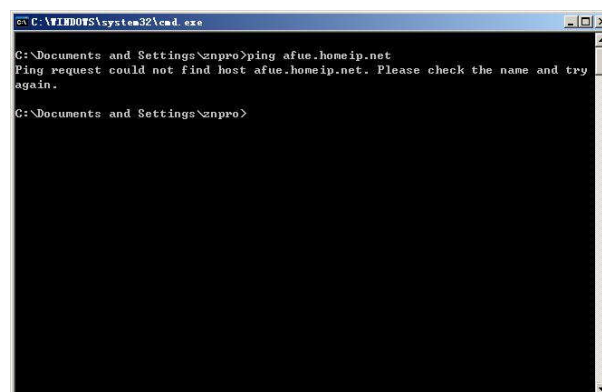


```
C:\WINDOWS\system32\cmd.exe

C:\Documents and Settings\anpro>ping afue.homeip.net
Ping request could not find host afue.homeip.net. Please check the name and try again.

C:\Documents and Settings\anpro>
```

Mobile Application

Our Video server can support the 3GPP(RTSP) connection through the mobile phone. Please check your ISP to provide the mobile networking service which working on your mobile phone first. And modify the setting of Video server to enable the application. Please see the detail illustration as below:

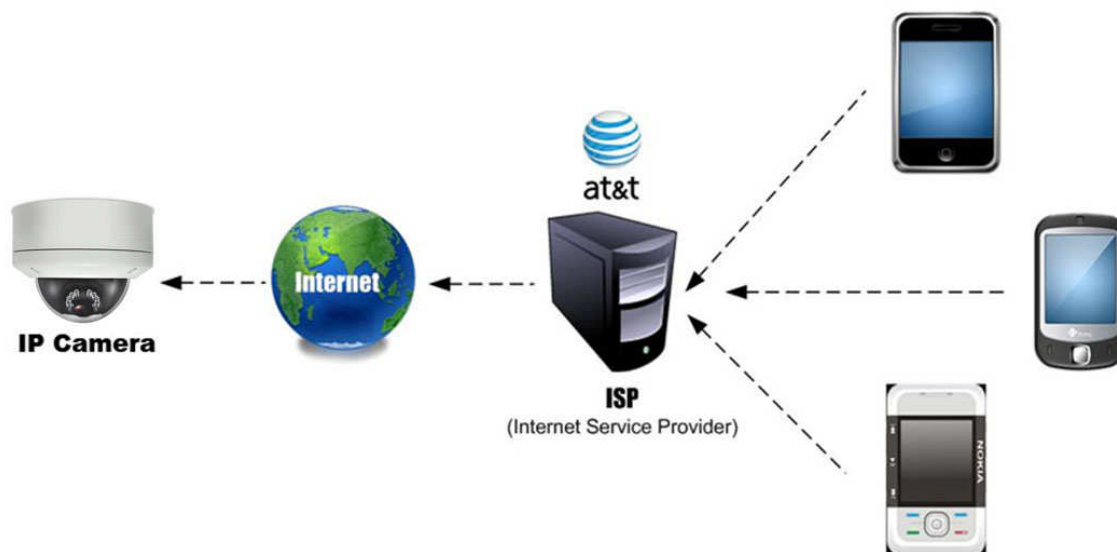


NOTE :

The 3GPP, which meaning the compression format, is not the same 3G. You can use the 2.5G/3G to connect to Internet through ISP.

Step1: Make sure the Video server is alive on Internet (WAN Environment)

Try to remote connect Video server via public IP. If you use the Router, please check the Port Setting of your camera and the Virtual Server Setting of Router.


Step2: Check your Video server setting

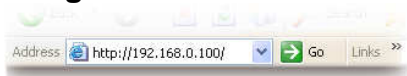

Open the web browser then input the IP address from the video server.
Input the user name & password to Login




Click the "Setting" on right-upper to enter the setting mode.

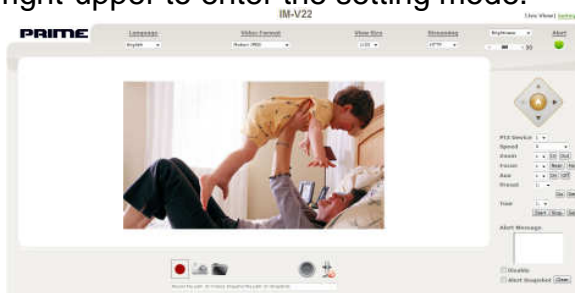


Step3: Check the RTSP streaming setting H.264 Type

Click "**Video/Image**" of Basic Setting → "Video" → Set up the sub streaming resolution (e.g. Please see the suggestion parameter as below picture) → Click **Save** to finish the setting.

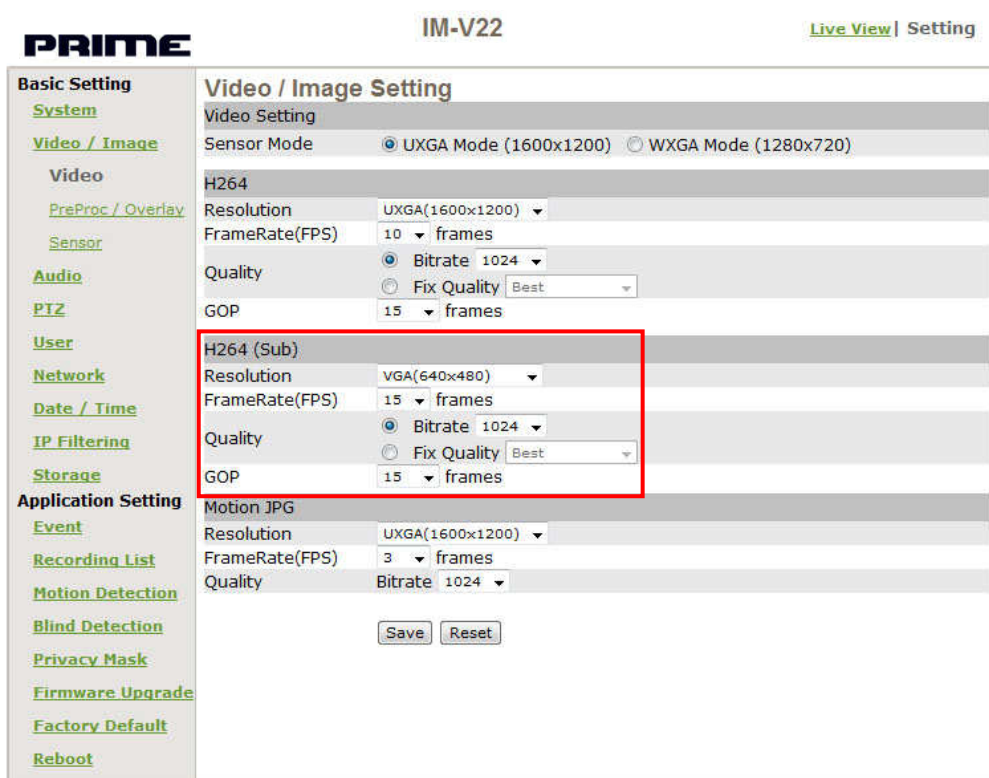

Step4: View limit Setting

According to the requirement, you can pass the live view limit. Please see the illustration as below.

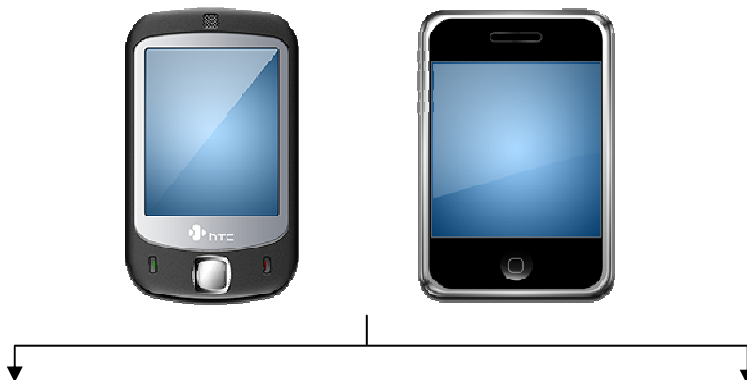



With Password



Without Password

■ With password

Don't need to enable the "anonymous login" function, but you need to input the account information every login. The application can keep the video server privacy.
e.g. Input `rtsp://xxx.xxx.xxx.xxx:554/cam1/3gpp?user=root&pwd=root` in mobile phone.
The "-2" mean the sub stream.


■ Without password:

Enable anonymous login.

Click the "**User**" of Basic Setting →

Click the "**Enable**" from anonymous login of User Setting →

Click the **Save** to finish the setting.

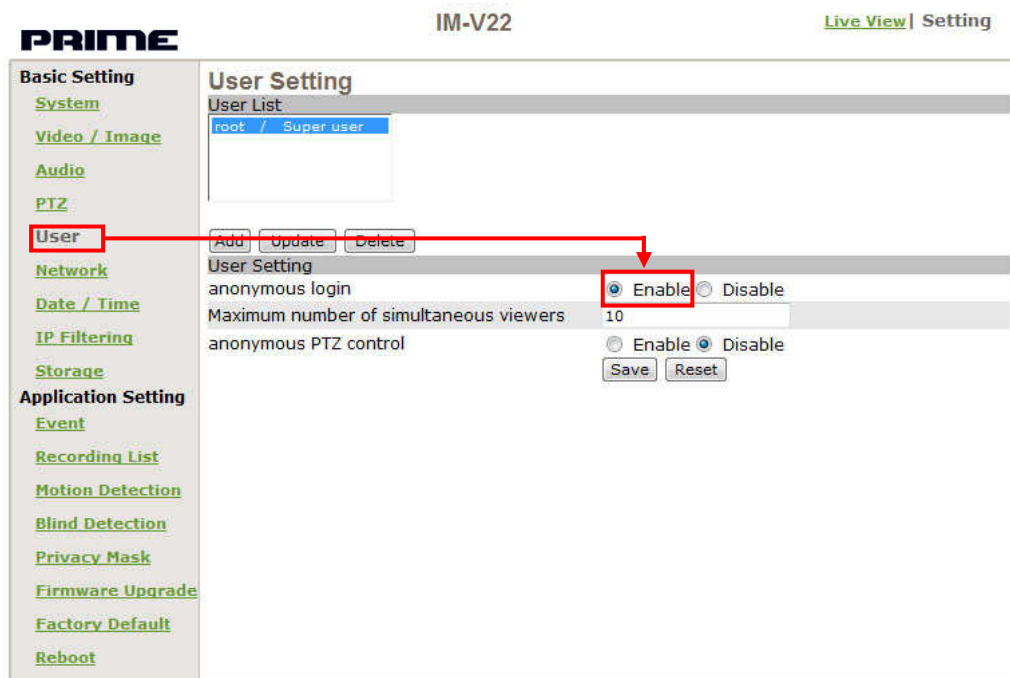

e.g. Input `rtsp://xxx.xxx.xxx.xxx:554/cam1/3gpp` in mobile phone.

NOTE :

The video server can support 4 channels streaming to use it. Modify the cam number of URI link to change the channel. E.g. Channel 2: `rtsp://xxx.xxx.xxx.xxx:554/cam2/h.264-2`

Step5: Try to connect Video server through the mobile phone

Check the mobile phone can support the streaming media player and internet service, and then see the example operation as below:


NOTE :

Suggest using the wireless solution. It can provide the highest network speed and save the mobile network cost.


Symbain System

Example: Nokia N71. Follow these steps to set up the viewing function


1. Enter multimedia data from the main screen.

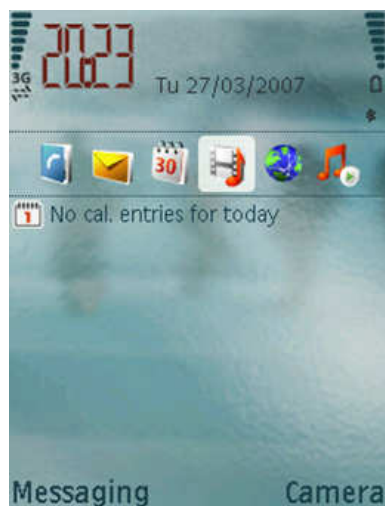

2. Select a streaming link

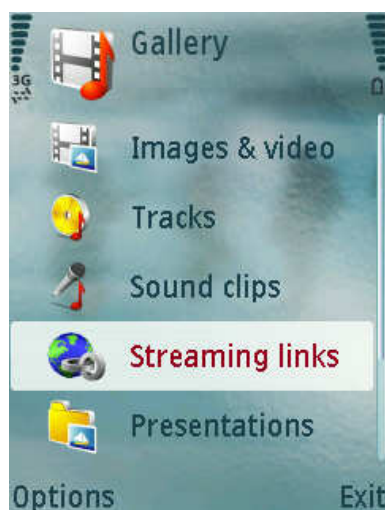

3. Add a new link.

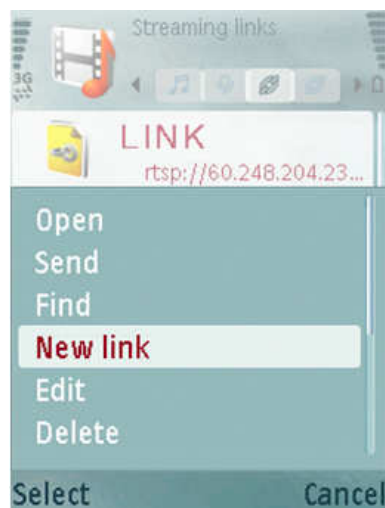

4. Enter the link name.




5. Enter the IP address of the camera
e.g. (Without Password)
<rtsp://xxx.xxx.xxx.xxx:554/cam1/3gpp>
e.g. (With Password)
<rtsp://xxx.xxx.xxx.xxx:554/cam1/3gpp?user=root&pwd=root>
6. Select **OK** to save the setting.


NOTE :

Some mobile phone can only support the without password application


7. Select this stream name of bookmark to proceed with linking

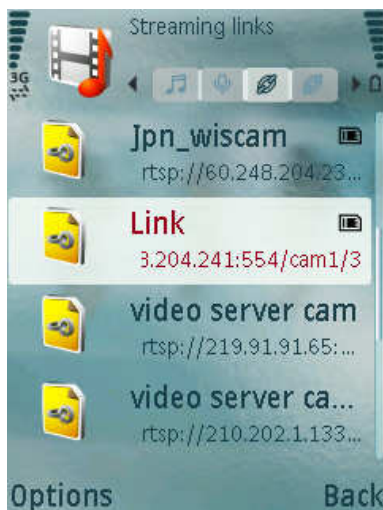


8. Select "Yes" to connect.

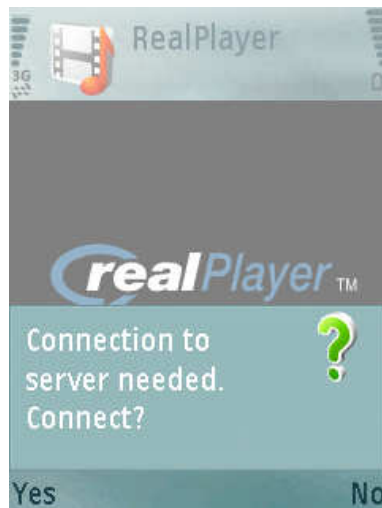

9. Connecting.

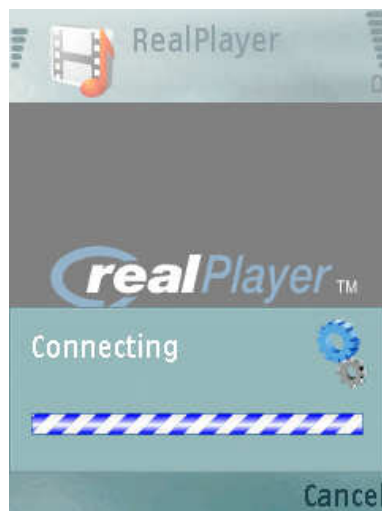

10. Loading the image

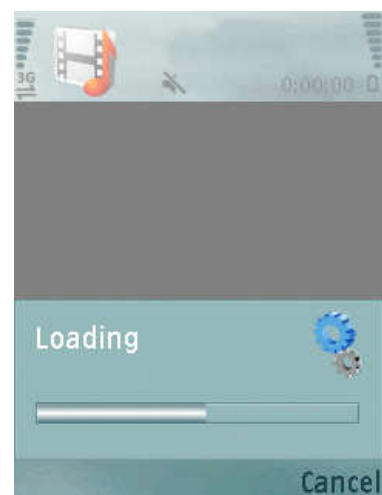

11. Show the video stream on the mobile screen.


NOTE :

If the software cannot receive the stream from the video server, please try to check the Internet setting of software is correctly.

iPhone System

Example: iPhone 3GS. Follow these steps to set up the viewing function


1. Download and install the free video streaming software through iPhone(App Store) or iTune. (e.g. iPhone(App Store))
2. Tap “App Store” icon to open the software

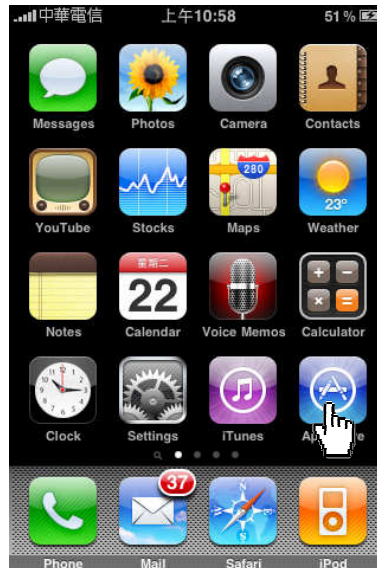


3. Tap “Search” icon then input the “Streamer” to search the software.




4. Tap "Streamer" to enter the download page

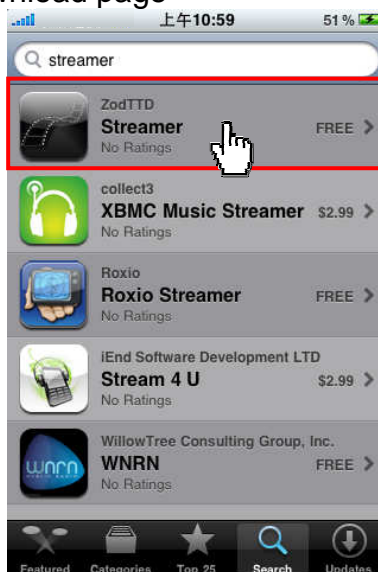


5. Tap **FREE** button to change the selection.

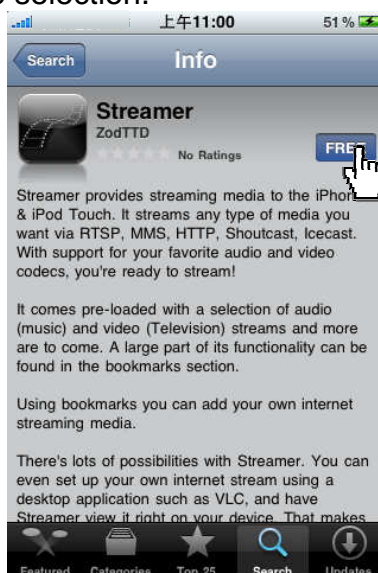


6. Tap **INSTALL** to install the software.

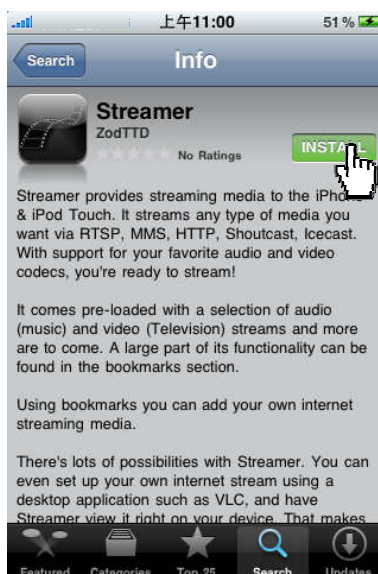


7. Go back the main screen then select Steamer icon to open the software

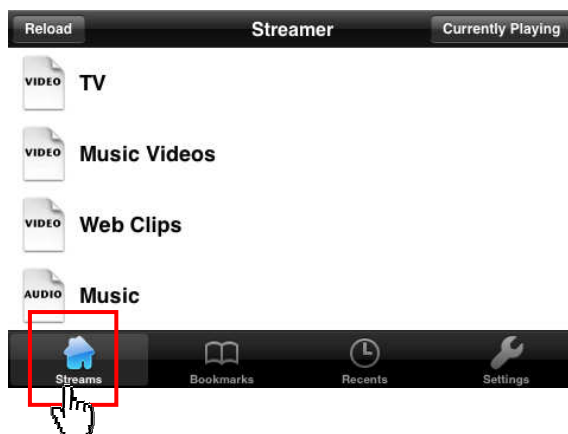


8. Tap "Bookmarks" icon.

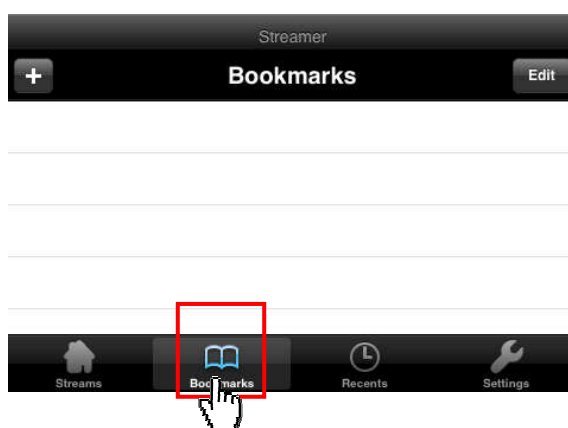

9. Tap "+" signal to add the bookmark.

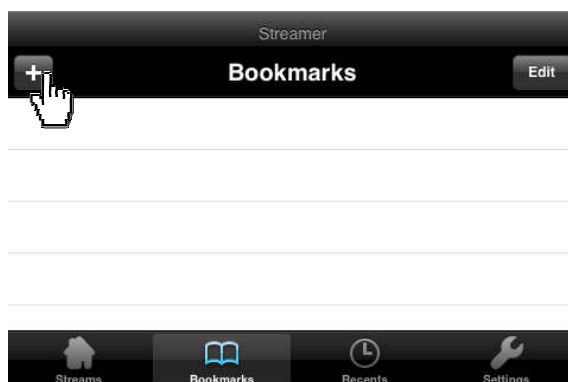


10. Input your URI link of the video server (e.g. `rtsp://xxx.xxx.xxx.xxx/cam1/mpeg`), and tap Save button to save the link.

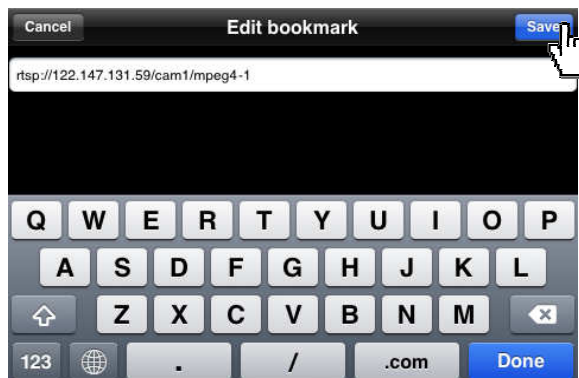


NOTE :


The software can only support the Without Password mode.
The video server need to set more in QVGA(320 x 240) resolution.

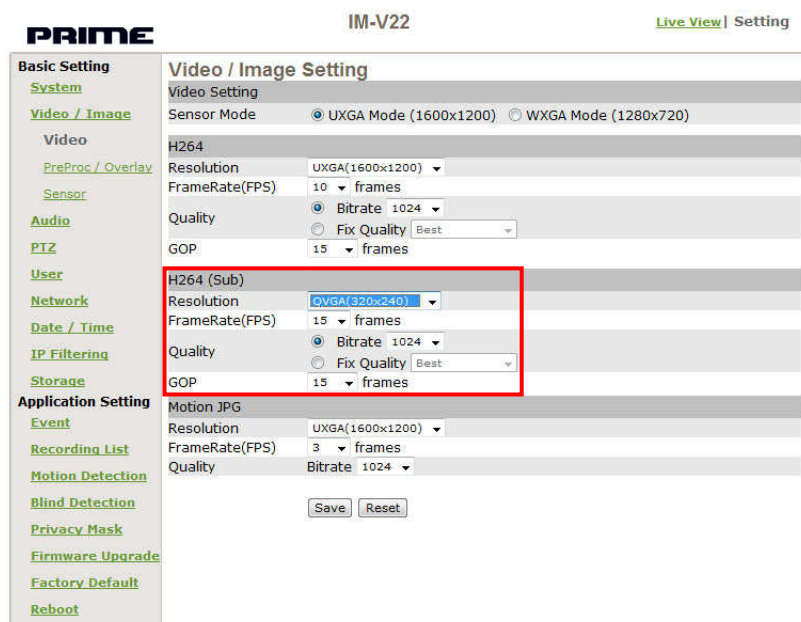


11. Tap the link to connect to the video server

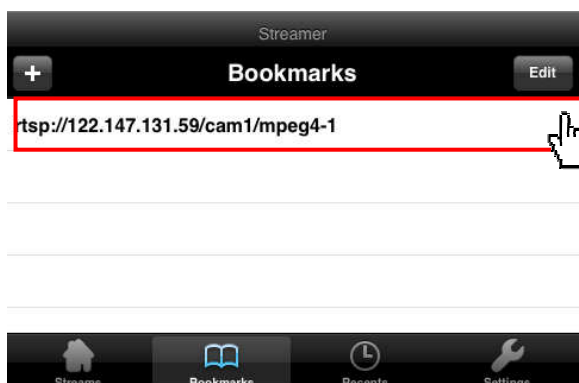

12. Show the video stream on the mobile screen

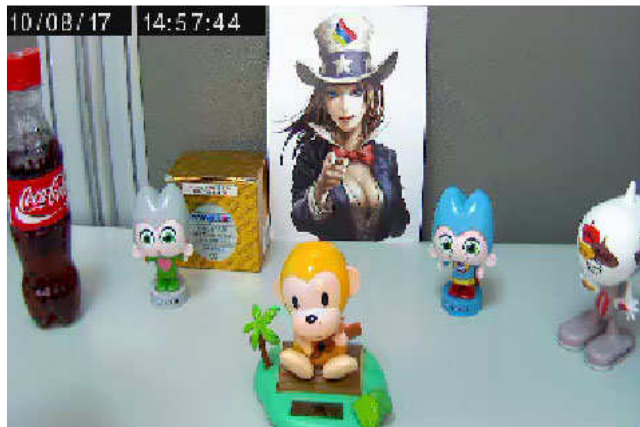

13. Tap the screen to display the detail information, and the APP can support the audio application.

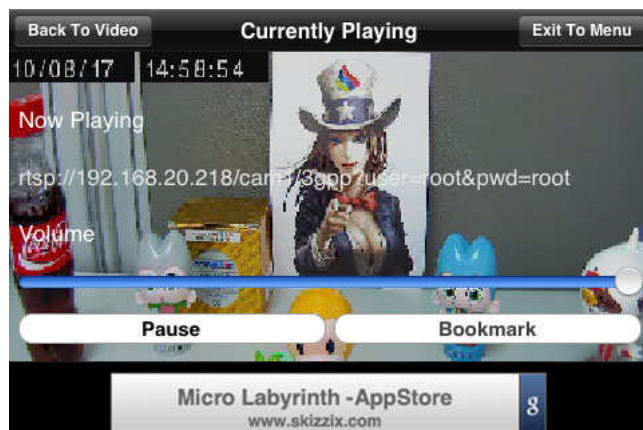

NOTE :

If the software cannot receive the stream from the video server, please try to check the setting is correctly.

Support the Cellular / Mobile Phone List

Please suggest the list to buy the applicable cellular / Mobile Phone which to use.

Brand	Type	Brand	Type
Nokia	6630 E61 N70 N73 N82 N93	Vibo	Win II
HTC	Touch Diamond2 Touch Viva Touch Cruise Touch HD Touch 3G Magic Hero	iPhone	3G 3GS


NOTE :

The application almost supports all cellular / mobile phone on the market. The list is the reference data for user.


Multicast Application

The Multicast function is a technique for one-to-many communication over an IP infrastructure in a network. The PC can be given the network package after login the account, so the function can use one network package to copy many packages to PCs. It allows multiple people to watch video streaming without limitation on the number of users, but is only applicable in the LAN environment. The function must need to combine with the application of IGMP service (e.g. Layer 3 Switch.).

The Regular Mode: (Through TCP/UDP/HTTP)

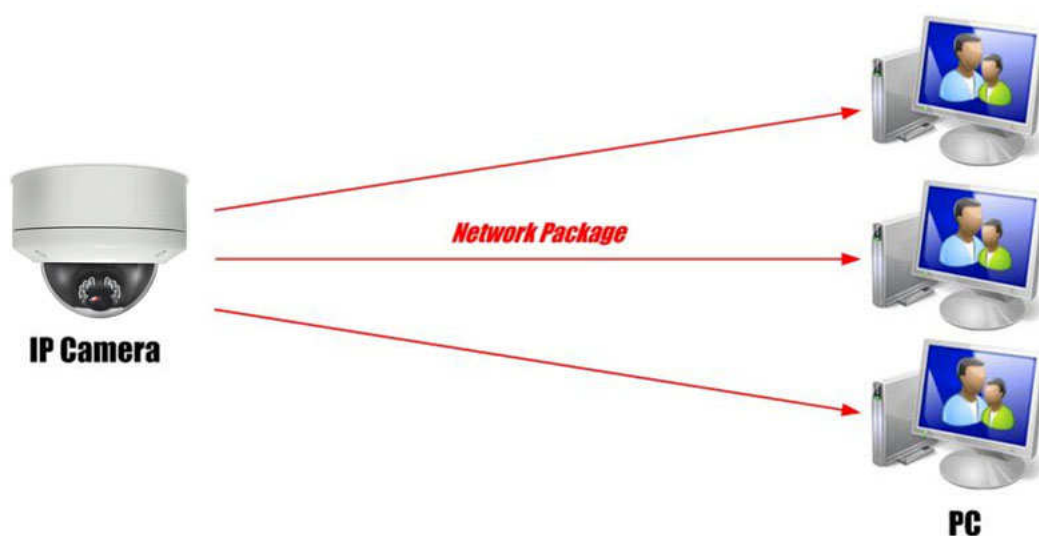

The Multicast Mode: (Through Multicast)

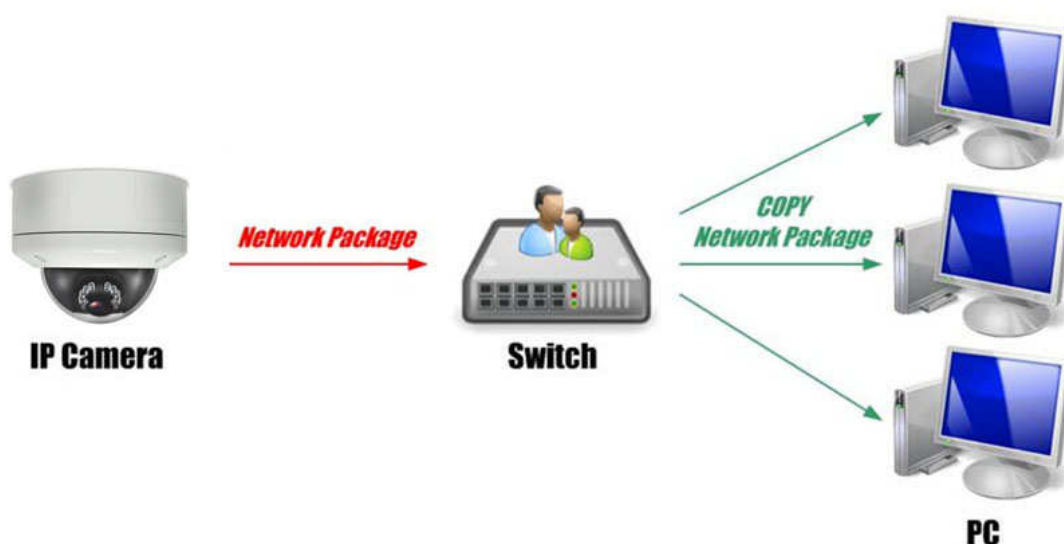

NOTE :

The function is not limit with the Layer 3 Switch, and you can also select the IGMP Server to use the application.

PRIME

IM-V22

[Live View](#)
[Setting](#)

Basic Setting

[System](#)
[Video / Image](#)
[Audio](#)
[PTZ](#)
[User](#)
[Network](#)
[Network](#)
[Services](#)
[Streaming](#)
[PPPoE](#)
[DDNS](#)
[UPnP](#)
[SMTP](#)
[SMB](#)
[Notification](#)

Multicast

[Date / Time](#)
[IP Filtering](#)
[Storage](#)

Application Setting

[Event](#)
[Recording List](#)
[Motion Detection](#)
[Blind Detection](#)
[Privacy Mask](#)
[Firmware Upgrade](#)
[Factory Default](#)
[Reboot](#)

Multicast Setting

H264 (Main Stream)

Enable

☐ On
 ☒ Off

Video Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Video Port	1234	(2~65534, Even)
Video TTL	5	(1~255)
Audio Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Audio Port	1236	(2~65534, Even)
Audio TTL	5	(1~255)
Event Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Event Port	1238	(2~65534, Even)
Event TTL	5	(1~255)

H264 (Sub Stream)

Enable

☐ On
 ☒ Off

Video Address	224.1.1.2	(224.1.1.1 ~ 239.255.255.255)
Video Port	1234	(2~65534, Even)
Video TTL	5	(1~255)
Audio Address	224.1.1.2	(224.1.1.1 ~ 239.255.255.255)
Audio Port	1236	(2~65534, Even)
Audio TTL	5	(1~255)
Event Address	224.1.1.2	(224.1.1.1 ~ 239.255.255.255)
Event Port	1238	(2~65534, Even)
Event TTL	5	(1~255)

Motion JPEG

Enable

☐ On
 ☒ Off


Video Address	224.1.1.3	(224.1.1.1 ~ 239.255.255.255)
Video Port	1234	(2~65534, Even)
Video TTL	5	(1~255)
Audio Address	224.1.1.3	(224.1.1.1 ~ 239.255.255.255)
Audio Port	1236	(2~65534, Even)
Audio TTL	5	(1~255)
Event Address	224.1.1.3	(224.1.1.1 ~ 239.255.255.255)
Event Port	1238	(2~65534, Even)
Event TTL	5	(1~255)

Save

Reset

N.O.	Item	Illustration
1	H264 (Main)	Display the multicast setting of H264 (Main)
2	H264 (Sub)	Display the multicast setting of H264 (Sub)
3	Motion JPEG	Display the multicast setting of Motion JPEG

The function will display the different streaming mode from IP device. No matter how many modes to display, the content is the same setting to the user. There are three kinds of package type for User: Video, Audio and Event. Please see the detail setting as below:

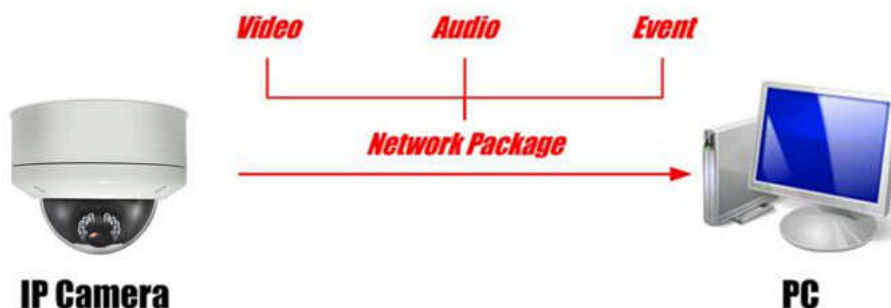

NOTE :

The function can only enable one streaming to use the application.

H264 (Main)

The function has some limit parameter, so please follow our limit parameter to set up it. All restrictions exist in the rear of each option.

Enable	<input checked="" type="radio"/> On <input type="radio"/> Off	
Video Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Video Port	1234	(2~65534, Even)
Video TTL	5	(1~255)
Audio Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Audio Port	1236	(2~65534, Even)
Audio TTL	5	(1~255)
Event Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Event Port	1238	(2~65534, Even)
Event TTL	5	(1~255)

NOTE :

Suggest using the default parameter to use the multicast function.

Please make reference to the chapter of Basic Setting > Network > Multicast for further detailed description.

Enable

Click On or Off selection to enable or disable the function.

Video Address

Set up the IP address to transfer the Video package. The default setting is 224.1.1.1.

Video Port

Set up the Port to transfer the Video package. The default setting is 1234.

Video TTL

Set up the TTL time to transfer the Video package. The default setting is 5

Audio Address

Set up the IP address to transfer the Audio package. The default setting is 224.1.1.1

Audio Port

Set up the Port to transfer the Audio package. The default setting is 1236.

Audio TTL

Set up the TTL time to transfer the Audio package. The default setting is 5

Event Address

Set up the IP address to transfer the Event package. The default setting is 224.1.1.1

Event Port

Set up the Port to transfer the Event package. The default setting is 1238.

Event TTL

Set up the TTL time to transfer the Event package. The default setting is 5

H264 (Sub)

The setting is the same with the H264 (Sub).

Enable	<input checked="" type="radio"/> On <input type="radio"/> Off	
Video Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Video Port	1234	(2~65534, Even)
Video TTL	5	(1~255)
Audio Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Audio Port	1236	(2~65534, Even)
Audio TTL	5	(1~255)
Event Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Event Port	1238	(2~65534, Even)
Event TTL	5	(1~255)

NOTE :

Suggest using the default parameter to use the multicast function.

Please make reference to the chapter of Basic Setting > Network > Multicast for further detailed description.

Enable

Click On or Off selection to enable or disable the function.

Video Address

Set up the IP address to transfer the Video package. The default setting is 224.1.1.2.

Video Port

Set up the Port to transfer the Video package. The default setting is 1234.

Video TTL

Set up the TTL time to transfer the Video package. The default setting is 5

Audio Address

Set up the IP address to transfer the Audio package. The default setting is 224.1.1.2

Audio Port

Set up the Port to transfer the Audio package. The default setting is 1236.

Audio TTL

Set up the TTL time to transfer the Audio package. The default setting is 5

Event Address

Set up the IP address to transfer the Event package. The default setting is 224.1.1.2

Event Port

Set up the Port to transfer the Event package. The default setting is 1238.

Event TTL

Set up the TTL time to transfer the Event package. The default setting is 5

Motion JPEG

The setting is the same with the MJPEG.

Enable	<input checked="" type="radio"/> On <input type="radio"/> Off	
Video Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Video Port	1234	(2~65534, Even)
Video TTL	5	(1~255)
Audio Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Audio Port	1236	(2~65534, Even)
Audio TTL	5	(1~255)
Event Address	224.1.1.1	(224.1.1.1 ~ 239.255.255.255)
Event Port	1238	(2~65534, Even)
Event TTL	5	(1~255)

NOTE :

Suggest using the default parameter to use the multicast function.

Please make reference to the chapter of Basic Setting > Network > Multicast for further detailed description.

Enable

Click On or Off selection to enable or disable the function.

Video Address

Set up the IP address to transfer the Video package. The default setting is 224.1.1.3

Video Port

Set up the Port to transfer the Video package. The default setting is 1234.

Video TTL

Set up the TTL time to transfer the Video package. The default setting is 5

Audio Address

Set up the IP address to transfer the Audio package. The default setting is 224.1.1.3

Audio Port

Set up the Port to transfer the Audio package. The default setting is 1236.

Audio TTL

Set up the TTL time to transfer the Audio package. The default setting is 5

Event Address

Set up the IP address to transfer the Event package. The default setting is 224.1.1.3

Event Port

Set up the Port to transfer the Event package. The default setting is 1238.

Event TTL

Set up the TTL time to transfer the Event package. The default setting is 5

Please see the detailed steps to **Set up the Multicast function** as below:

1. First, check the LAN environment has the device of IGMP service.

**IGMP**

2. Enter the device then enable the service.

IGMP Snooping Configuration

IGMP Snooping
☒ Enabled
 ☐ Disabled

IGMP Global Settings


Query Interval (60-600 sec)	<input type="text" value="120"/>	Host Timeout (130-153025 sec)	<input type="text" value="200"/>
Max Response Time (10-25 sec)	<input type="text" value="10"/>	Router Timeout (60-600 sec)	<input type="text" value="260"/>
Robustness Variable (2-255)	<input type="text" value="2"/>	Leave Time (0-25 sec)	<input type="text" value="1"/>
Last Member Query Interval (1-25 sec)	<input type="text" value="1"/>	<input type="button" value="Apply"/>	

Note: The Host Timeout was computed automatically after keying the value of Robustness Variable, Query Interval and Max Response Time.

The VLAN Settings of IGMP snooping

VLAN ID	VLAN Name	State	Router Ports Settings	Multicast Entry Table
01	default	Enabled <input type="button" value="v"/>	<input type="button" value="Edit"/>	<input type="button" value="View"/>

3. Login the video server then enter the Setting mode.



IM-V22

Live View

Setting

Basic Setting

System

System

System Log

Video / Image

Audio

PTZ

User

Network

Date / Time

IE Filterna

Storage

Application Setting

Event

Recording List

Motion Detection

Blind Detection

Privacy Mask

Firmware Upgrade

Factory Default

Reboot

System Setting

System Info

Device Name

MAC Address

IP Address

Network Mask

Gateway

Model

Hardware Version

Firmware Version

Firmware Build Time

Current Viewers

System Log

IM-V22

Live View

Setting

Basic Setting

System

System

System Log

Video / Image

Audio

PTZ

User

Network

Date / Time

IE Filterna

Storage

Application Setting

Event

Recording List

Motion Detection

Blind Detection

Privacy Mask

Firmware Upgrade

Factory Default

Reboot

System Setting

System Info

Device Name

MAC Address

IP Address

Network Mask

Gateway

Model

Hardware Version

Firmware Version

Firmware Build Time

Current Viewers

System Log

IM-V22

Live View

Setting

Device Name

MAC Address

IP Address

Network Mask

Gateway

Model

Hardware Version

Firmware Version

Firmware Build Time

Current Viewers

System Log

IM-V22

Live View

Setting

Device Name

MAC Address

IP Address

Network Mask

Gateway

Model

Hardware Version

Firmware Version

Firmware Build Time

Current Viewers

System Log

4. Click **Multicast** button from Network.

PRIME

IM-V22

Live View | Settings

Basic Setting

System

Video / Image

Audio

FPS

User

Network

Network

Services

Streaming

PPPoE

QoS

UPnP

SMT

SANSA

Notification

Multicast

Date / Time

IP Filtering

Storage

Application Setting

Event

Recording List

Motion Detection

Blind Detection

Privacy Mask

Firmware Upgrade

Factory Default

Reboot

Multicast Setting

H264 (Main Stream)

Enable

☐ On
 ☒ Off

Video Address

224.1.1.1

(224.1.1.1 ~ 239.255.255.255)

Video Port

1234

(2 ~ 65534, Even)

Video TTL

5

(1~255)

Audio Address

224.1.1.1

(224.1.1.1 ~ 239.255.255.255)

Audio Port

1236

(2 ~ 65534, Even)

Audio TTL

5

(1~255)

Event Address

224.1.1.1

(224.1.1.1 ~ 239.255.255.255)

Event Port

1238

(2 ~ 65534, Even)

Event TTL

5

(1~255)

H264 (Sub Stream)

Enable

☐ On
 ☒ Off

Video Address

224.1.1.2

(224.1.1.1 ~ 239.255.255.255)

Video Port

1234

(2 ~ 65534, Even)

Video TTL

5

(1~255)

Audio Address

224.1.1.2

(224.1.1.1 ~ 239.255.255.255)

Audio Port

1236

(2 ~ 65534, Even)

Audio TTL

5

(1~255)

Event Address

224.1.1.2

(224.1.1.1 ~ 239.255.255.255)

Event Port

1238

(2 ~ 65534, Even)

Event TTL

5

(1~255)

Motion JPEG

Enable

☐ On
 ☒ Off

Video Address

224.1.1.3

(224.1.1.1 ~ 239.255.255.255)

Video Port

1234

(2 ~ 65534, Even)

Video TTL

5

(1~255)

Audio Address

224.1.1.3

(224.1.1.1 ~ 239.255.255.255)

Audio Port

1236

(2 ~ 65534, Even)

Audio TTL

5

(1~255)

Event Address

224.1.1.3

(224.1.1.1 ~ 239.255.255.255)

Event Port

1238

(2 ~ 65534, Even)

Event TTL

5

(1~255)

Save

Reset

5. According to the requirement, select the streaming type to enable the function.

- Click On button from Enable Selection to enable the Multicast function.

PRIME IM-V22 Live View | Setting

Basic Setting
System
Video / Image
Audio
PTZ
User
Network
Network
Services
Streaming
PPPoE
DNS
UPnP
SMTP
SAMBA
Notification
Multicast
Date / Time
IP Filtering
Storage
Application Setting
Event
Recording List
Motion Detection
Blind Detection
Privacy Mask
Firmware Upgrade
Factory Default
Reboot

Multicast Setting
H264 (Main Stream)
Enable ☒ On ☐ Off
Video Address 224.1.1.1 (224.1.1.1 ~ 239.255.255.255)
Video Port 1234 (2~65534, Even)
Video TTL 5 (1~255)
Audio Address 224.1.1.1 (224.1.1.1 ~ 239.255.255.255)
Audio Port 1236 (2~65534, Even)
Audio TTL 5 (1~255)
Event Address 224.1.1.1 (224.1.1.1 ~ 239.255.255.255)
Event Port 1238 (2~65534, Even)
Event TTL 5 (1~255)

H264 (Sub Stream)
Enable ☐ On ☒ Off
Video Address 224.1.1.2 (224.1.1.1 ~ 239.255.255.255)
Video Port 1234 (2~65534, Even)
Video TTL 5 (1~255)
Audio Address 224.1.1.2 (224.1.1.1 ~ 239.255.255.255)
Audio Port 1236 (2~65534, Even)
Audio TTL 5 (1~255)
Event Address 224.1.1.2 (224.1.1.1 ~ 239.255.255.255)
Event Port 1238 (2~65534, Even)
Event TTL 5 (1~255)

Motion JPEG
Enable ☐ On ☒ Off
Video Address 224.1.1.3 (224.1.1.1 ~ 239.255.255.255)
Video Port 1234 (2~65534, Even)
Video TTL 5 (1~255)
Audio Address 224.1.1.3 (224.1.1.1 ~ 239.255.255.255)
Audio Port 1236 (2~65534, Even)
Audio TTL 5 (1~255)
Event Address 224.1.1.3 (224.1.1.1 ~ 239.255.255.255)
Event Port 1238 (2~65534, Even)
Event TTL 5 (1~255)

Save Reset

- Go back the Live View Mode then click the pull-down menu of Streaming to select the Multicast.

PRIME IM-V22 Live View | Setting

Language
English

Video Format
Motion JPEG

View Size
1/2X

Streaming
HTTP

Brightness
50

Alert
On

PTZ Device 1
Speed 3
Zoom 1 In Out
Focus 1 Near Far
Aux 1 On Off
Preset 1 Go Set
Tour 1 Start Stop Set
Alert Message
☐ Disable
☐ Alert Snapshot Clear

Record file path: [C:\Video]; Snapshot file path: [C:\Snapshot]

- Wait a 5~10 sec to re-display the live image via Multicast

NOTE :

Please check the firewall and antivirus setting about IGMP to avoid the function fail.

Troubleshooting and FAQs

Question	Answer and Solution
Function	
What encoder and decoder are used by the camera for sounds and images?	The camera uses MJPEG or H264 compression technology to provide quality images. MJPEG is a standard image compression technology applicable to different browsers without the need to install additional software. H264 is a next-generation image compression standard and can provide high image quality at low bandwidth. The sound decoder uses PCM (Stereo, 16bit, 8kHz) compression technology.
How many users are allowed to view the camera simultaneously?	The maximum number of viewers depends on the bandwidth of the client accessing the camera. About 5~6Mbps are used to process data of the camera, so the maximum number of viewers changes in proportion to FPS and the resolution of the image. Obviously, the higher the number of viewers, the lower the performances at each client end.
Is it possible to catch the image from the camera in a real-time manner?	Yes, you can use the snapshot function from the main control page.
Camera Installation	
Can the camera be used outdoors?	The camera is not waterproof, so a special waterproof cover must be available for outdoor use. Please note that the waterproof cover may affect the built-in pickup function of the camera.
Link LED does not light up.	<ul style="list-style-type: none"> Check that the attached standard transformer is not damaged. Plug the power cable and reboot the machine. If the problem remains, contact your dealer for help.
What network cable is used for the camera?	The camera uses a 10 or 100 Base-T Category 5 UTP network cable.
How to install and operate the camera behind a firewall?	If you have a firewall in your network environment, please select HTTP mode (Port80). Generally the port 80 is always open for the browser to access the Internet.
What are the username and password for the first use and after reset to factory default?	Username = root Password = root Please change your password immediately after entering the system to ensure information security.
I forgot the username and password I used for the setting. What should I do?	Please proceed as follows: <ol style="list-style-type: none"> Hold the Reset button for 4 seconds after booting to reset the password to preset. Change the username and the password.
I forgot the IP address of the camera. What should I do?	Use IP Finder to locate the IP address of the camera. Please connect the camera and the PC on which the IP finder is executed to the same hub.

IP Finder cannot find the camera.	<ul style="list-style-type: none"> When the camera still can't be located over 1 minute, re-activate the camera. Do not connect the camera to more than one router. The IP Finder will not be able to detect the camera. If the IP of PC on which the IP Finder is executed is not correctly set, the IP Finder will not be able to locate the camera. Please confirm that the IP address has been properly set. The anti-virus applications on the PC or the firewall might block the IP Finder from execution. If you cannot execute the IP Finder, please disable your anti-virus applications or firewall.
Internet Explorer does not display the camera screen correctly.	<p>Please be sure that the version of your Internet Explorer is 6.0 or later. Should you have any difficulties, please log on the Microsoft website to update your browser.</p> <p>Microsoft website: http://www.microsoft.com/windows/ie.</p>
IP Finder cannot store network parameters.	<ul style="list-style-type: none"> Do not use spaces. Use underline "_" or dash "-". Your connection might have problems. Please ensure that the network parameters and the camera connection are correctly set.
Access to Camera	
I cannot enter the login screen and camera page from Internet Explorer. What should I do?	<ul style="list-style-type: none"> The IP address of the camera is possibly being used by another PC or device. Please disconnect the network cable from the camera and execute PING to confirm if the IP address has been used. It is possibly due to the network cable. Please use the cross-line network cable to connect the PC and the camera, and see if the log-in screen appears. Be sure that the network connection and the settings are properly configured. Be sure to enter correct IP address in the Internet Explorer. If you use dynamic IP address, the address might have been changed after your last check. Internet traffic might slow down the webpage access. Please wait. Be sure that you are using http port. The default setting is Port 80. It will be converted to the private camera IP address. The port assigned for your camera might not be able to access the Internet. Contact your ISP to acquire a usable port. The proxy server might be blocking you from connecting to the camera. Do not set the proxy server. Please be sure that the default gateway address is correct. Your router might need Port conversion. Refer to the user manual of your router for details. The package filtering function of the router might have blocked the access to the external Internet. Refer to the user manual of your router for details. If you are using DDNS, please remember to set the default gateway and server address. If none of the procedures above is working, please reset to the factory default values and re-install. If the problem still persists, there might be some problems with the product. Contact the dealer who sold you the product for more help.

No image appears on the main control screen.	<ul style="list-style-type: none"> When using PC to connect to the camera for the first time, a security warning window will tell you that you need to download the ActiveX control. When you are using Windows 2000 or Windows XP, you might need a properly- authorized user account to install the application Network traffic might slow down the video streams. If the video is extremely slow, select a lower resolution for a lower bandwidth requirement.
Check whether the Active X control of the camera has been installed in your computer.	Select C:\Windows\Downloaded Program Files to check if the file " Media Viewer Class " is registered. The status bar should indicate the file has been installed. If you do not see this file, be sure that your Internet Explorer security is properly set (the default value is moderate). Re-connect to the camera main page and download the file again. Incomplete download or installation of the camera ActiveX control is the major reason for this problem. Check the security setting of your Internet Explorer. Close and re-open Internet Explorer, and enter the main page to see if you can log in.
Internet Explorer displays the following message: Downloading the ActiveX control is prohibited under the current security setting."	Change the IE security setting to allow downloading unsigned ActiveX control. IE→Tools→Internet Options→Security→Custom Level. Change "Inactive" to "Tips" for the ActiveX control if required.
The camera can operate only in the LAN rather in the Internet environment.	<ul style="list-style-type: none"> A firewall mechanism might have been activated. Check the setting of your system or ask your network administrator. To access the camera from the Internet, you may need to change the setting of the firewall. Make sure that your camera does not conflict with other servers on the same LAN. Check the router and make sure that its setting allows it to access your camera from the Internet.
The number of frames transmitted are less than the defined value.	<ul style="list-style-type: none"> Congestion of the network or objects of the image may affect the number of frames transmitted. The number of frames may be less than the defined value when they are transmitted via a congested network. The number of frames transmitted may become less when multiple users are viewing the video stream. The network hub might be another reason for this problem, especially when multiple camera video streams are viewed simultaneously.
When the audit function is activated, the video streaming area becomes black or the transmission becomes slower.	<ul style="list-style-type: none"> When you connect your PC to the camera, no sufficient bandwidth is available to support more frames with the current resolution of video streams. Reduce the resolution to QCIF(176x144) or CIF (320x240) and deactivate the audio function. The audio signal needs 32 to 64 kbps of your bandwidth. You can deactivate the audio function to improve the image quality. Your Internet service may have not sufficient bandwidth to support audio transmission.
Images cannot be transmitted via e-mail or FTP.	<ul style="list-style-type: none"> Make sure the IP address of the gateway and domain server (DNS) have been defined correctly. Where FTP still fails, contact your ISP or network administrator to check the FTP server.
I can't control the camera to move up, down, right, left or to the center or preset point.	<ul style="list-style-type: none"> When communication to the camera stops, click "Refresh" on your IE browser to refresh the transmission. It might be that other users are controlling the movement of the camera. The horizontal/vertical movement of the camera has reached its limit. The horizontal/vertical remote control option of the camera might have been deselected.

I can't control the camera to move up, down, right, or left smoothly.	Delay might occur when you are accessing a video stream and remotely moving the camera horizontally. Where significant delay is identified when you move the camera horizontally or vertically deactivate the audio streams and/or reduce the size of the video stream...
Camera Image Quality	
Camera has a problem focusing.	<ul style="list-style-type: none"> The lens might be contaminated with dust, fingerprints, or other dirt. Use a special cleaning cloth to clean the lens or adjust the focus manually. Focusing might be impossible in some cases. If the object is too close to the lens, move it away from your camera.
Color of the video stream is too deep or light.	<ul style="list-style-type: none"> Please confirm that the image you are watching has the best quality. Adjust the setting of your display card (color quality) to at least 16 bits (24 bits or more are recommended). Incorrect camera video setting. You may need to adjust some parameters, such as brightness, contrast, color, and saturation.
Video stream flashes.	<ul style="list-style-type: none"> Incorrect power cord frequency may cause flashing of the image. Confirm that your camera uses NTSC or PAL system. The image flashes if the objects are black. In this case, adjust the illumination brighter around your camera.
This is noise problem during transmission of the image.	Noise may be produced if you install your camera at a very dark place. Adjust the illumination around your camera.
Others	
How to reboot my camera?	If you only need to re-boot the system and don't want to change any setting, enter the Setting page and select the Reboot option at the bottom of the screen. The system will reboot automatically.
I can't replay recorded files.	Confirm that you have installed Microsoft®'s DirectX 9.0 or above and use Windows Media Player 9 or above.