



Hardware Installation


Package Contents

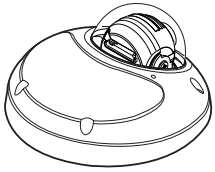

Mini Dome Camera

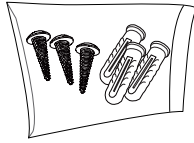

Screw Pack (M4 x 25mm)
(Self-tapping screws and anchors)

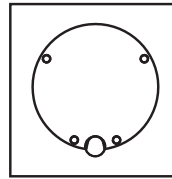


The mounting position sheet



A hexagonal wrench φ1.5mm

1 Install Screw Holes


Put the hole bitmap on the ceiling

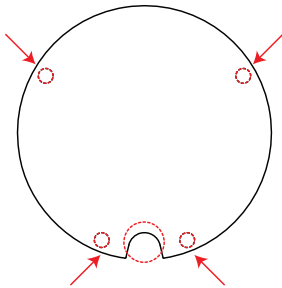


Suggestion:
Hole size $\phi 6\text{mm}$
Depth 30mm

2 Start the Installation

Loosen the screws holding the cover

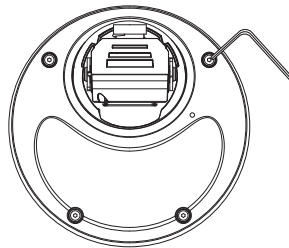


2-1 Remove the Screws


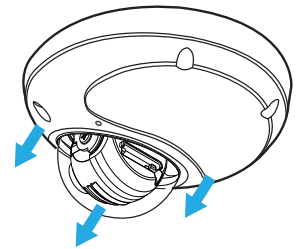


3 Stabilize the Hardware

Use the base plate to mark out the position for the mounting screws.

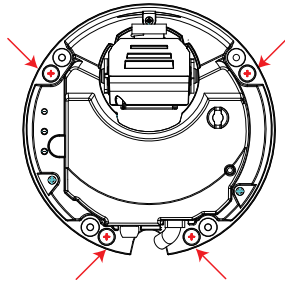


3-1 Adjust the Lens Angle

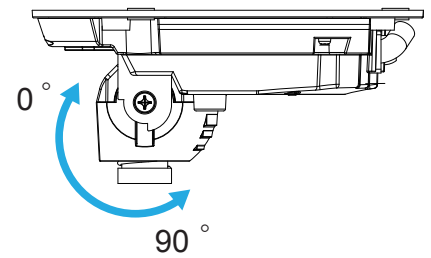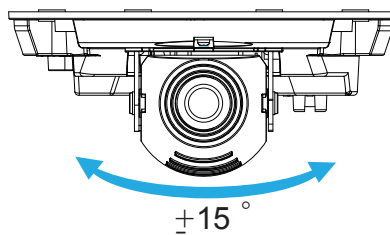


4 Stabilize the Cover

Put the cover back on the hardware

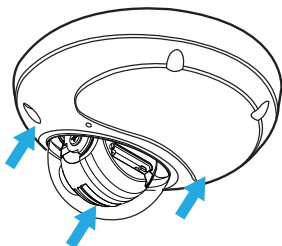

3-1 Lock the the Screws Holding the Cover

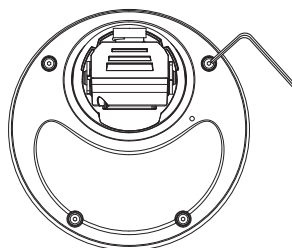

5 Complete the Installation

